

CIAO WORKSHOP AAS235/HONOLULU 2020 JAN 3-4

CHANDRA HIGH-RESOLUTION SPECTRA

VINAY KASHYAP (CXC/CFA)

OUTLINE

GOAL: EXTRACT AND ANALYZE CHANDRA GRATING SPECTRA

1. Theory

- Braggs' Law, Rowland Circle, Orders

2. Hardware

- [LETGS|HETGS]+[ACIS-S|HRC-[SI]]

3. Pipeline


- `tgdetect`, `tg_resolve_events`, `tg_create_mask`, `tgextract`

4. Analysis

1. THEORY


BRAGGING ON THE X-WAVES

$$n\lambda = 2d \sin\theta$$

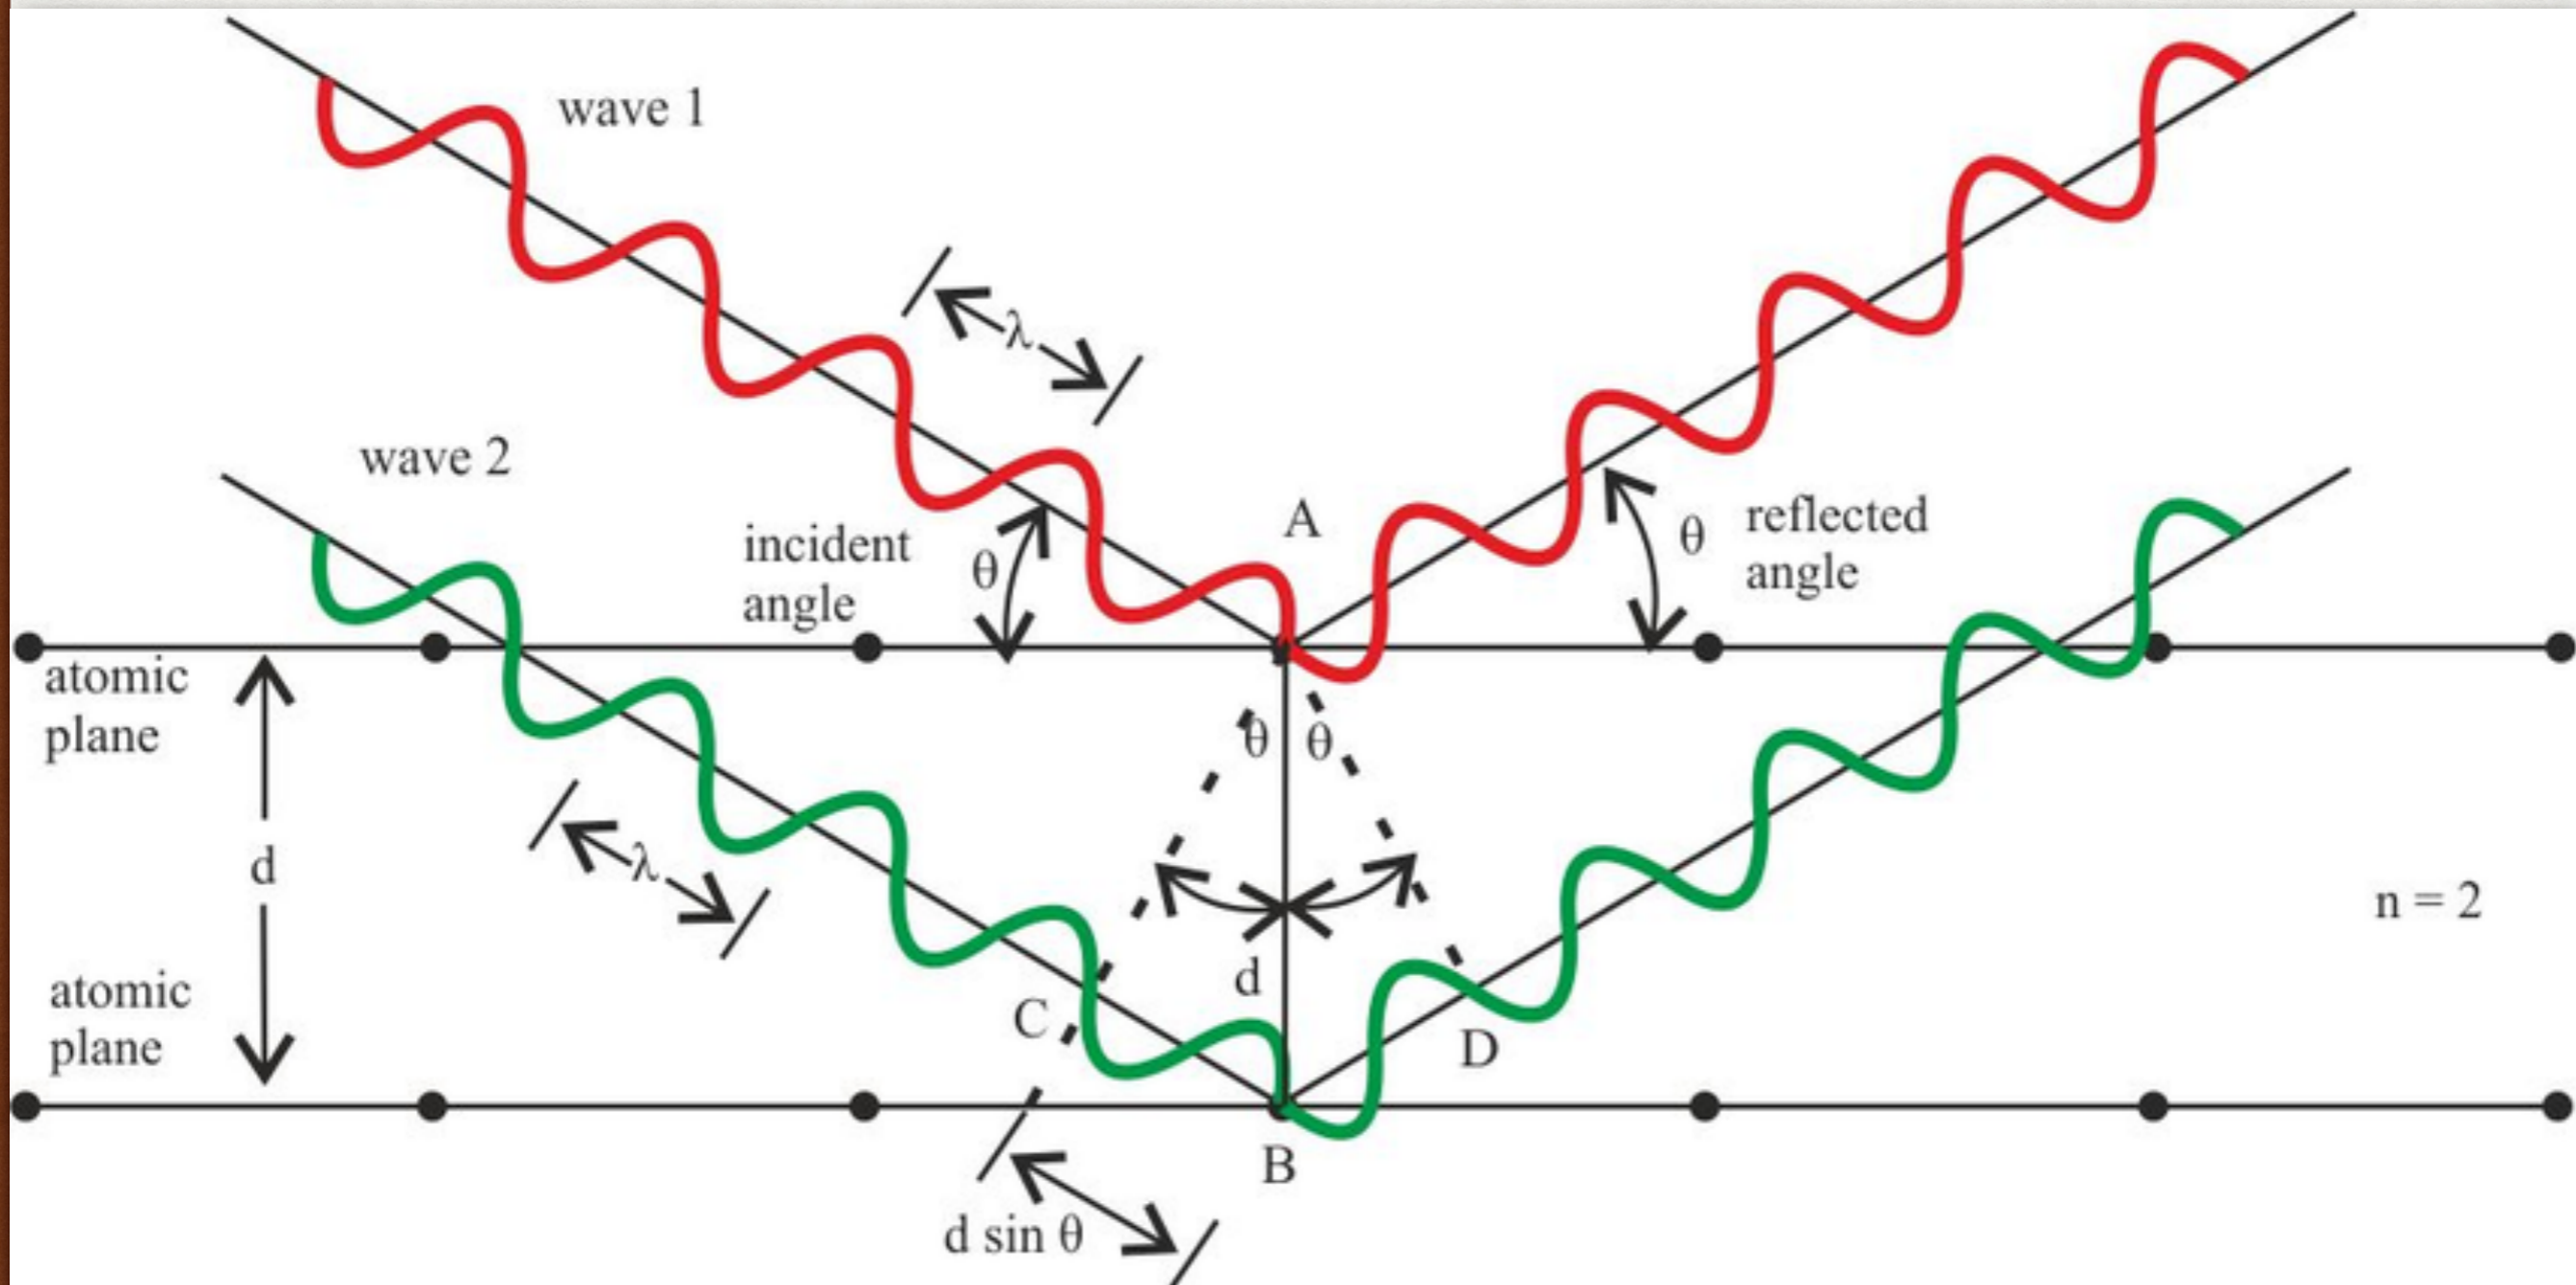


1. THEORY

ROWLAND CIRCLE

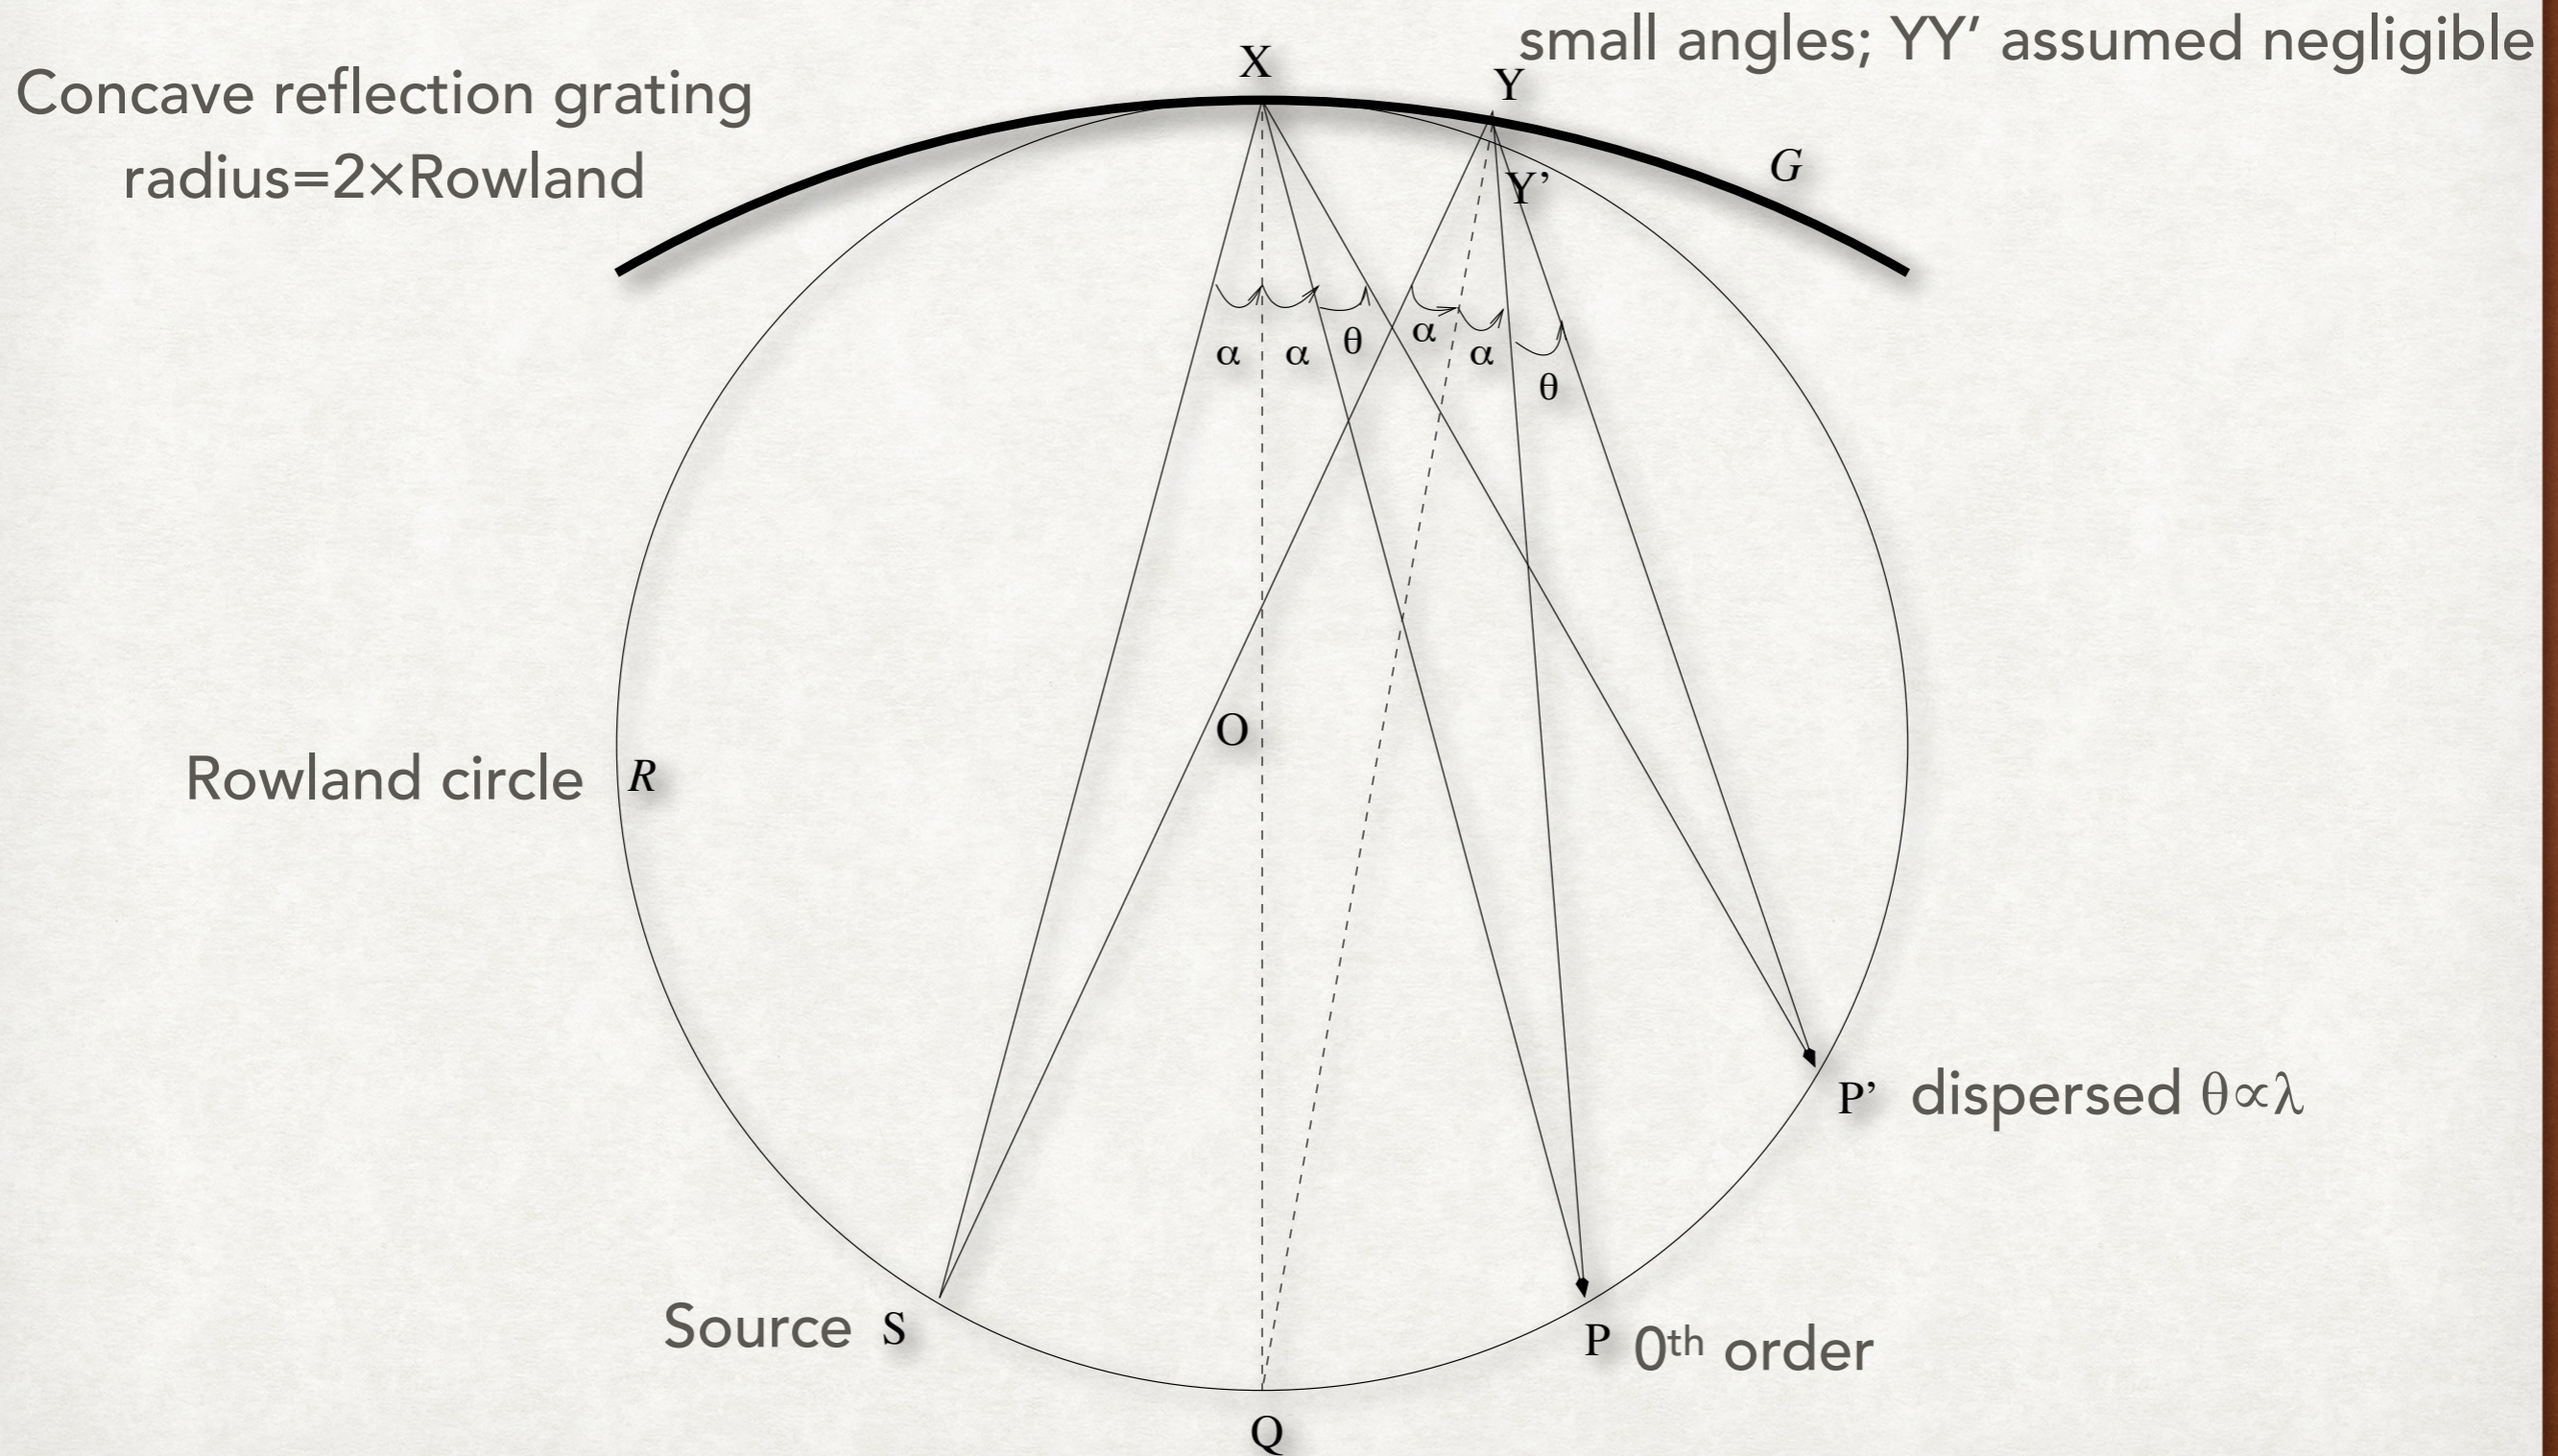

1. THEORY

TRANSMISSION GRATING GEOMETRY

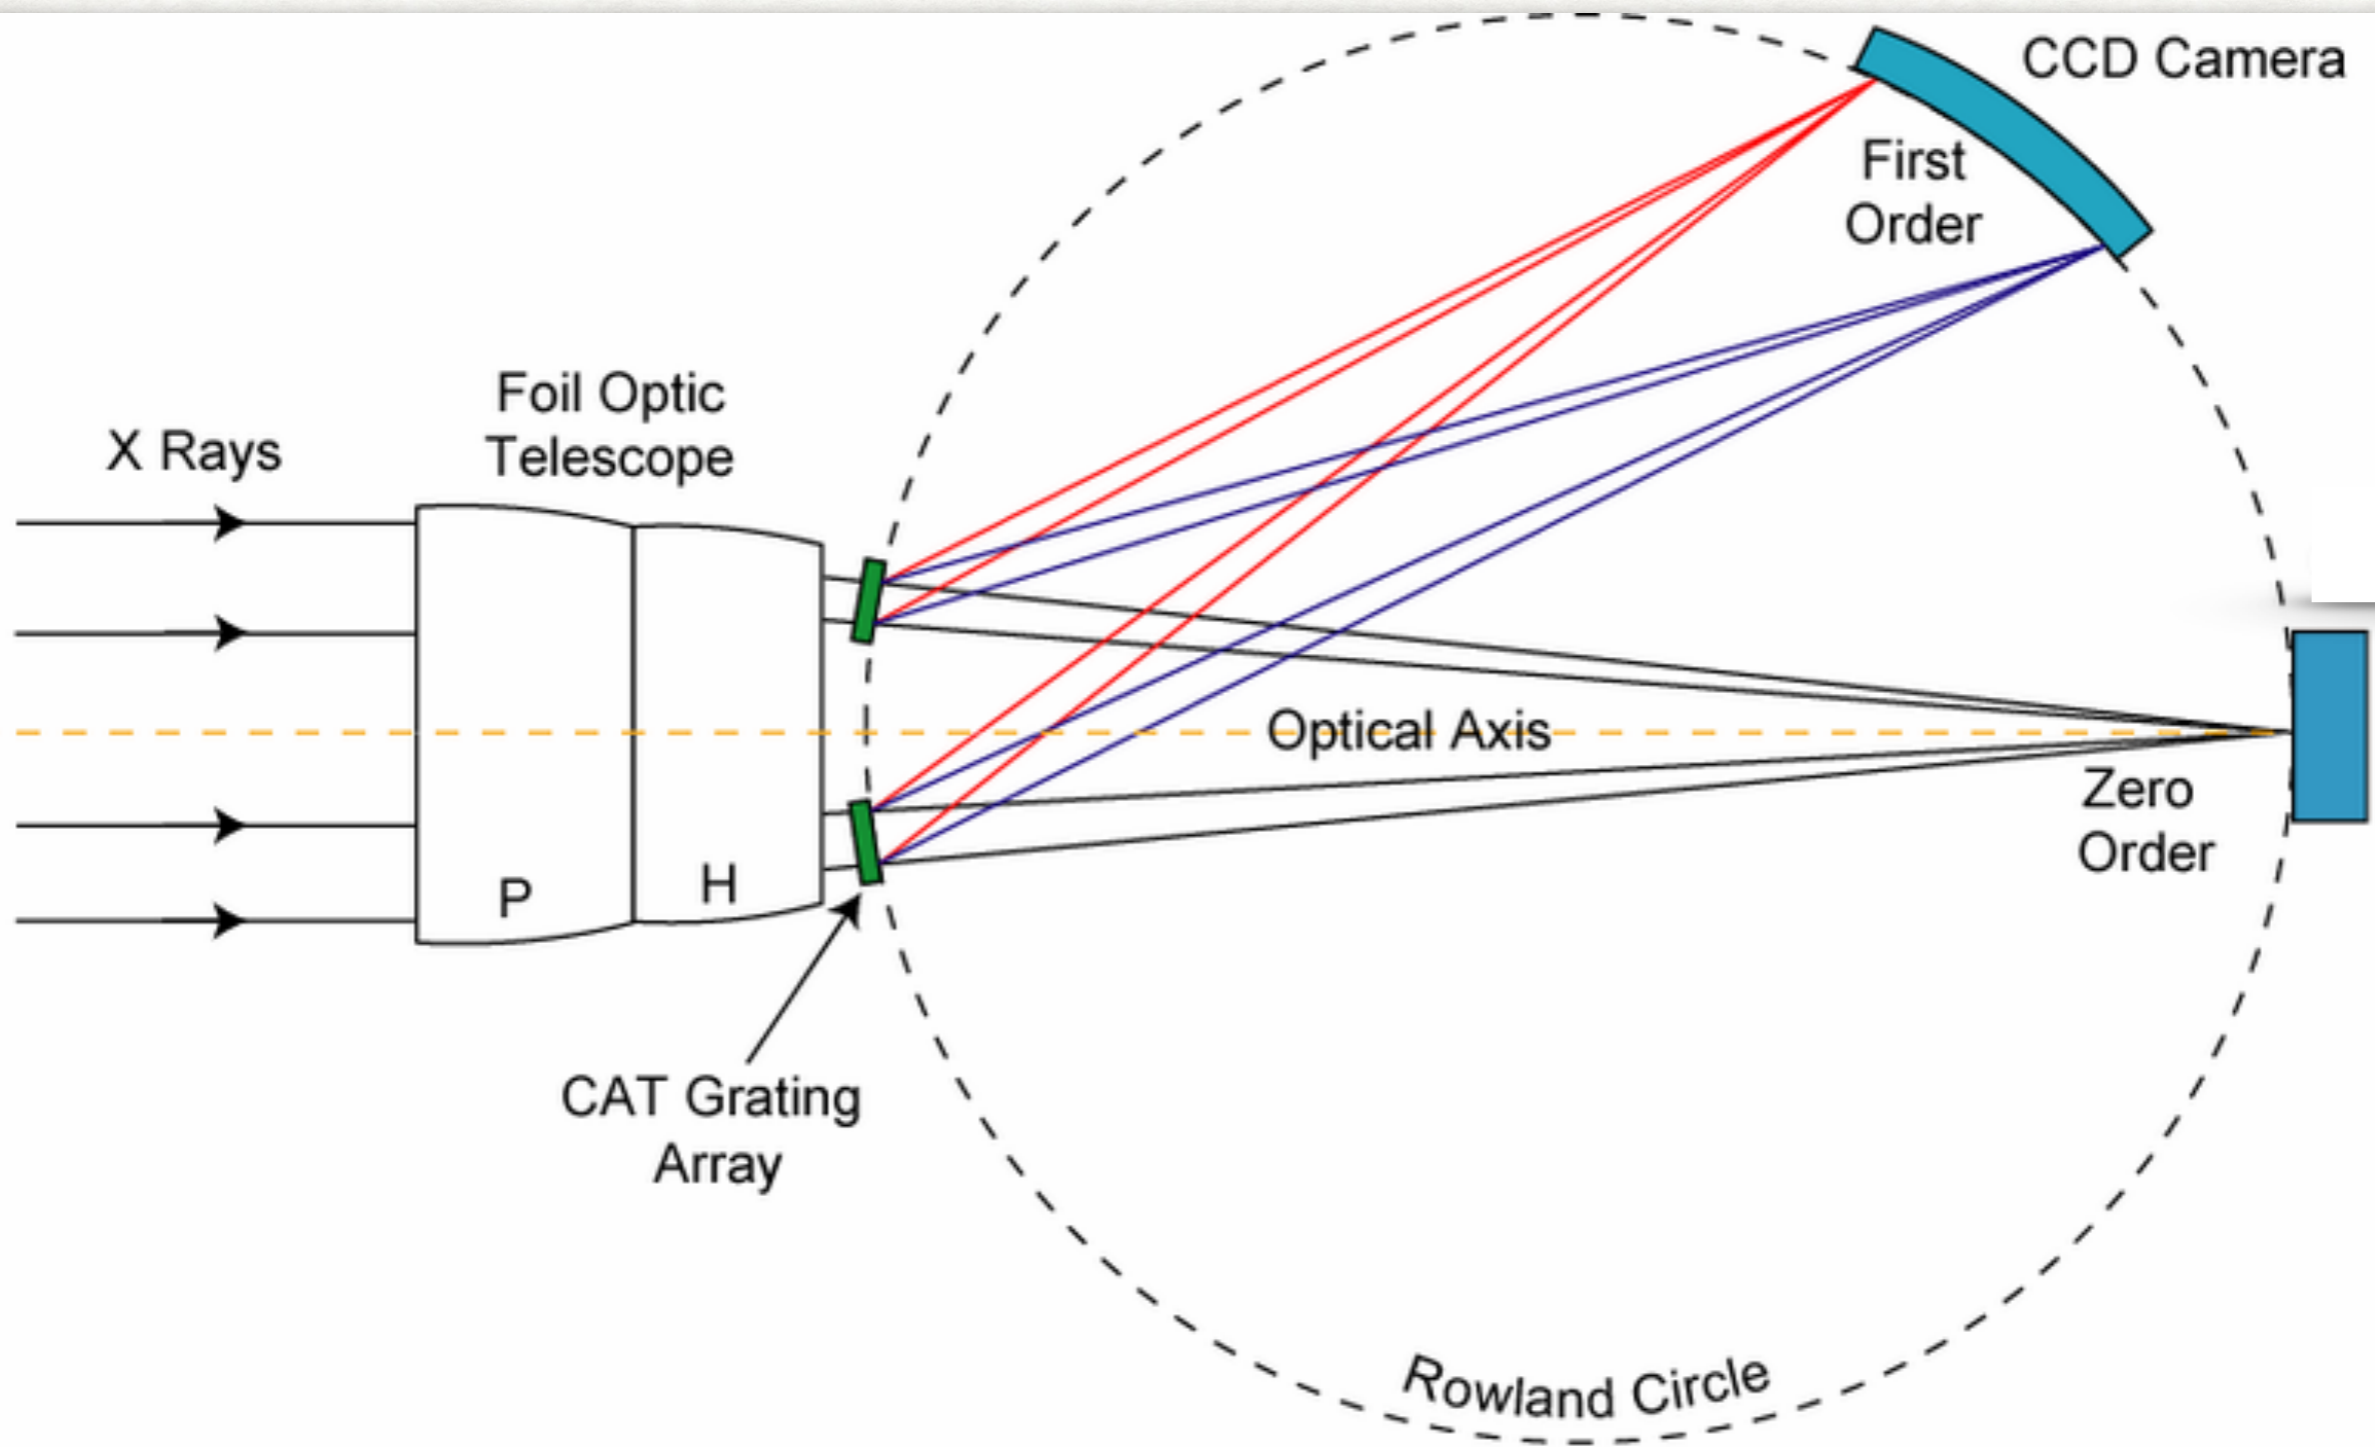

1. THEORY

ORDERS AND DISPERSION RELATION

- You can measure the distance of a photon from the zeroth order in the detector plane and translate that distance to $n\lambda$
- If there is enough intrinsic energy resolution in the detector, you can separate the orders and remove the degeneracy in λ
- In the small angle approximation at which most gratings operate, distance along the detector,

$$\textit{dispersion distance} \propto \delta\theta \propto \lambda$$

- Resolution is limited by the size of the 0th order image, with

$$\delta\theta \propto \textit{PSF-width} \propto \delta\lambda$$

Along the Rowland circle, this is fixed, so


$$\delta\lambda \approx \textit{constant} \Rightarrow \textit{Resolution } \lambda/\delta\lambda \uparrow \text{ as } \lambda \uparrow$$


2. HARDWARE

HETGS


- High-Energy Transmission Grating Spectrometer
 - Two gratings in one: Medium Energy Grating (MEG) for outer mirror shells, and High Energy Grating (HEG) for inner shells
- The facets are tilted ($+4.7^\circ$ MEG, -5.2° HEG), leading to two arms which intersect at the 0th order
- The MEG period is $\approx 2\times$ HEG's, so wavelength coverage of MEG is double that of HEG, with half the resolution
- Primary detector is ACIS-S, optionally also HRC-I (but as yet unsupported)
- Chandra POG Chapter 8:

<http://cxc.harvard.edu/proposer/POG/html/chap8.html>

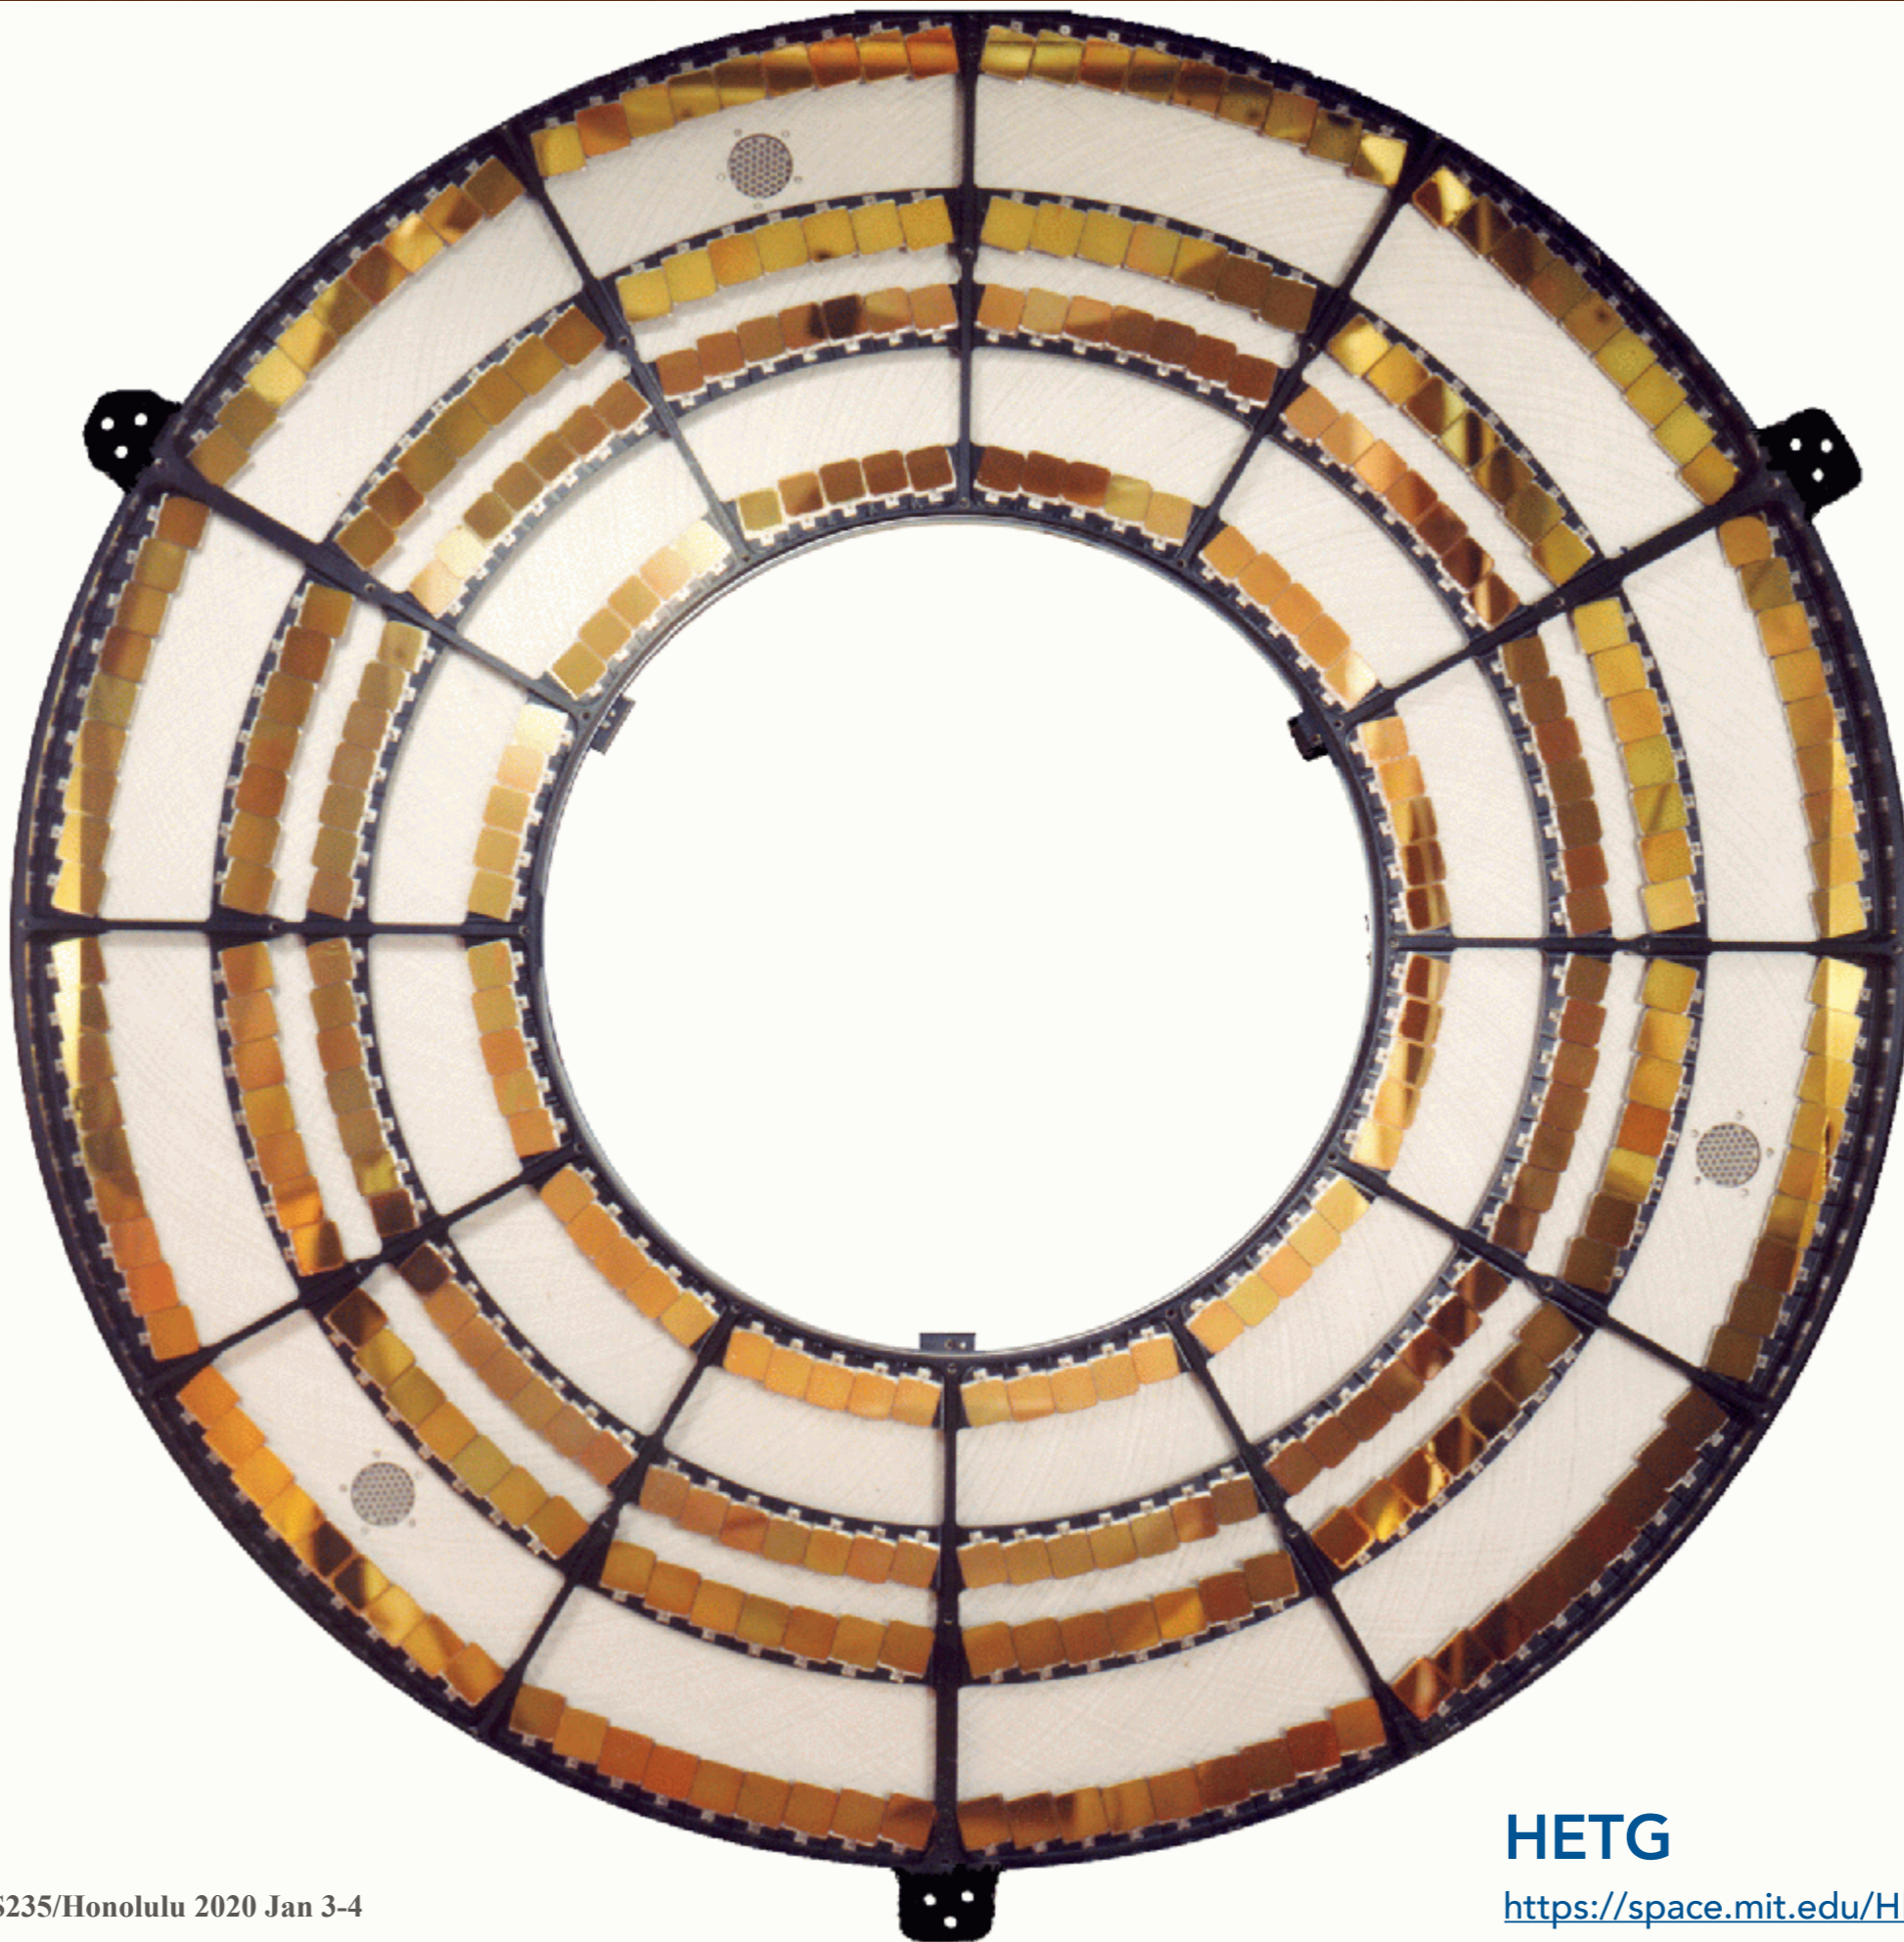

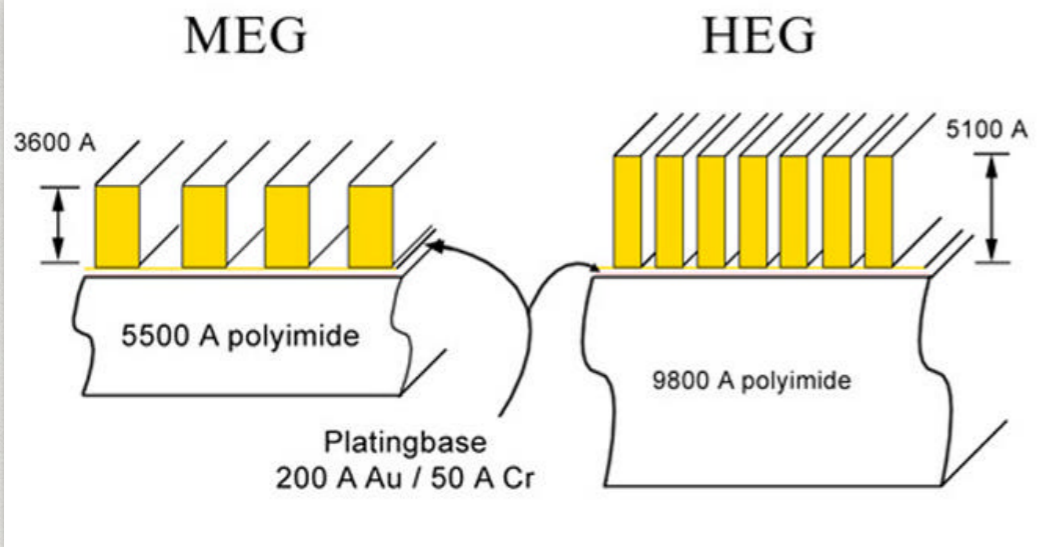


Invar grating frame.

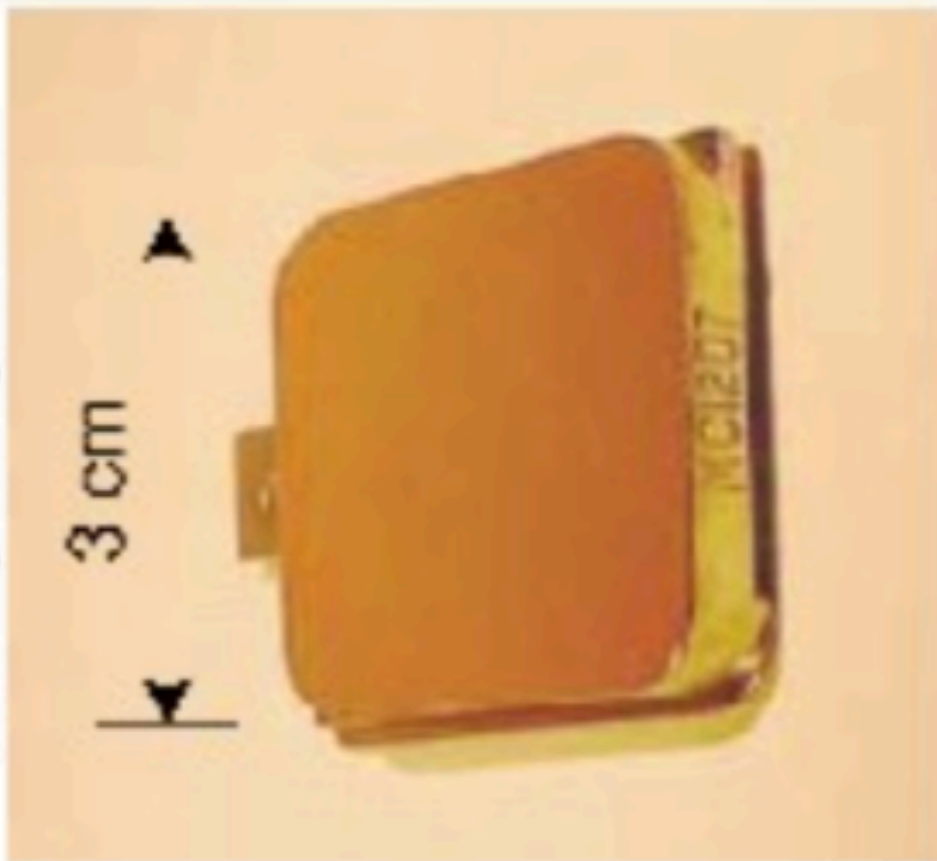


HETG facets and bars

https://space.mit.edu/HETG/hetg_info.html

Scanning electron micrograph of gold grating.

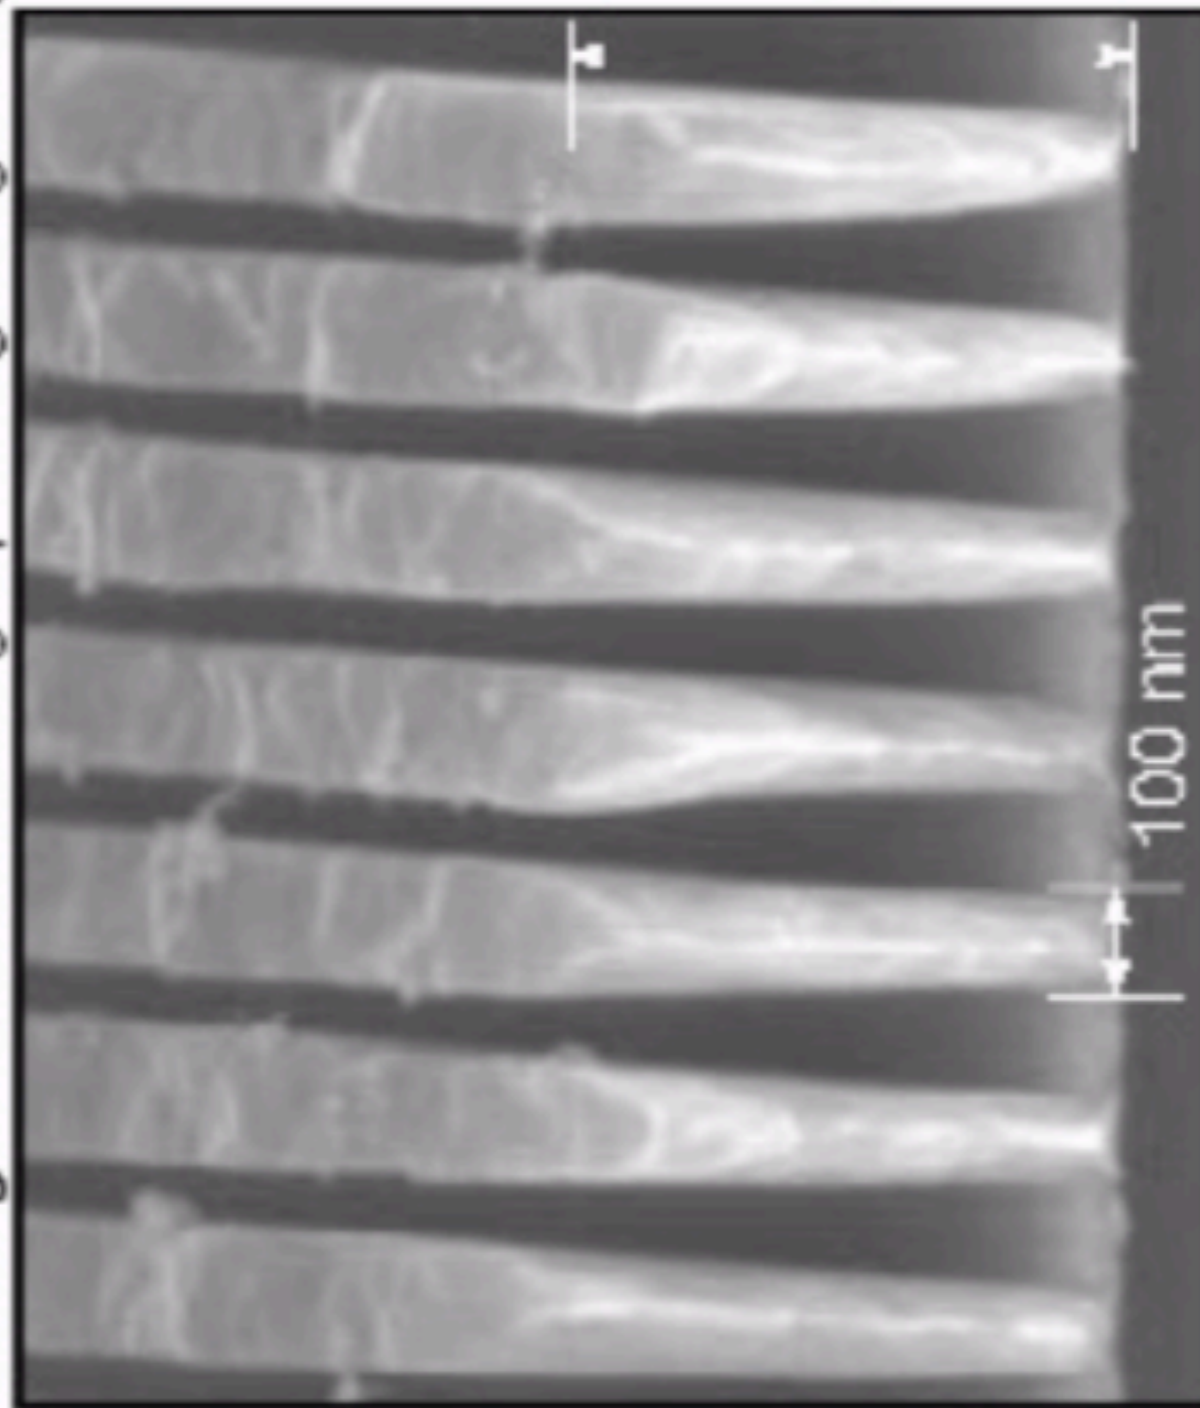


HETGS schematic and footprint on ACIS-S

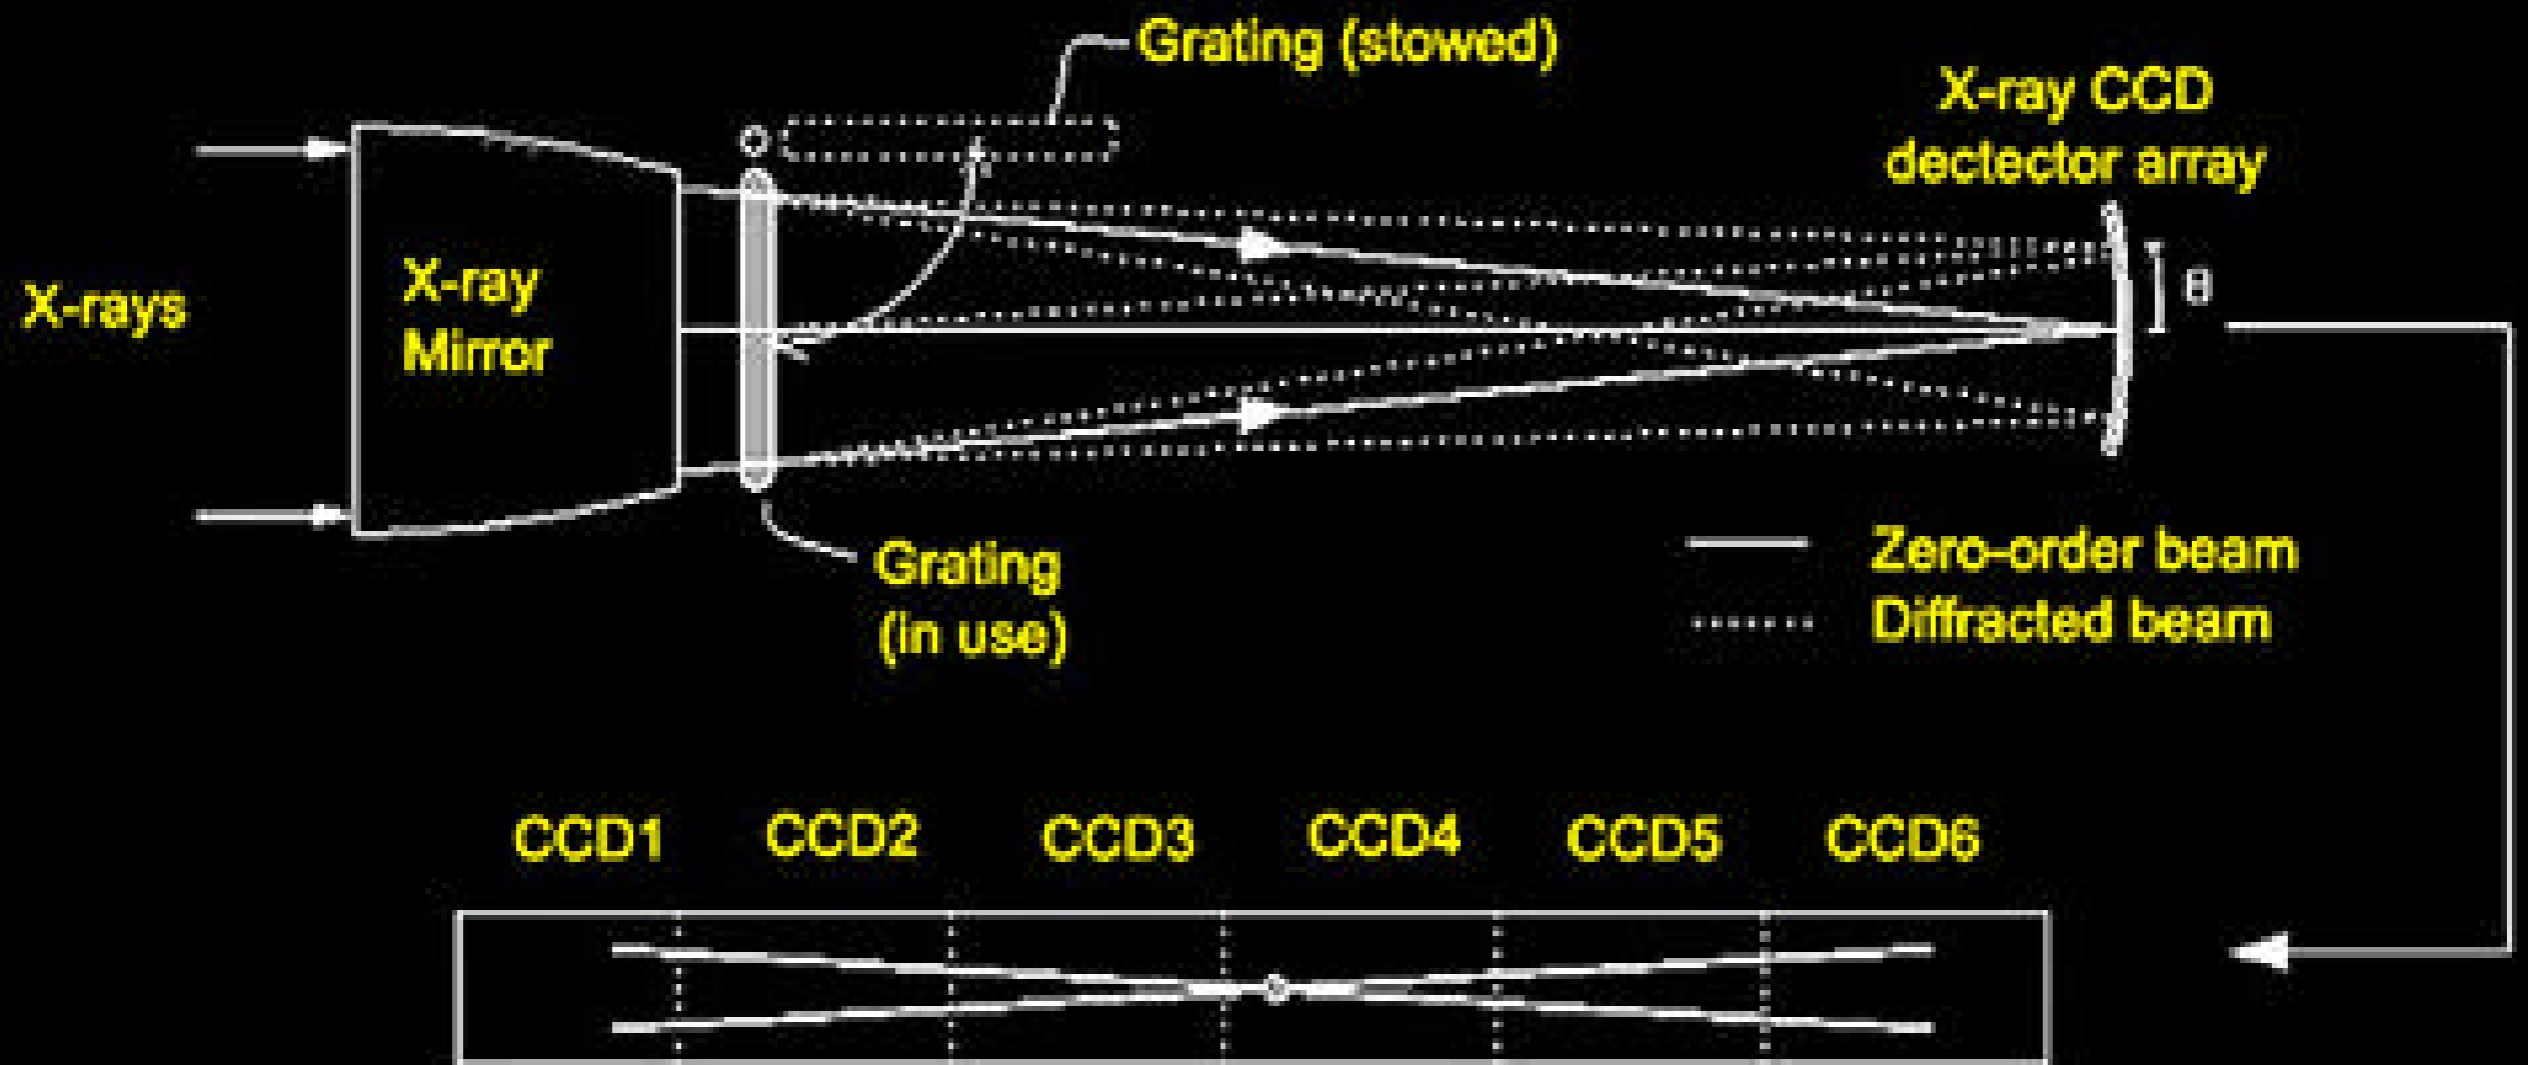

2. HARDWARE

LETGS




- Low-Energy Transmission Grating Spectrometer
- The Low Energy Grating (LEG) period is $\approx 2.5 \times$ MEG's, so resolution is lower, but wavelength coverage is larger
- Primary detector by usage is HRC-S, optionally also ACIS-S and HRC-I
- Chandra POG Chapter 9:
<http://cxc.harvard.edu/proposer/POG/html/chap9.html>

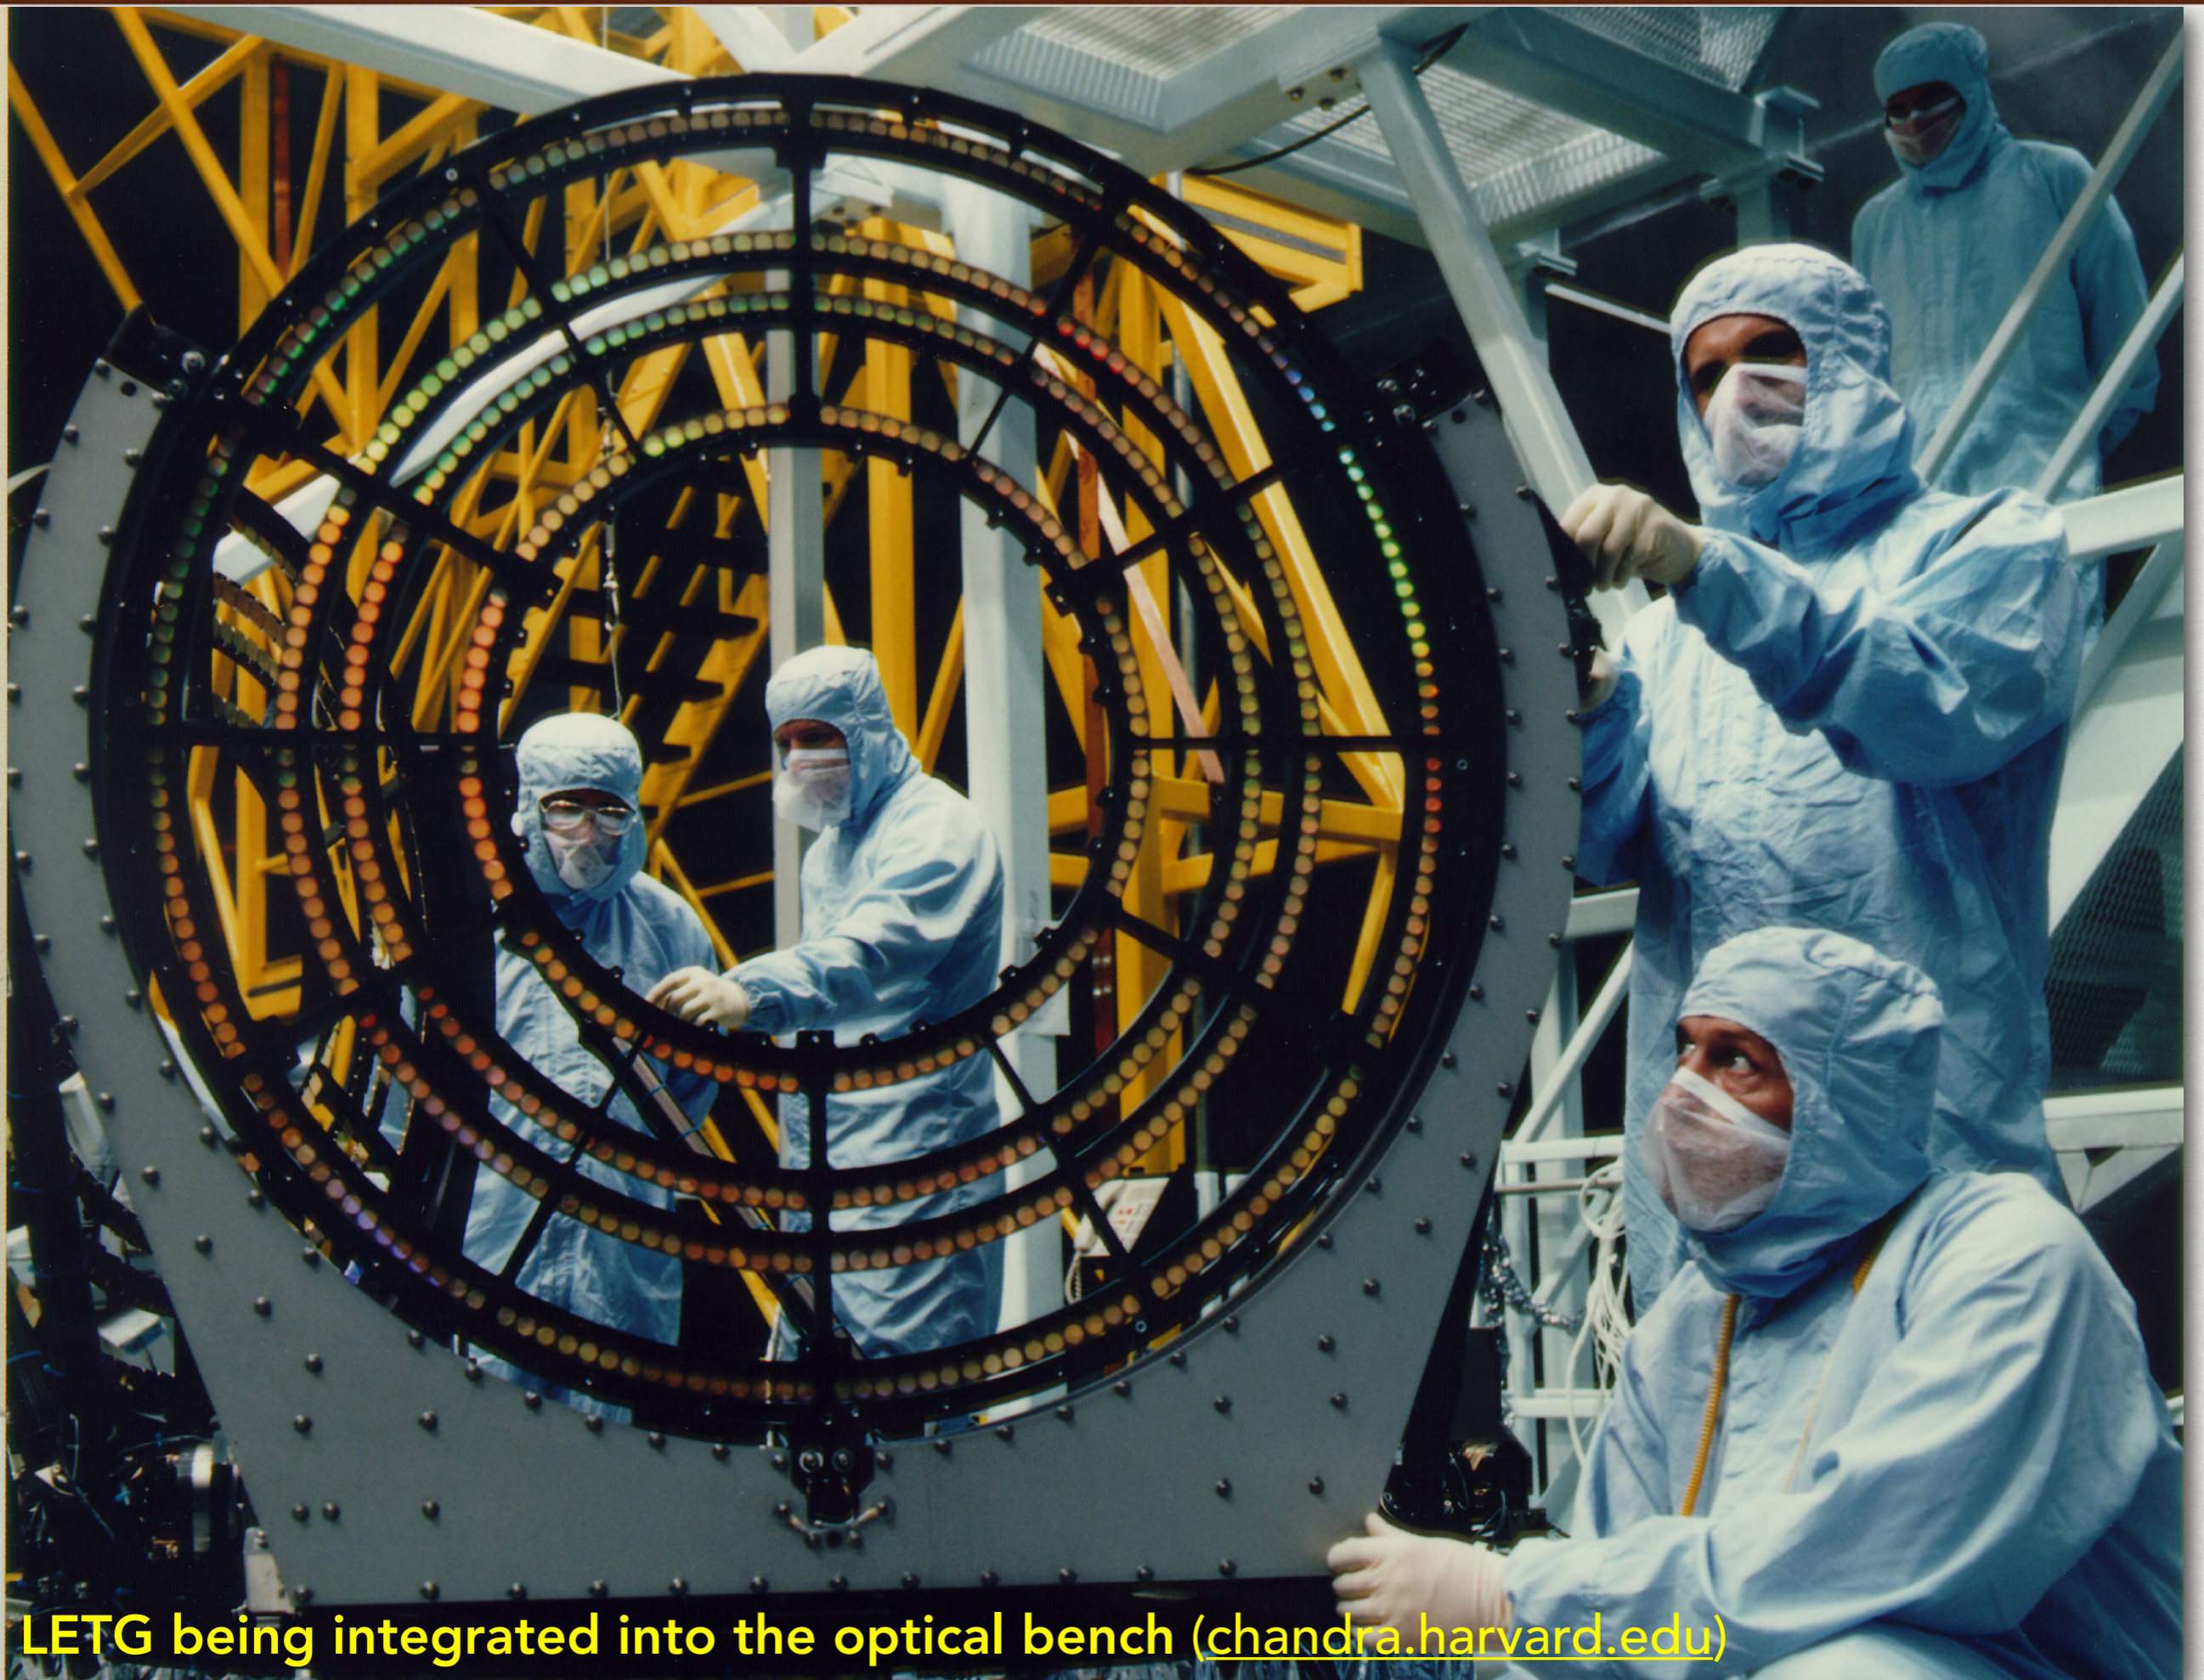

LETG being integrated into the optical bench (chandra.harvard.edu)



LETG close up (chandra.harvard.edu)

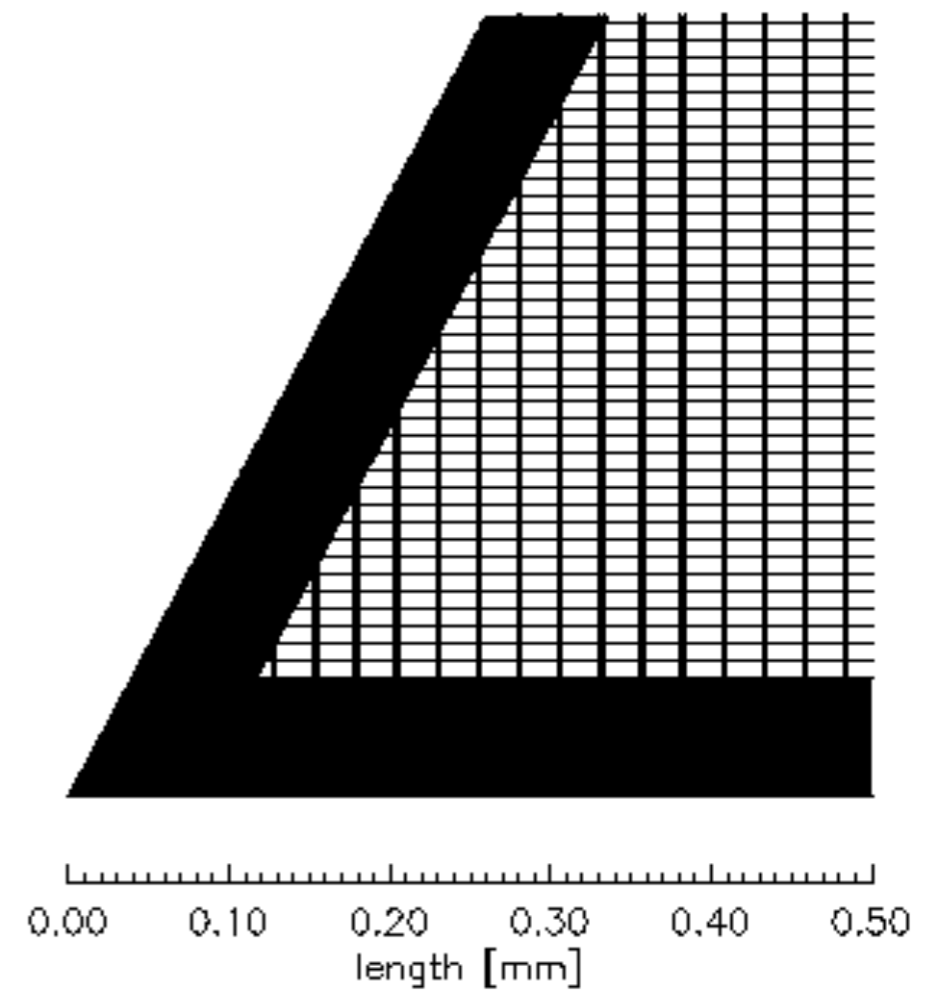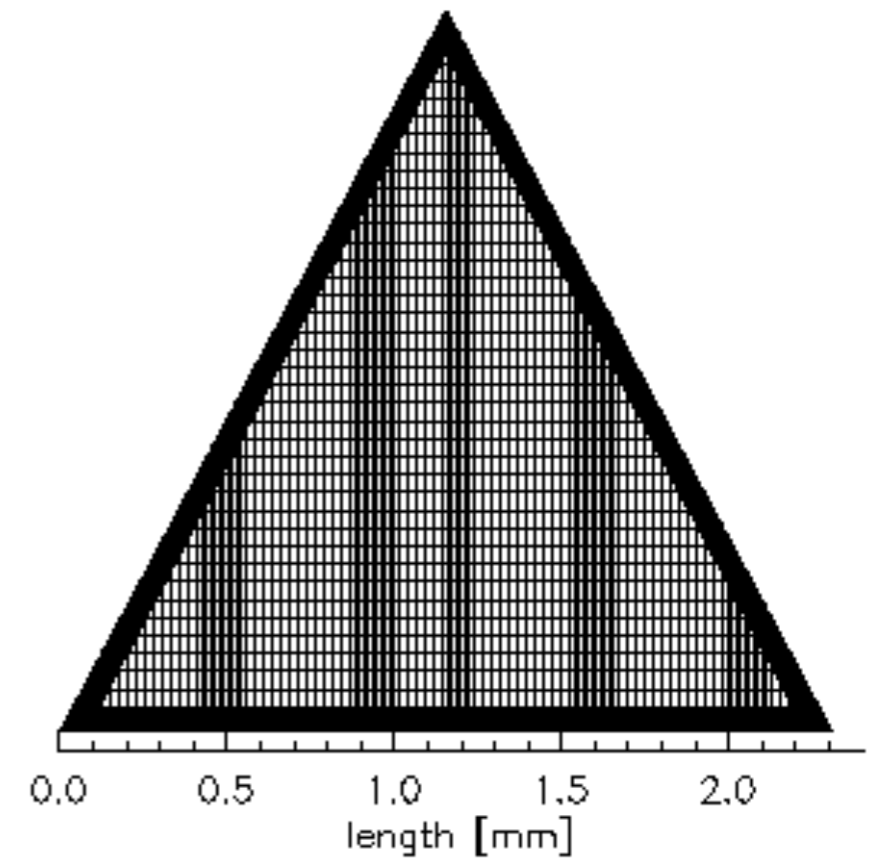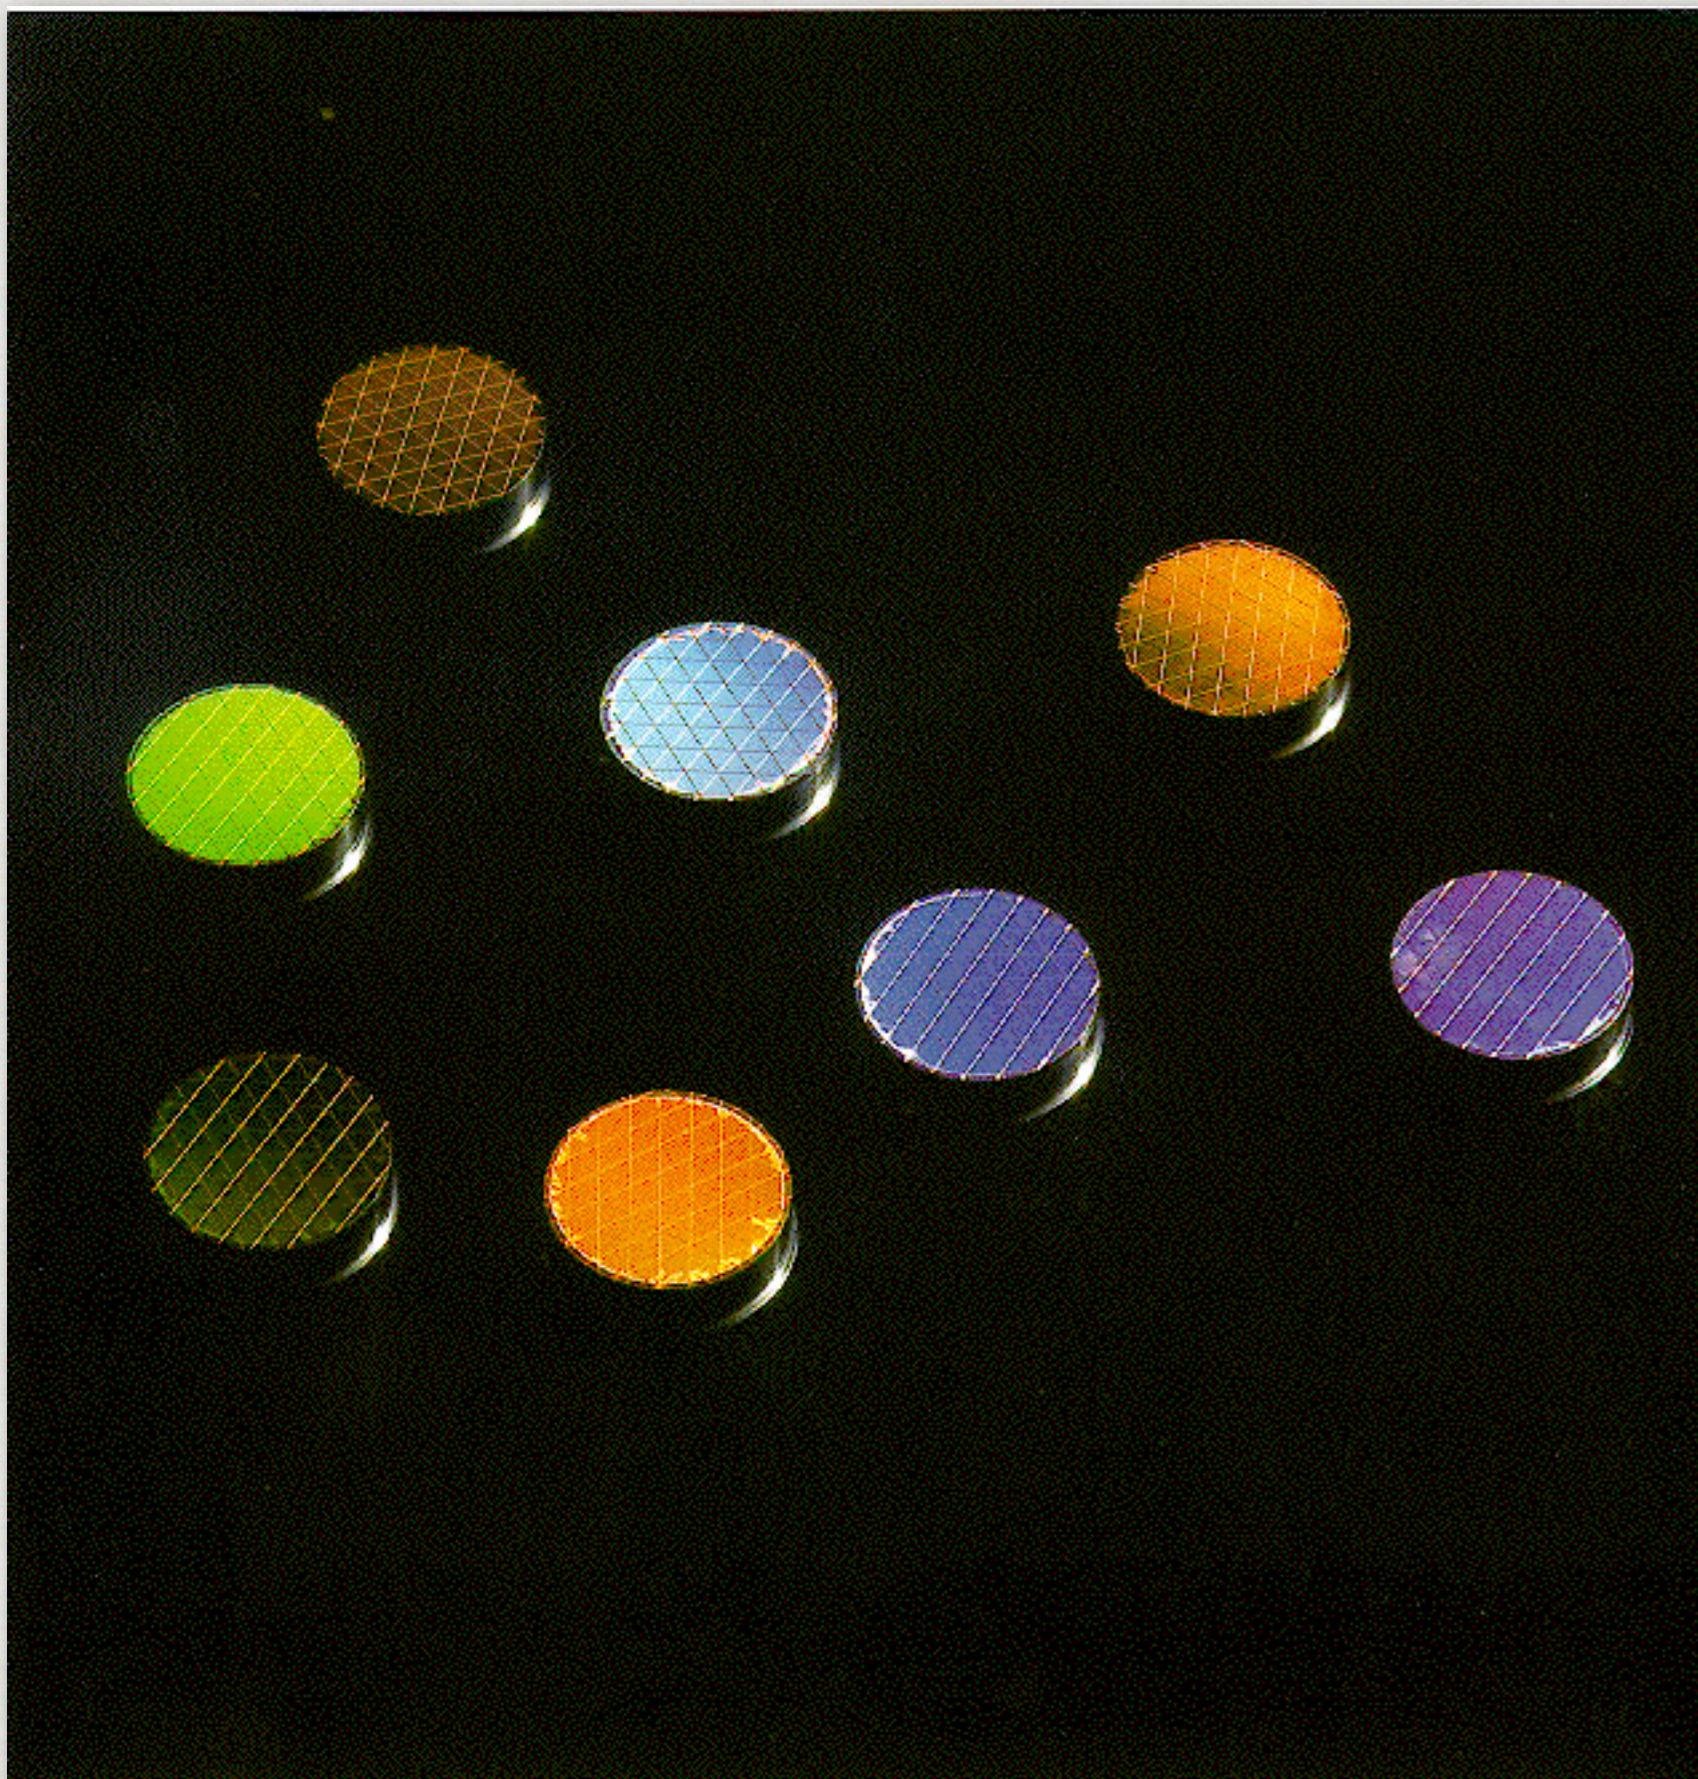


LETG gratings: wires, coarse, and fine support

<https://www.sron.nl/experimenten-50-jaar-ruimteonderzoek-2820/i-letg>

2. THE HARDWARE


ACIS-S

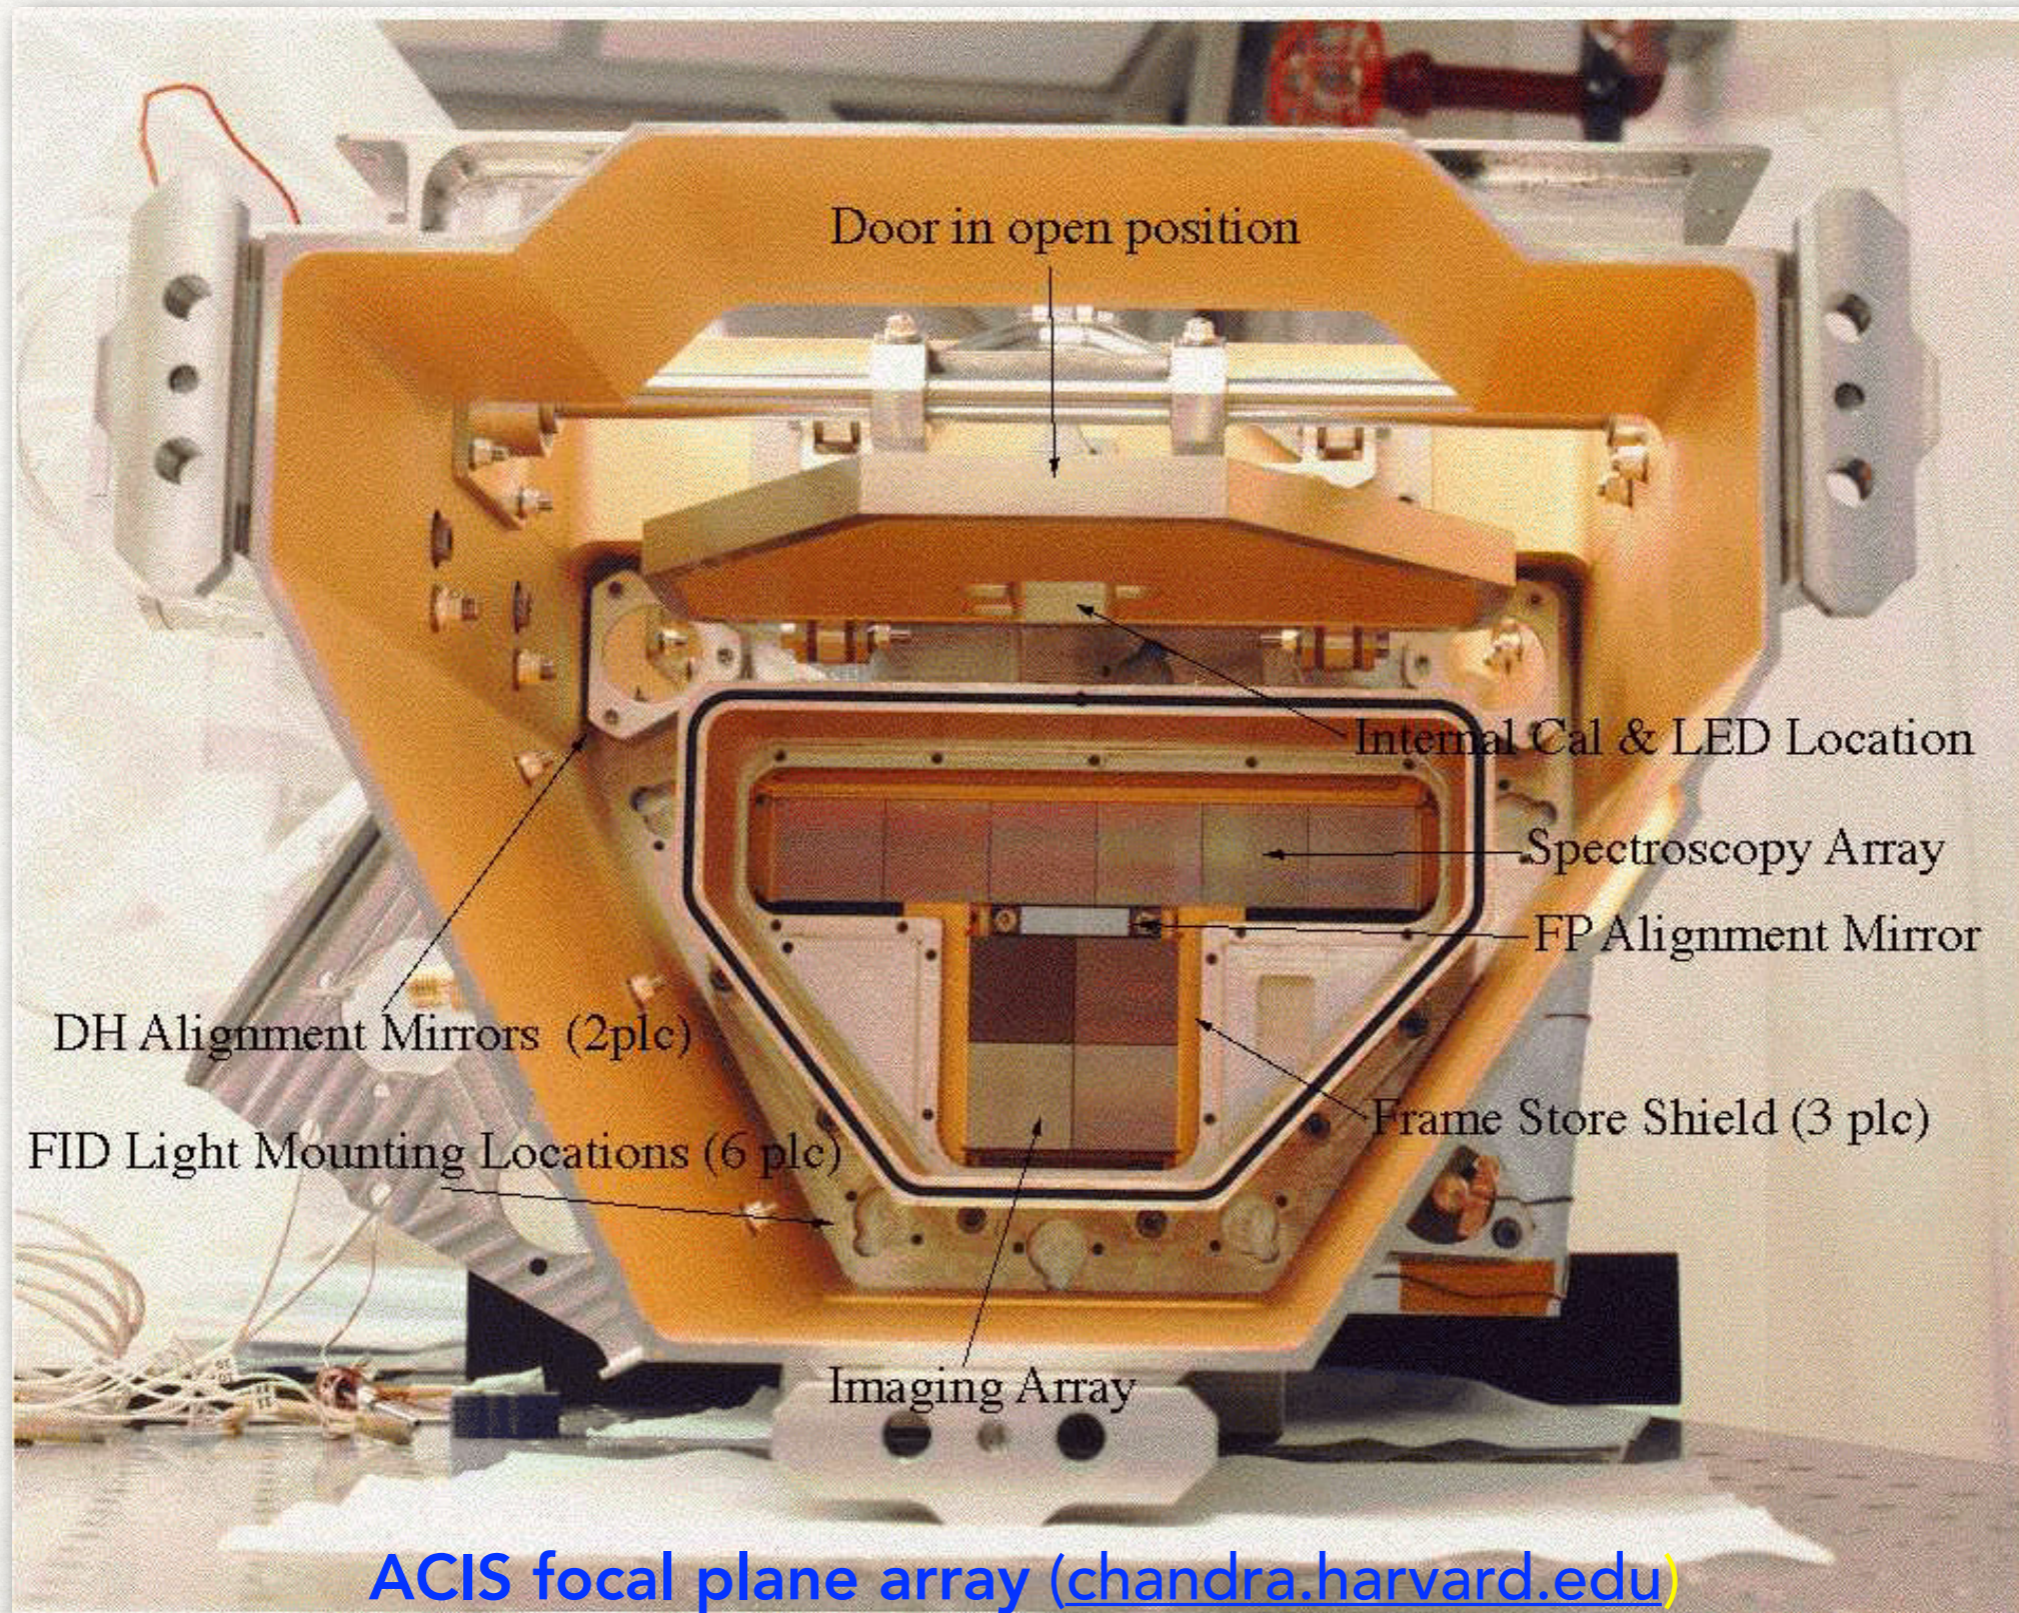

2. THE HARDWARE

HRC-S & HRC-I


Calibration Source

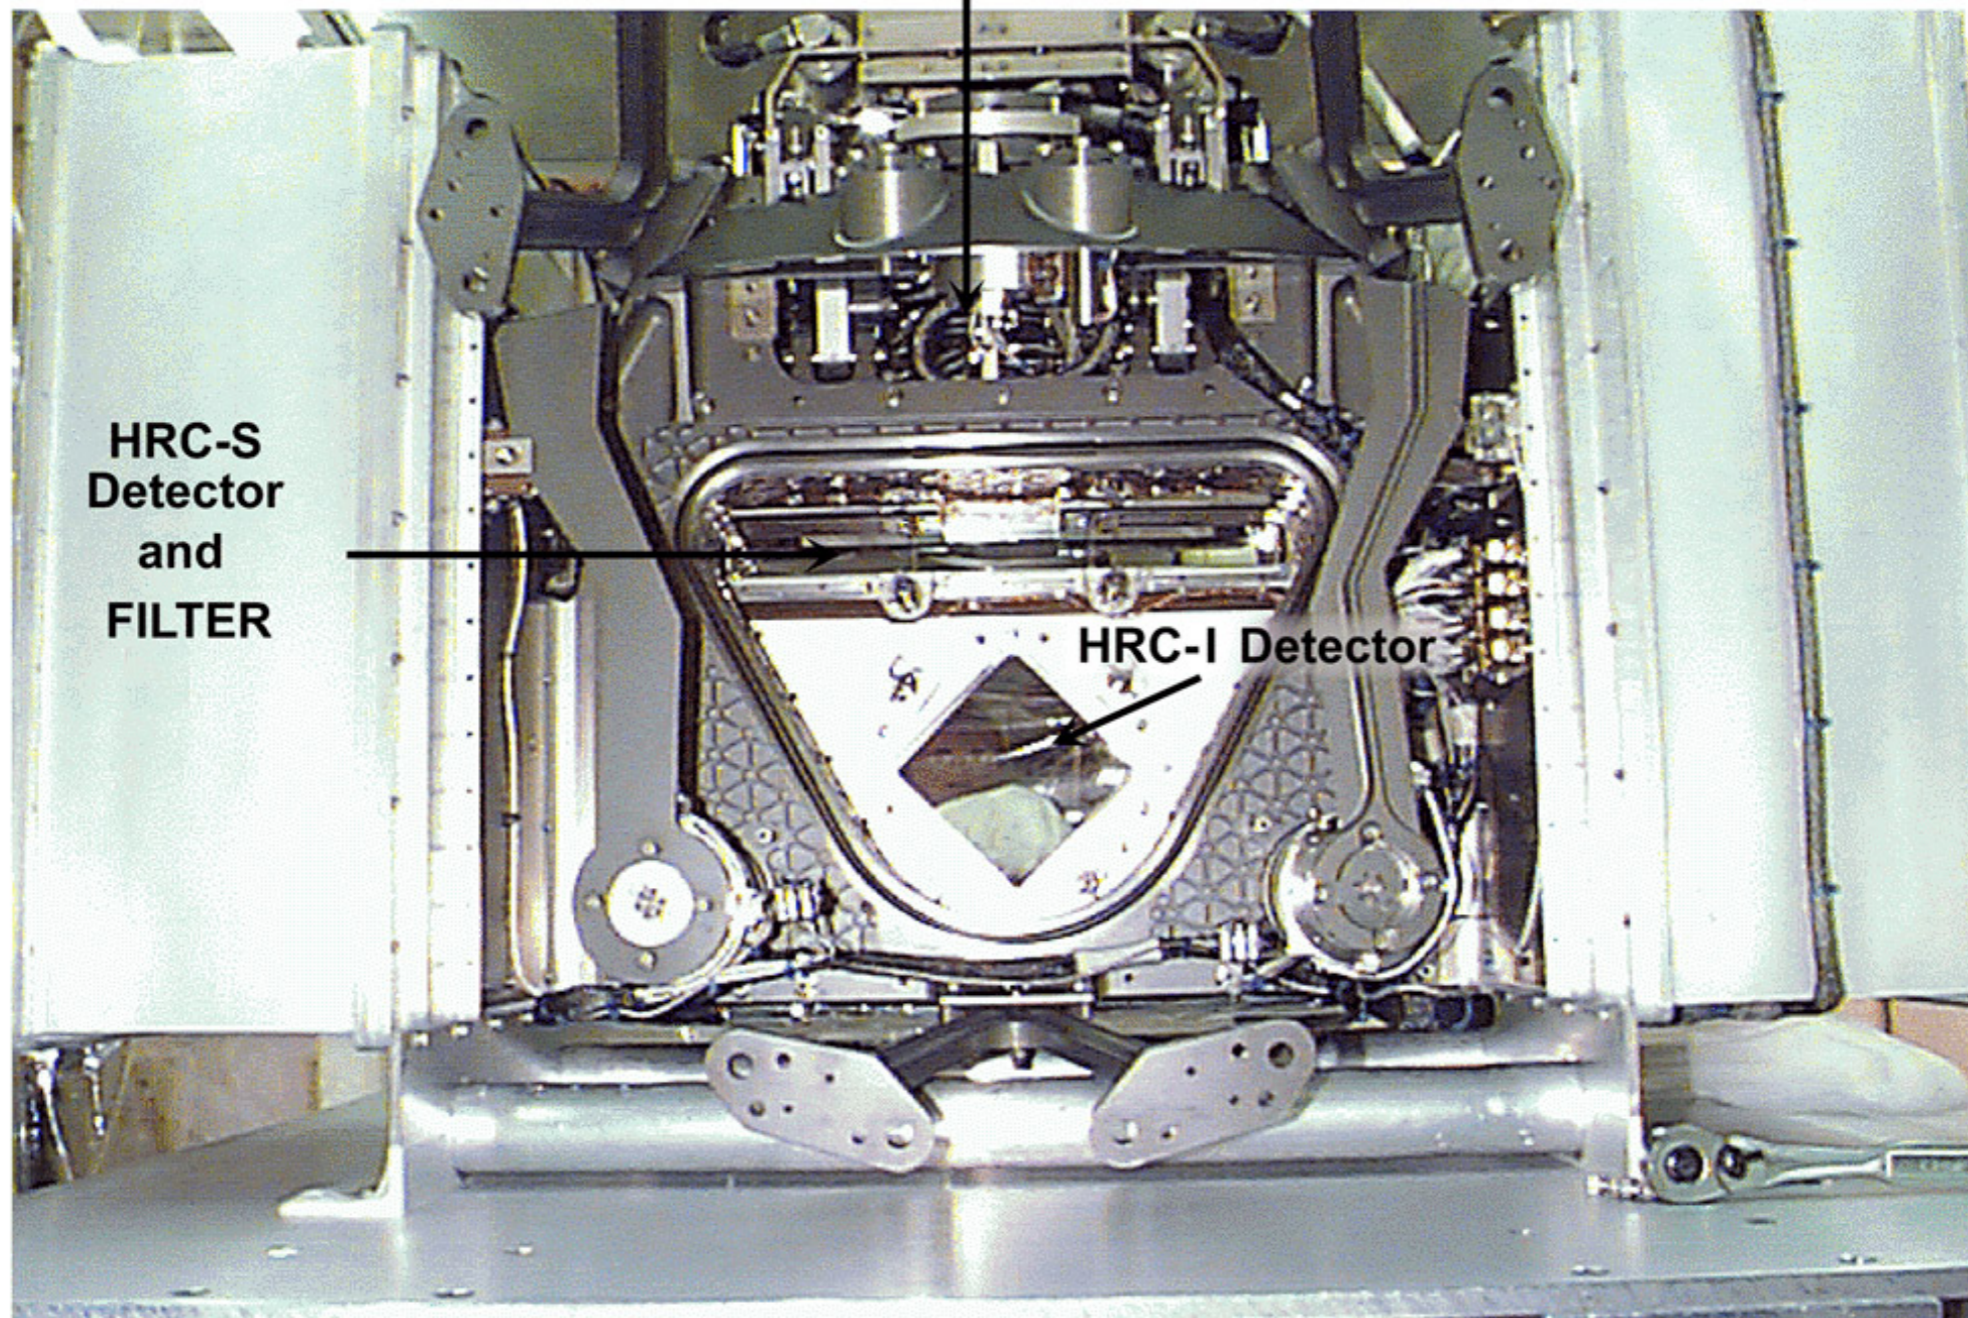

HRC focal plane array (chandra.harvard.edu)
Looking into the HRC Vacuum Housing

2. HARDWARE

HETGS+ACIS-S

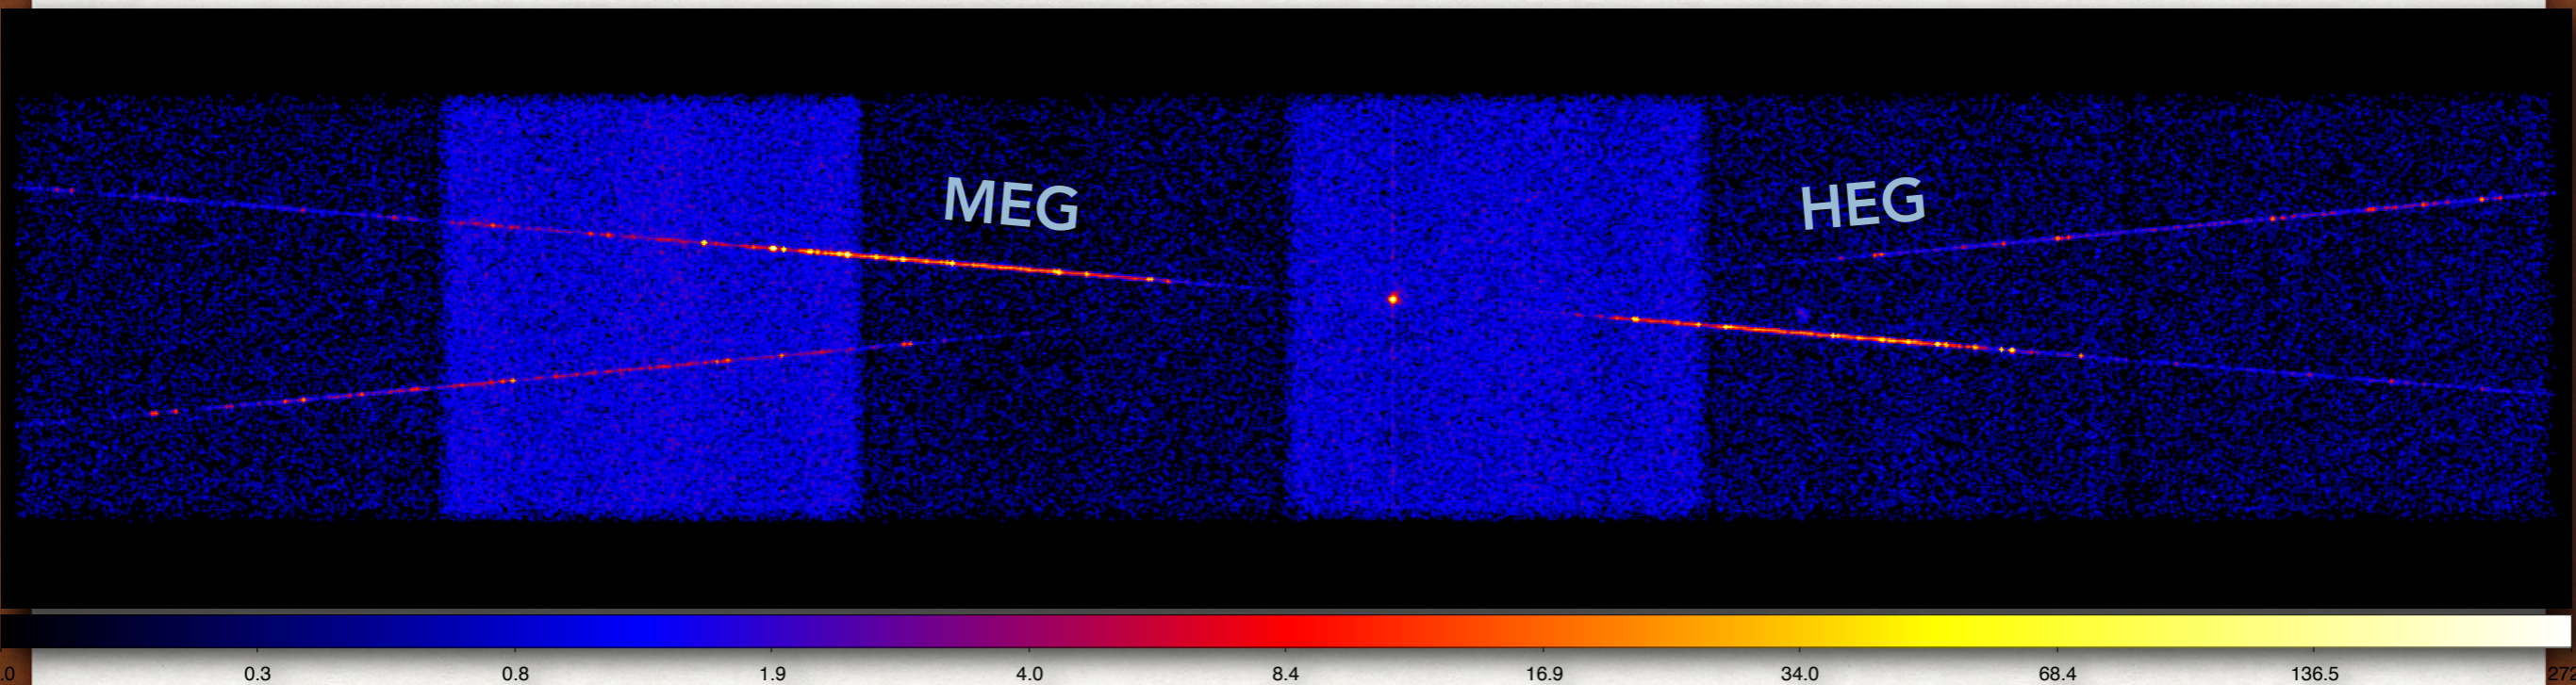


Capella ObsID 1235

2. HARDWARE

LETGS+ACIS-S


XTE J1118+480 (accretion disk around BH)

chandra.harvard.edu

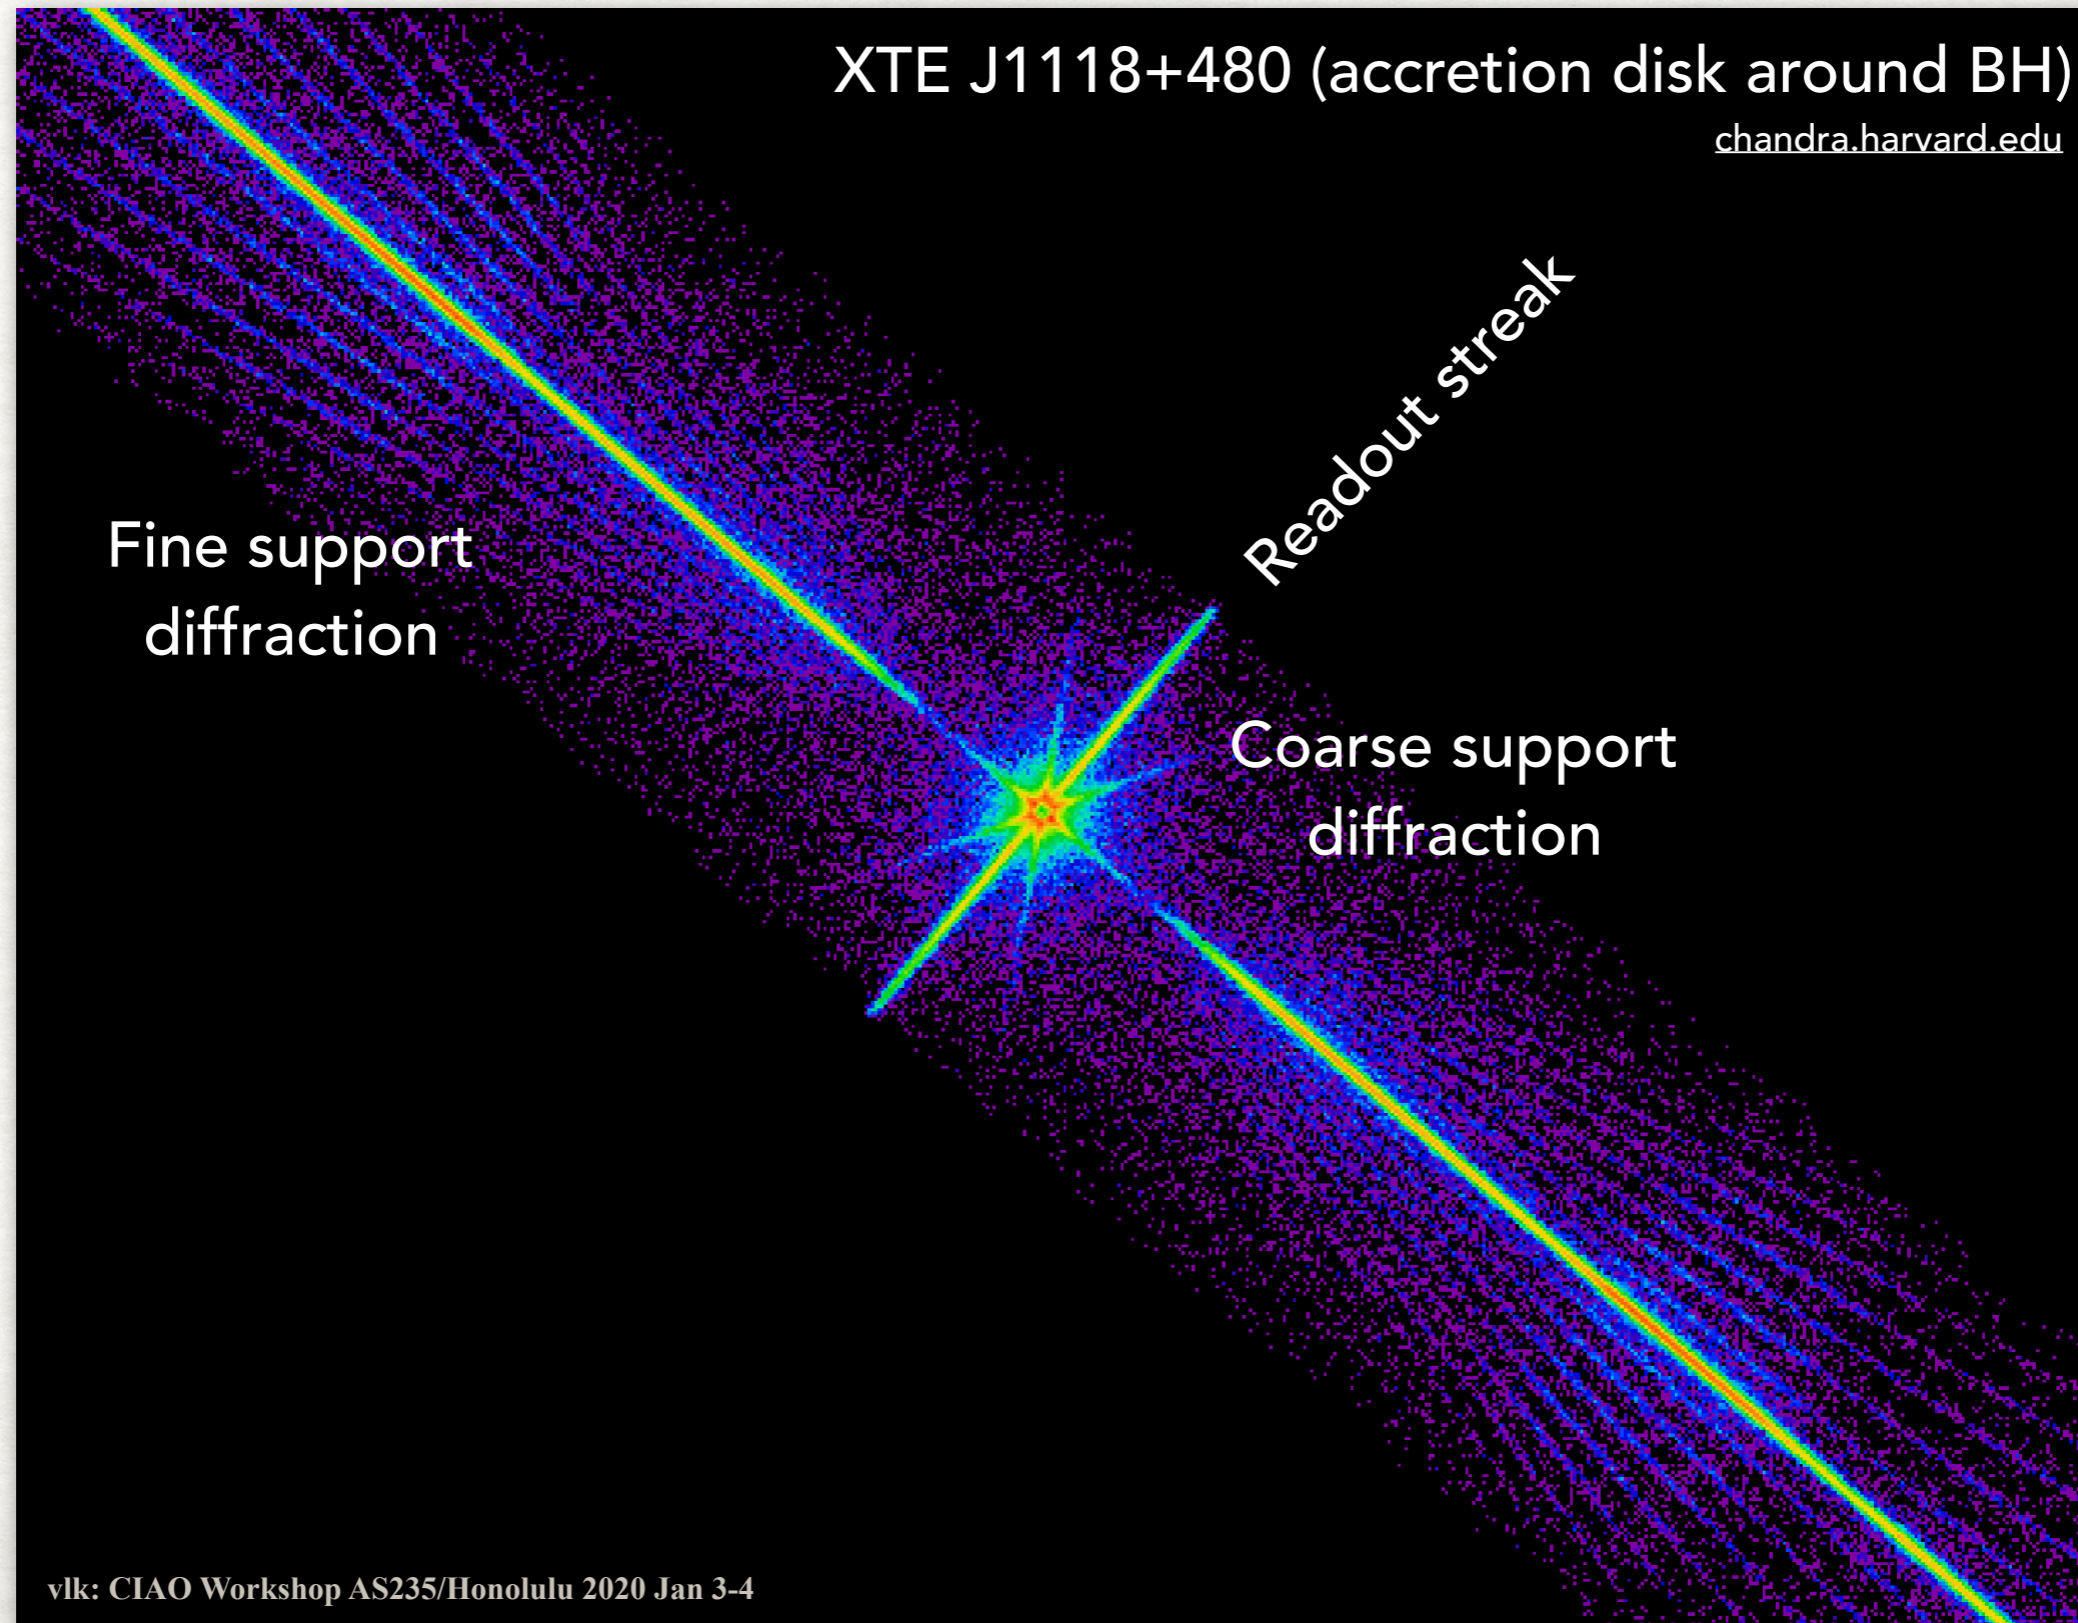

2. HARDWARE

LETGS+HRC-S

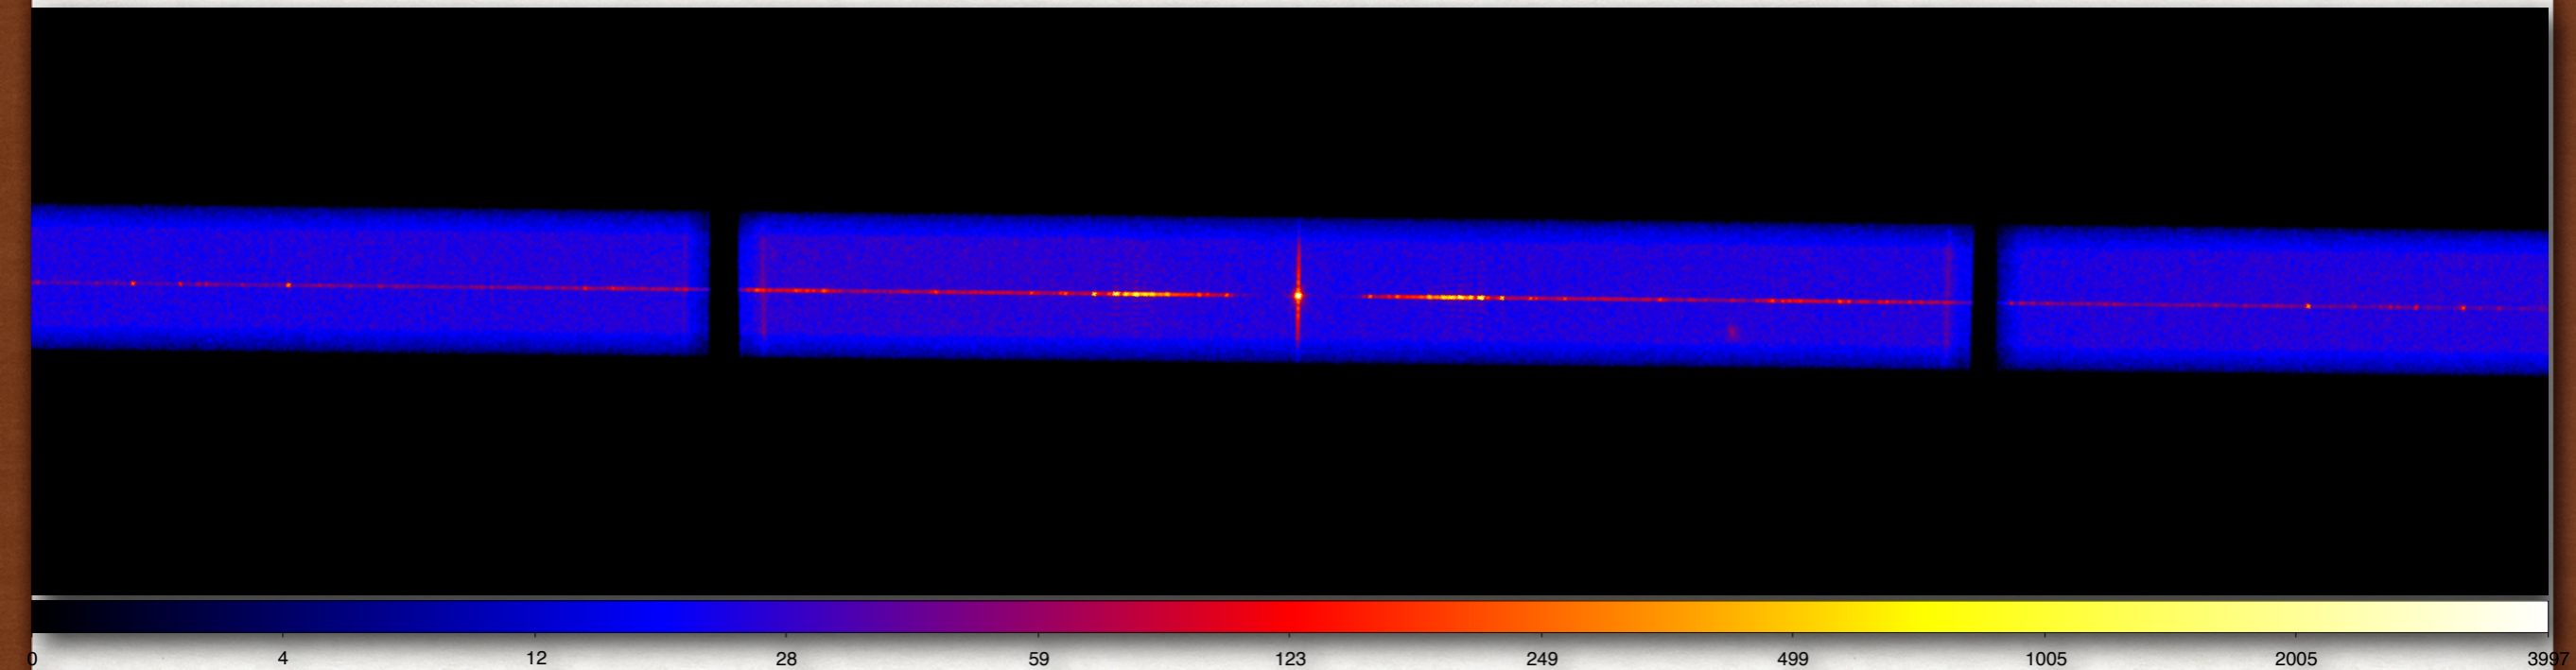

Capella ObsID 1248


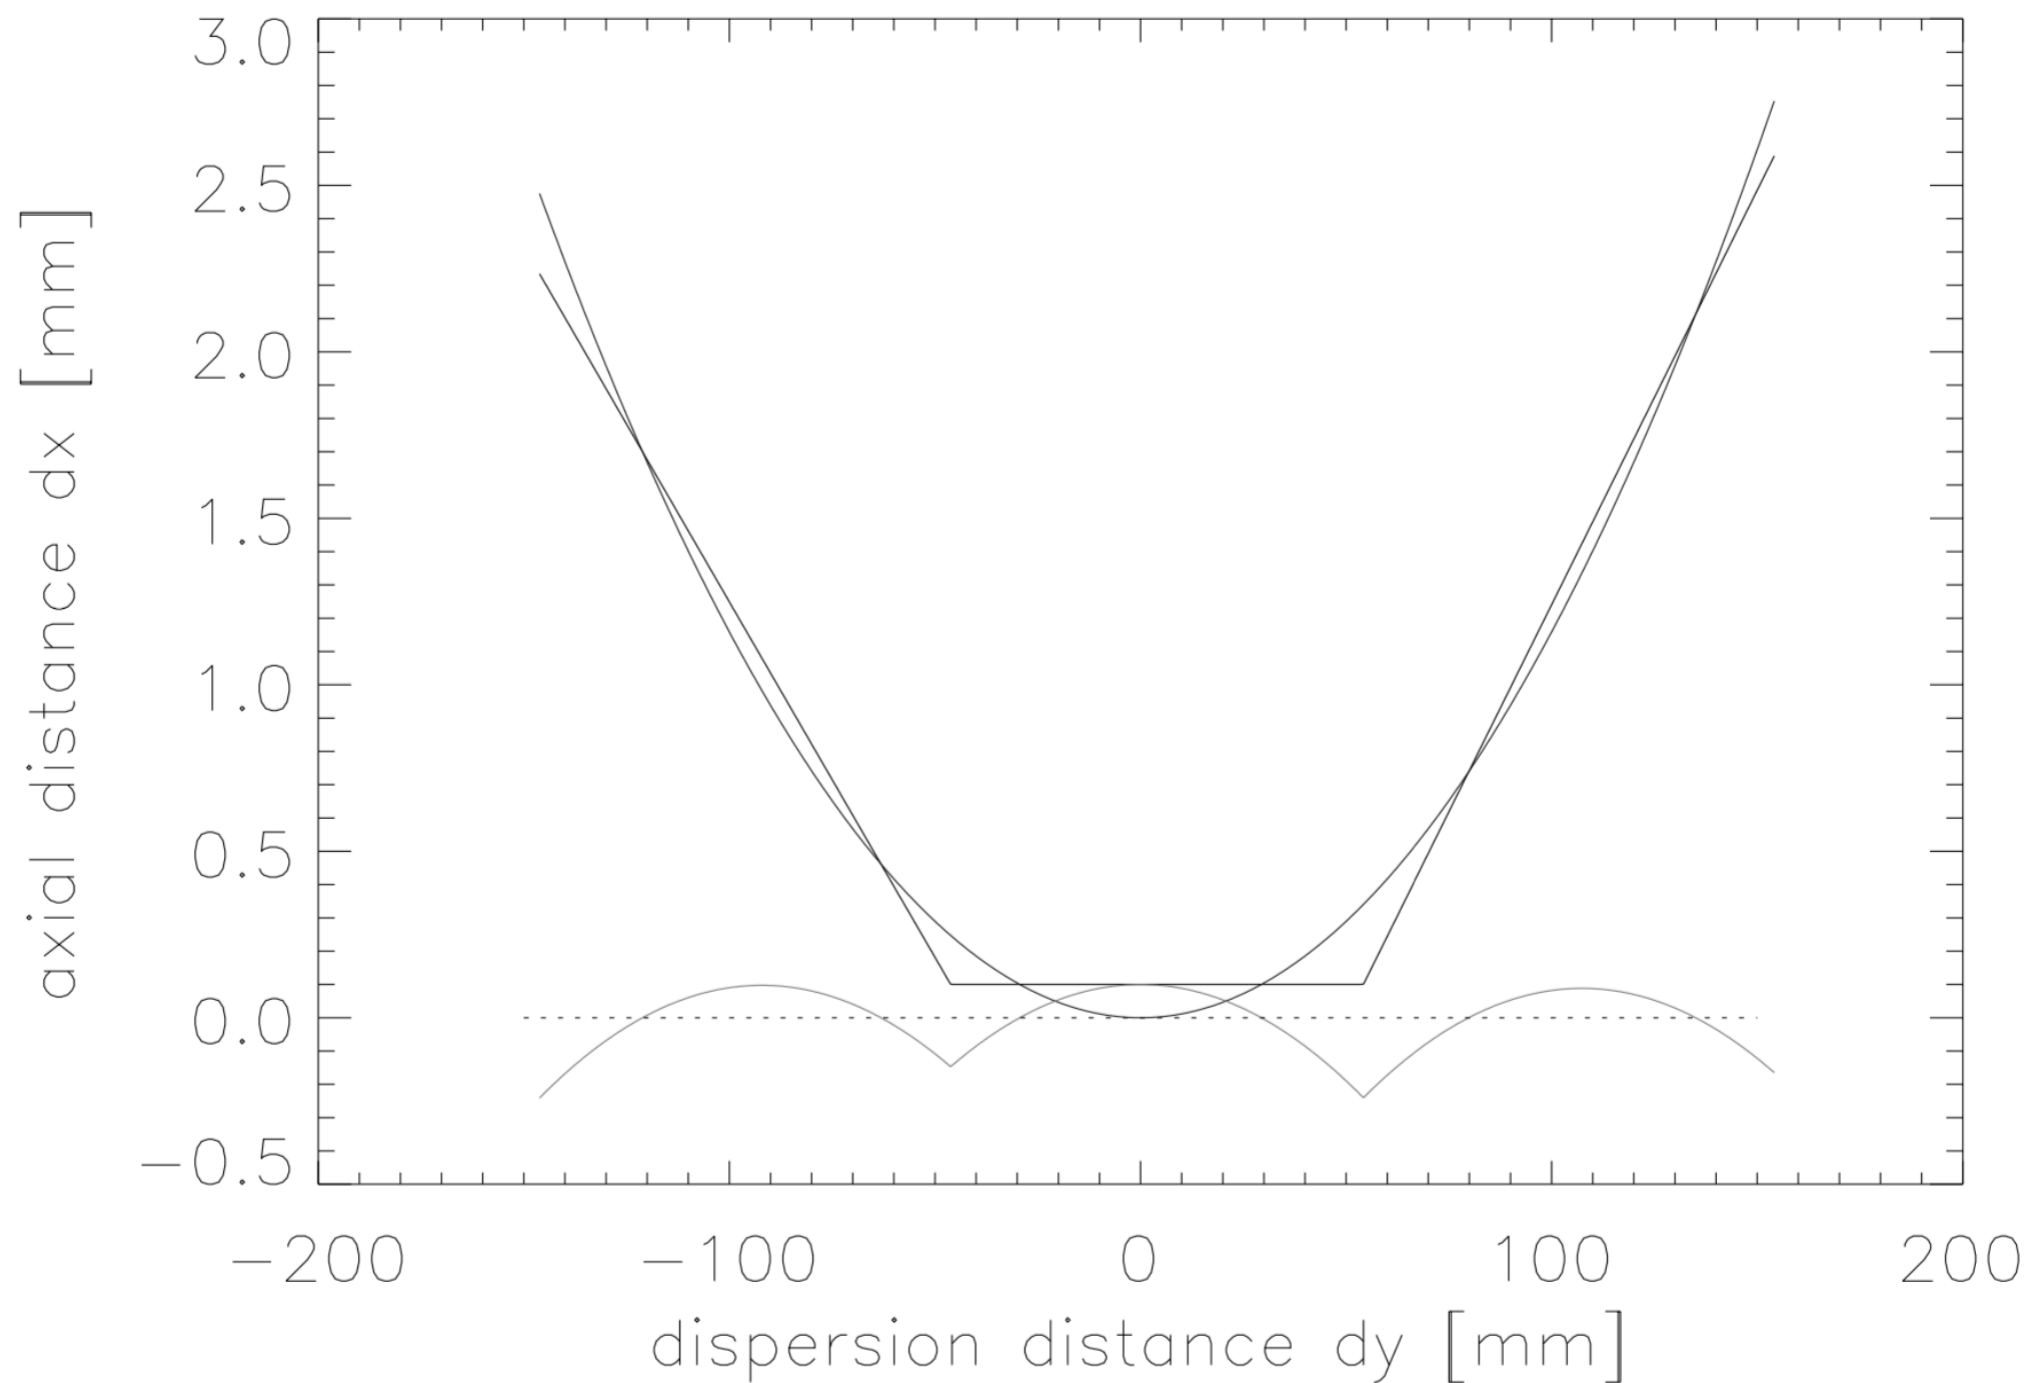


Figure 9.5: The front surfaces of the HRC-S detector segments and their relationship to the Rowland circle are shown schematically. The scalloped line beneath them is the difference between the detector surface and the Rowland circle.

2. HARDWARE


LETGS+HRC-I

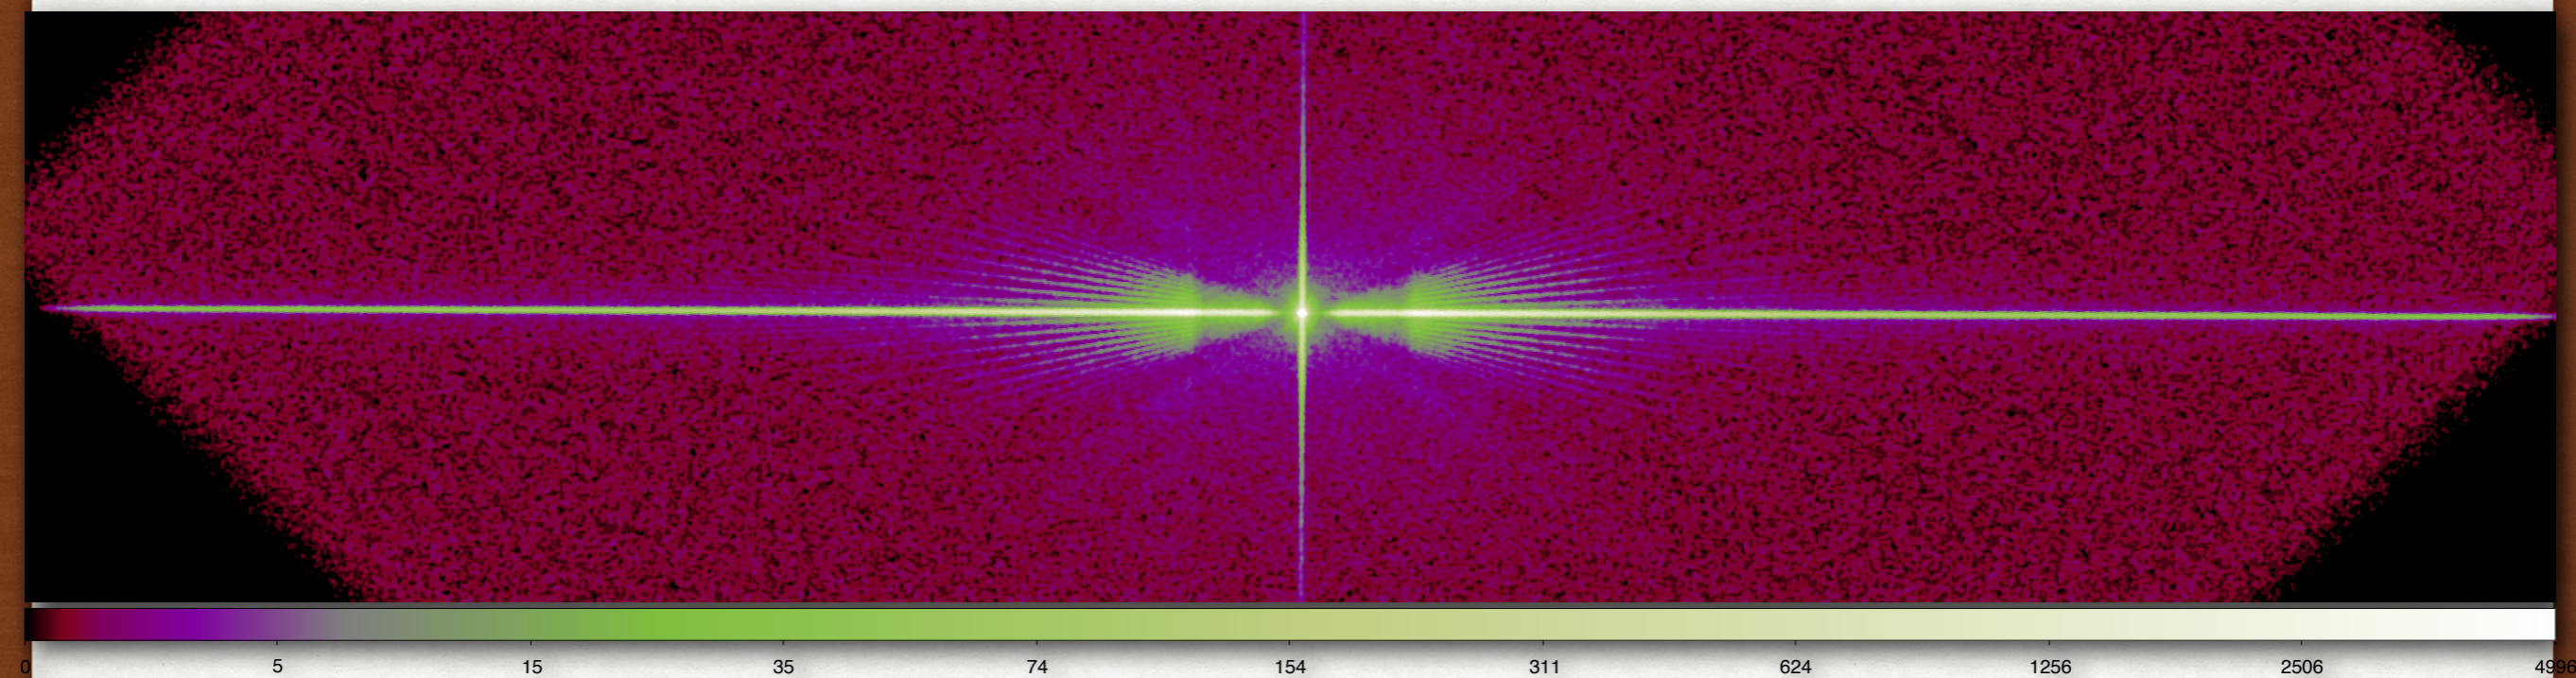

Cyg X-2 ObsID 87


2. HARDWARE

HETGS+HRC-I

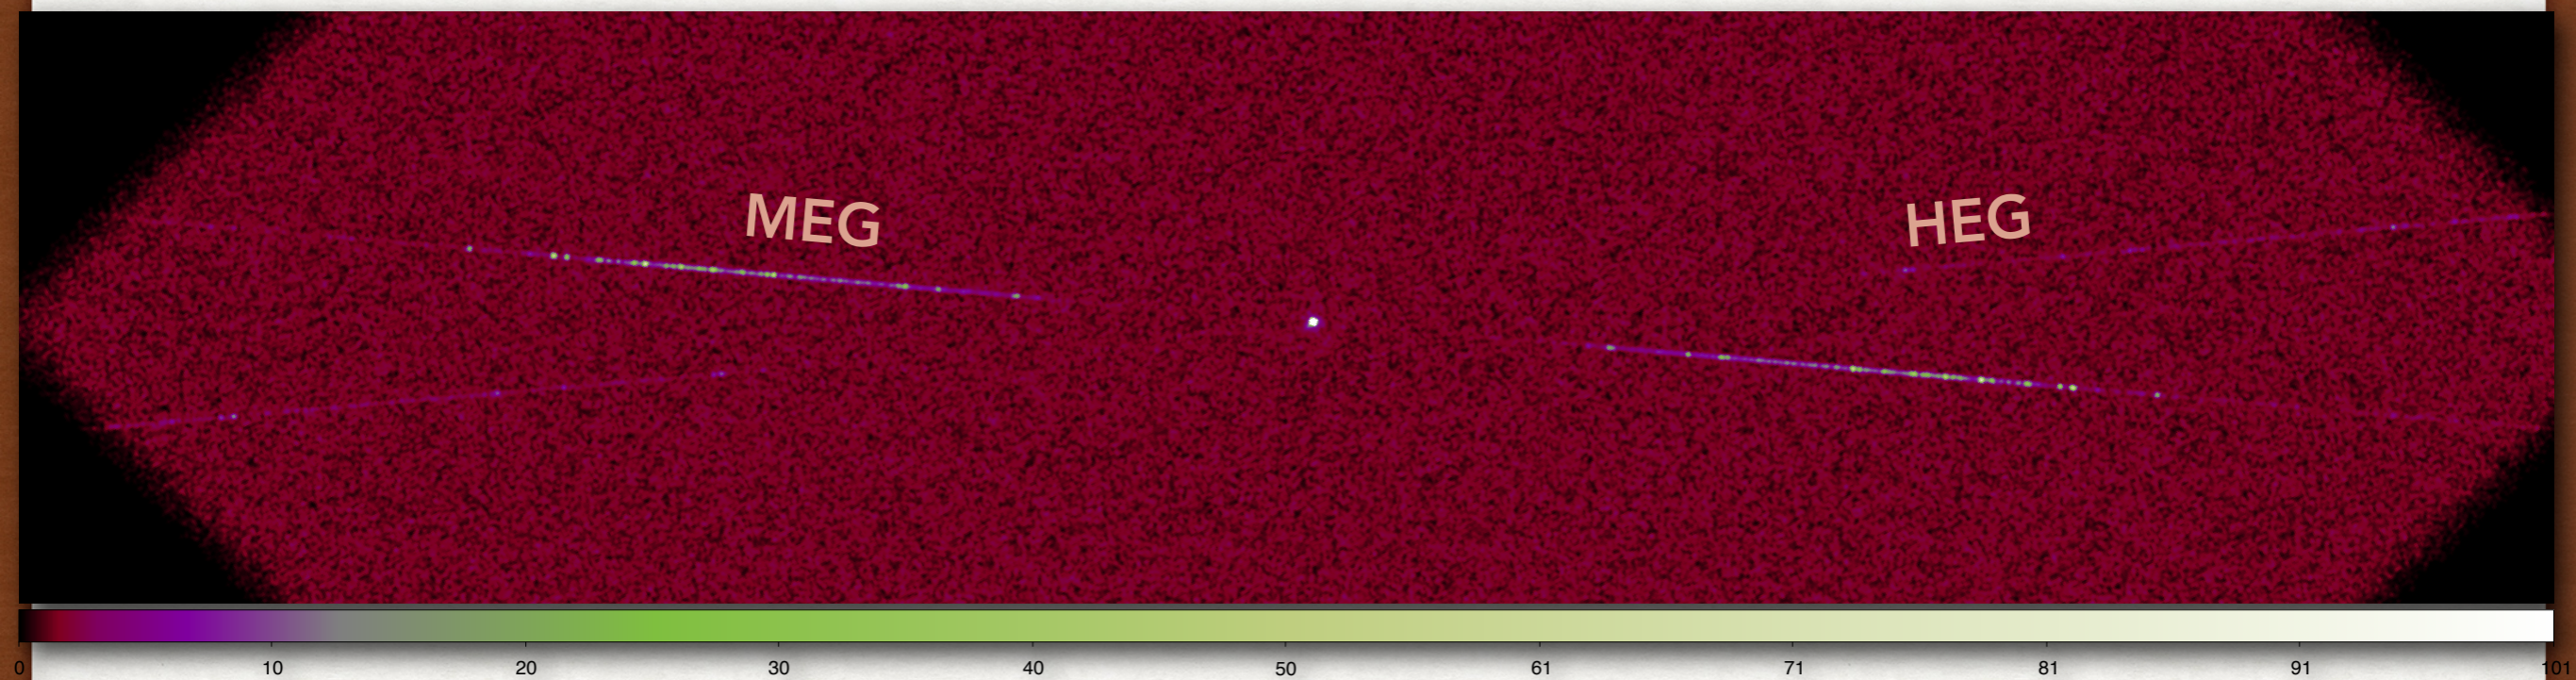


Capella ObsID 19837


HEG Effective Areas

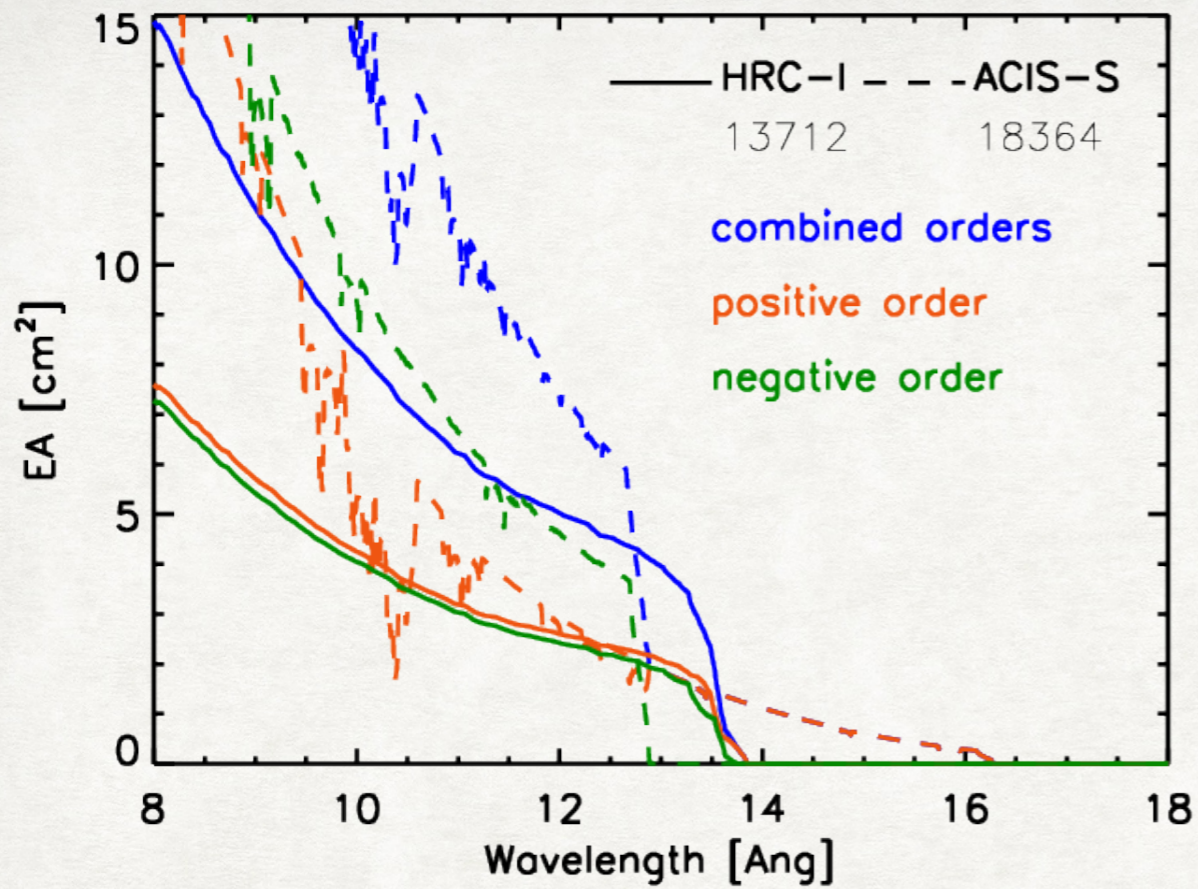


MEG Effective Areas

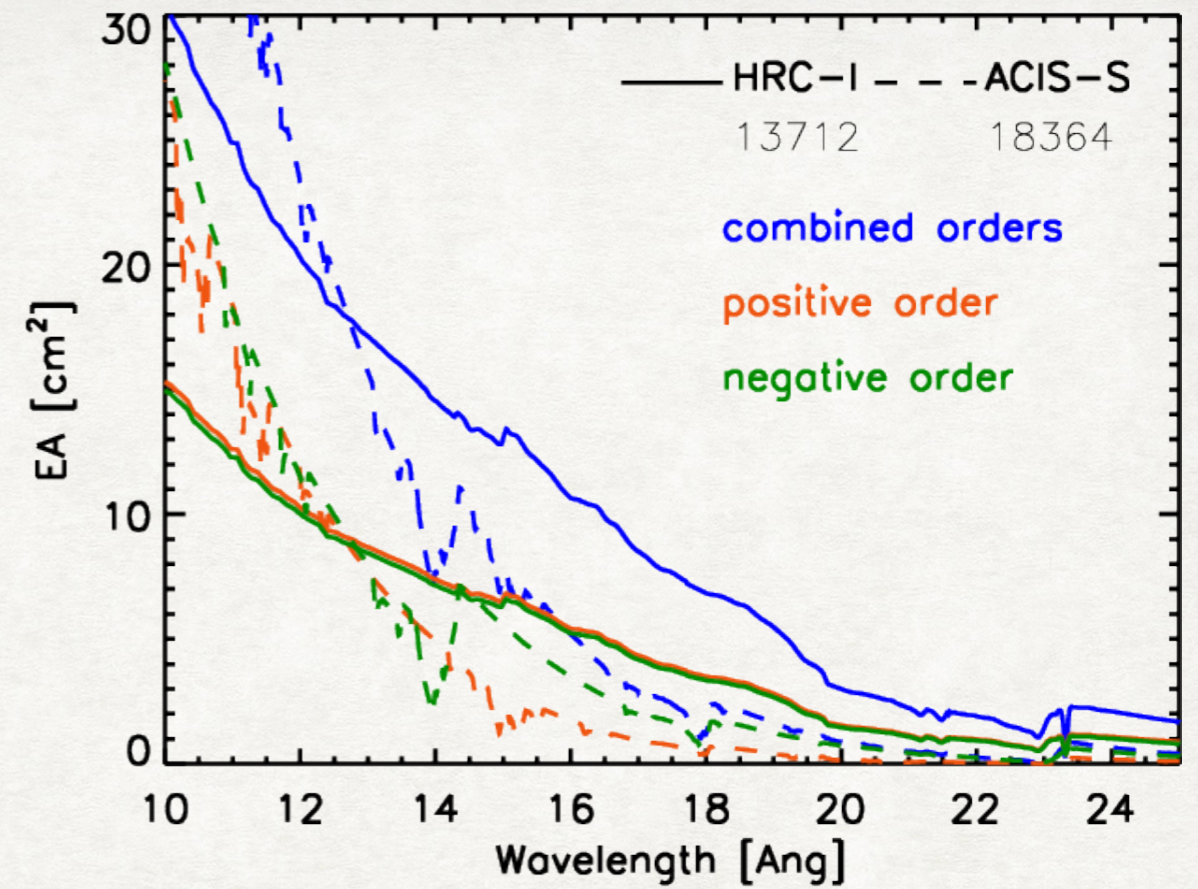

HEG Effective Area Ratios

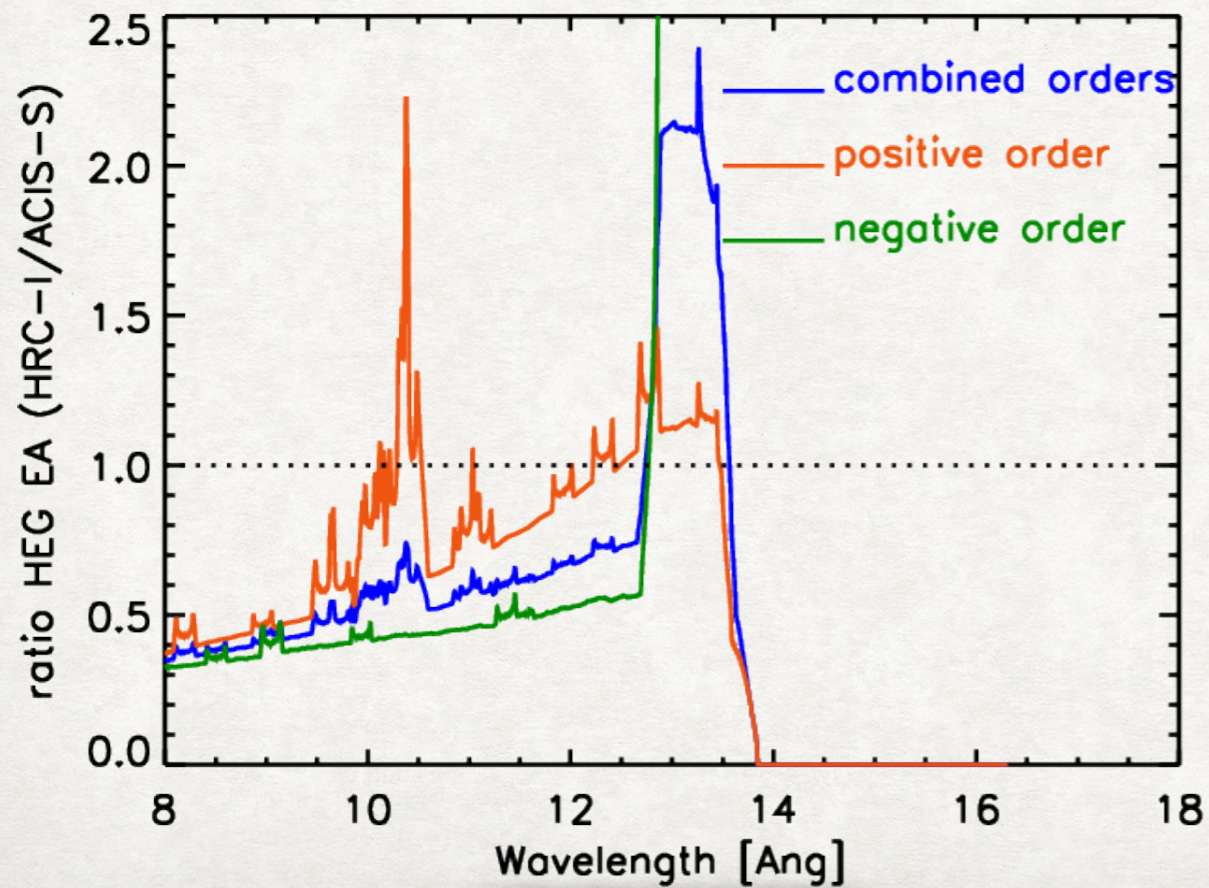

MEG Effective Area Ratios

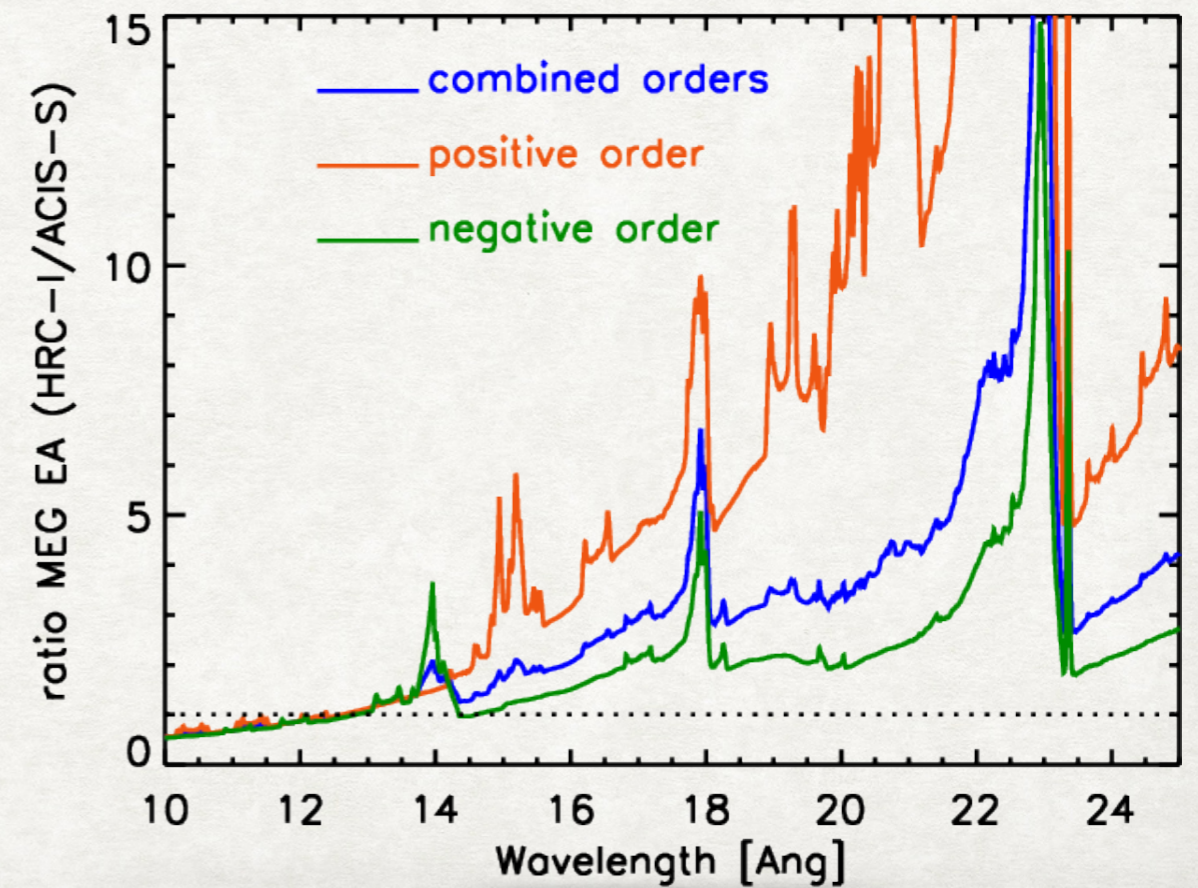

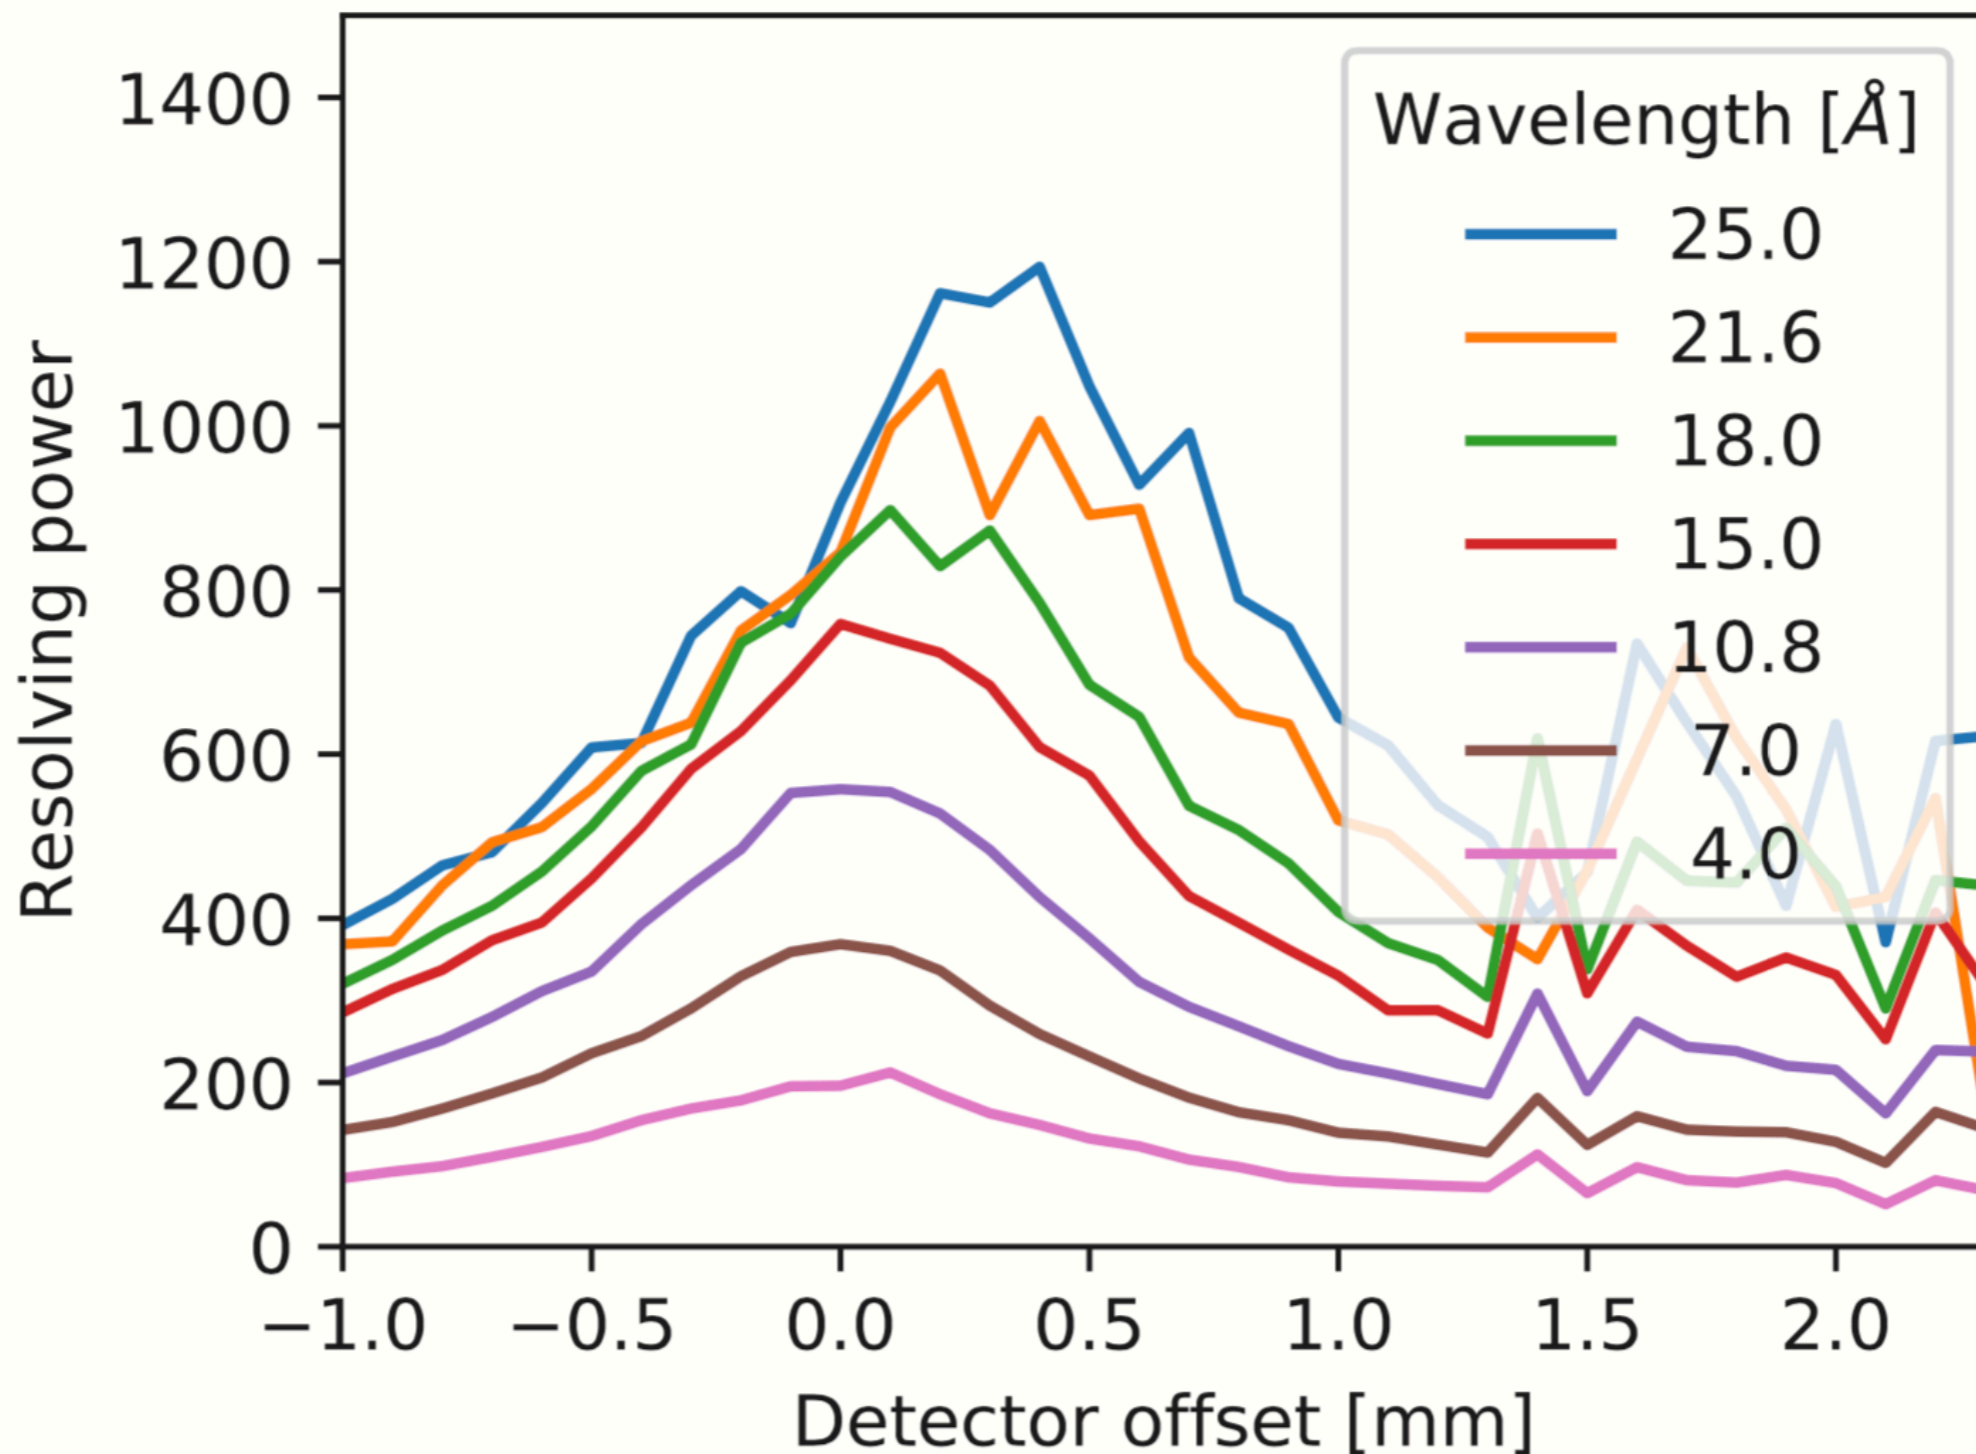


Figure 1: Expected spectral resolving power for HETG/HRC-I for different focus offsets based on MARX ray-trace simulations.

3. SOFTWARE

EXTRACT DATA USING CIAO

<https://cxc.harvard.edu/ciao/threads/gspec.html>


- Find the 0th order
- Fix the regions from which to extract dispersed spectra
- Assign wavelengths
- Extract into standard format files
- Create redistribution matrix (RMF) and ancillary response (ARF) files

3. SOFTWARE

WHERE IS THE SOURCE?

- Must first locate the 0th order
- Use `tgdetect` or `tg_findzo`, or `tgdetect2` to automatically choose between them
- `tgdetect`: uses `celldetect` to find and centroid 0th order sources, works with either ACIS or HRC data
- `tg_findzo`: for ACIS, when 0th order is piled up, uses readout streaks and dispersion axis to pinpoint the intersection

Chandra HETG

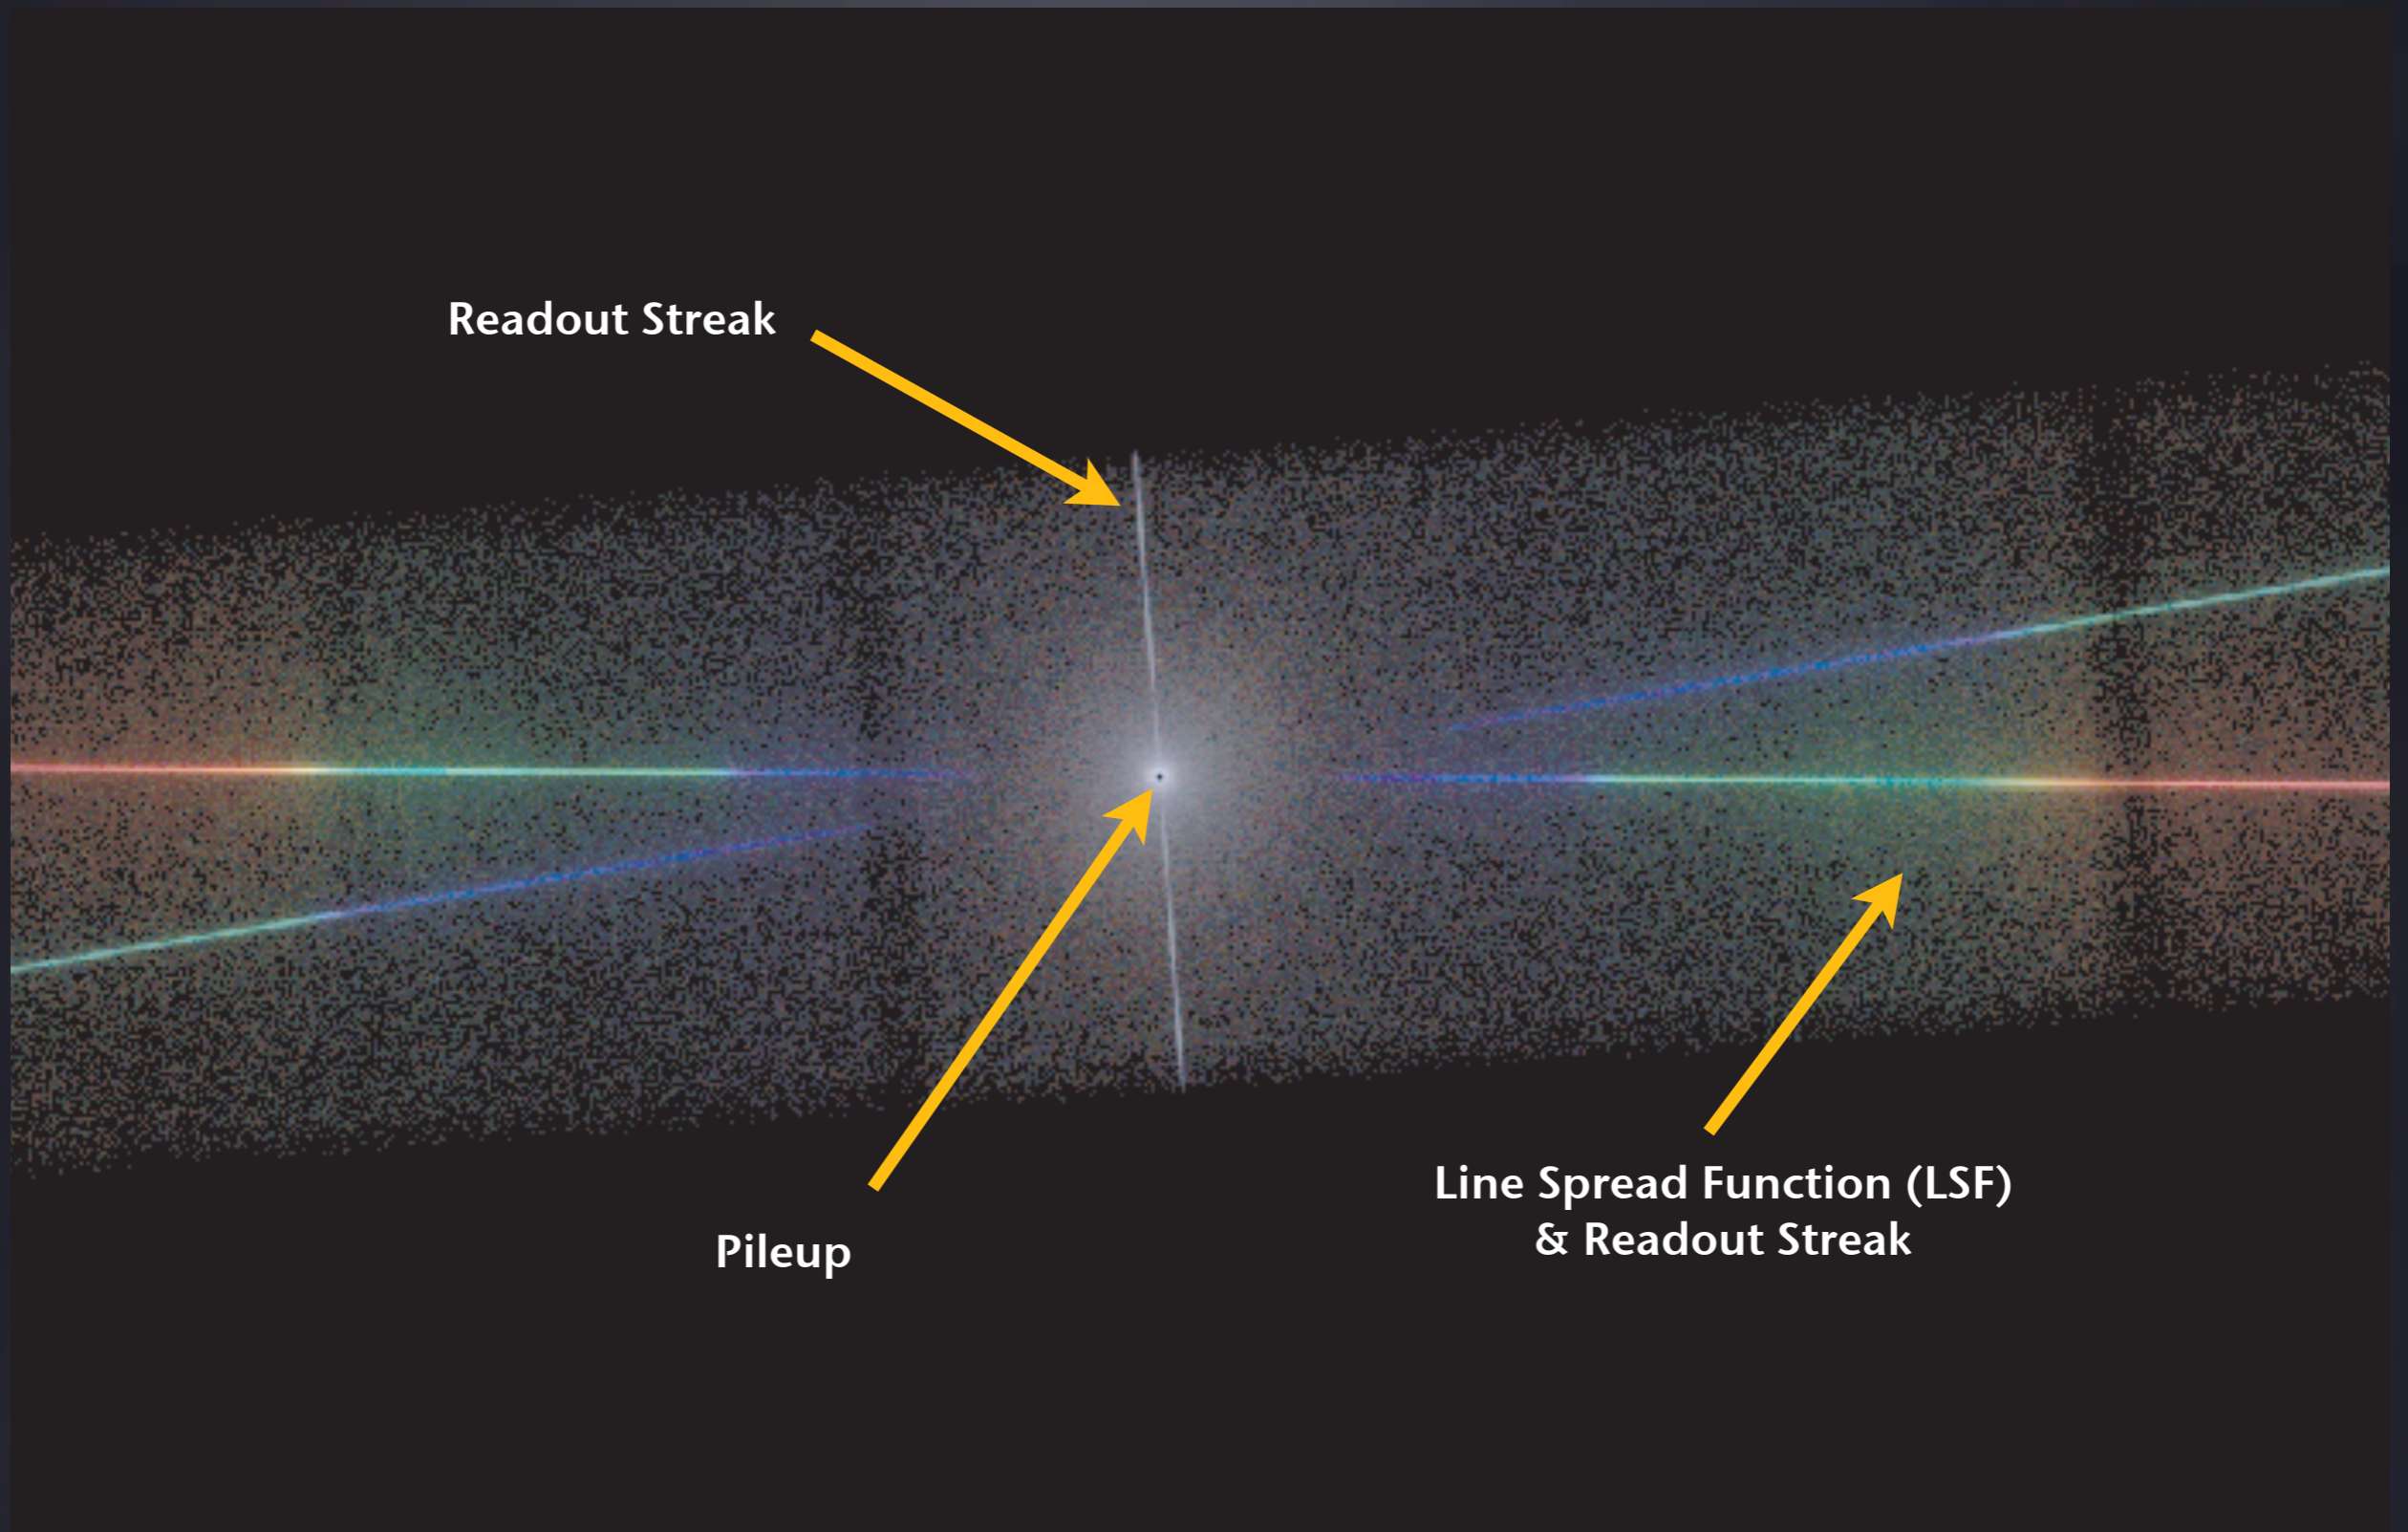

Where is my source?

tg_detect

This will fail if the source is piled up,
or if the zeroth order image is blocked!

tg_findzo

This will fail if the source is too faint!

Accuracy can be as good as 0.1 pixels

3. SOFTWARE

MAP TO WAVELENGTH

Distance from 0th order gives you wavelength

$$m\lambda = m \frac{hc}{E} = p \sin \beta \approx p\beta$$



LETG



$$\lambda, \frac{\lambda}{2}, \frac{\lambda}{3}, \dots$$

$$E, 2E, 3E, \dots$$

HETG

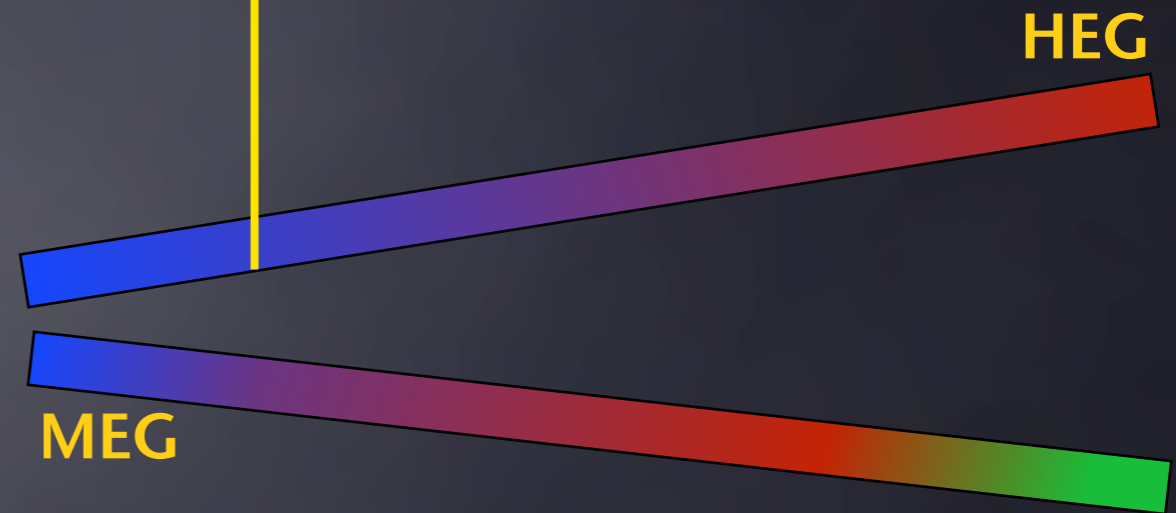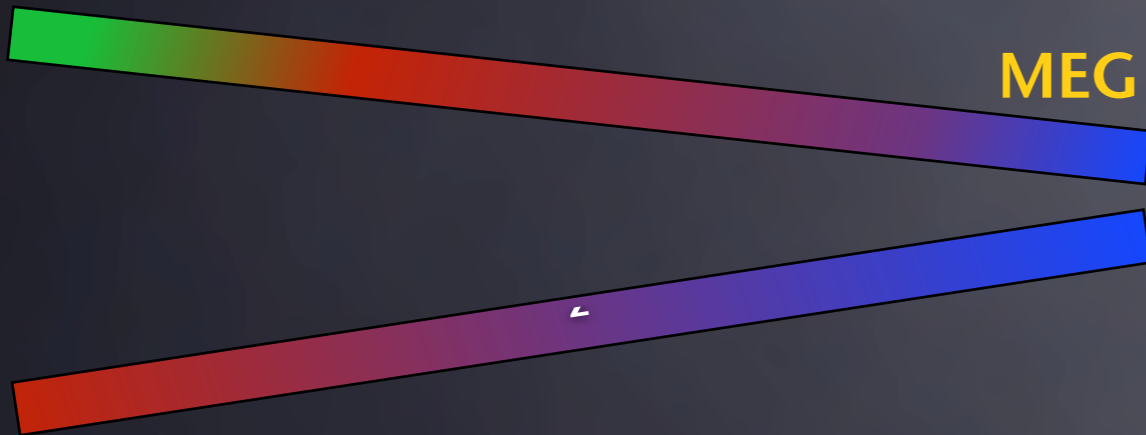

HEG

Greater Distance = Higher Resolution


Resolution Limited by CCDs & Gratings Accuracy

$$m\lambda = m \frac{hc}{E} = p \sin \beta \approx p\beta$$

LETG



HETG

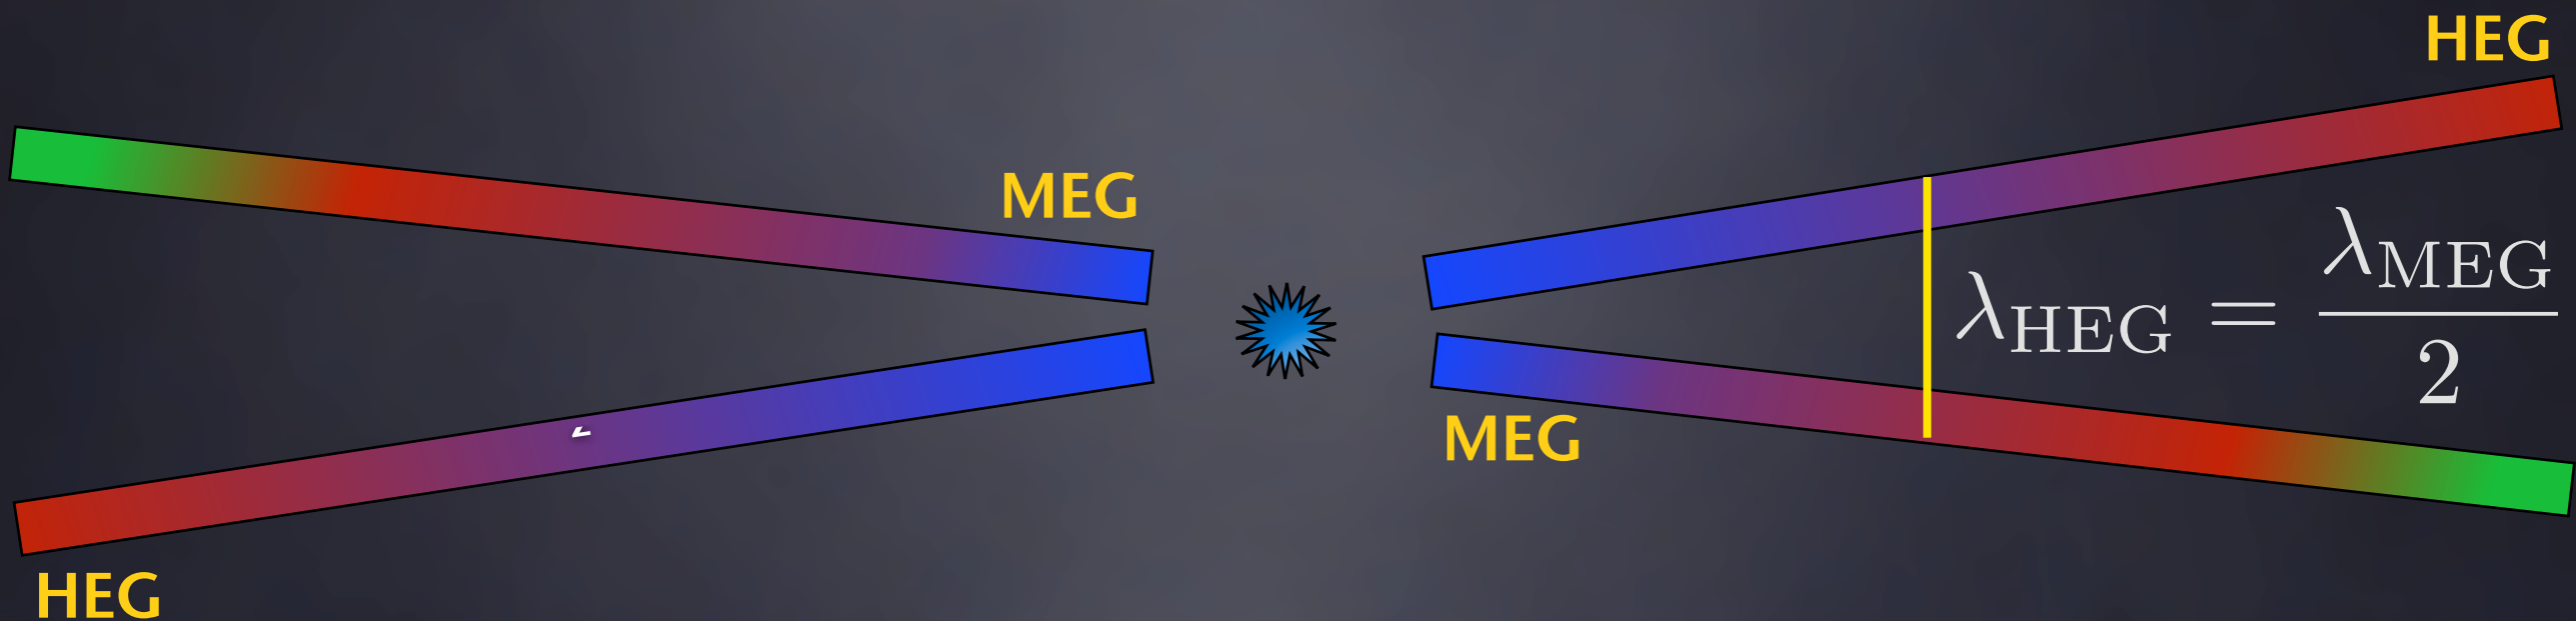


Greater Distance = Higher Resolution
Resolution Limited by CCDs & Gratings Accuracy

3. SOFTWARE


MAP TO WAVELENGTH

- OSIP (Order Sorting Integrated Probability) Tables for ACIS
- The ratio of CCD energy to inferred energy, $\mathcal{R}_0 = E_{\text{CCD}} / (mhc/\lambda)$ can be used to separate the orders
 - "Standard" — pre-calculated \mathcal{R}_0
 - "Flat" — set a fixed ratio for range of \mathcal{R}_0 , e.g., 0.8-1.3

unix%> ds9 acisf11044N002_evt2.fits.gz &

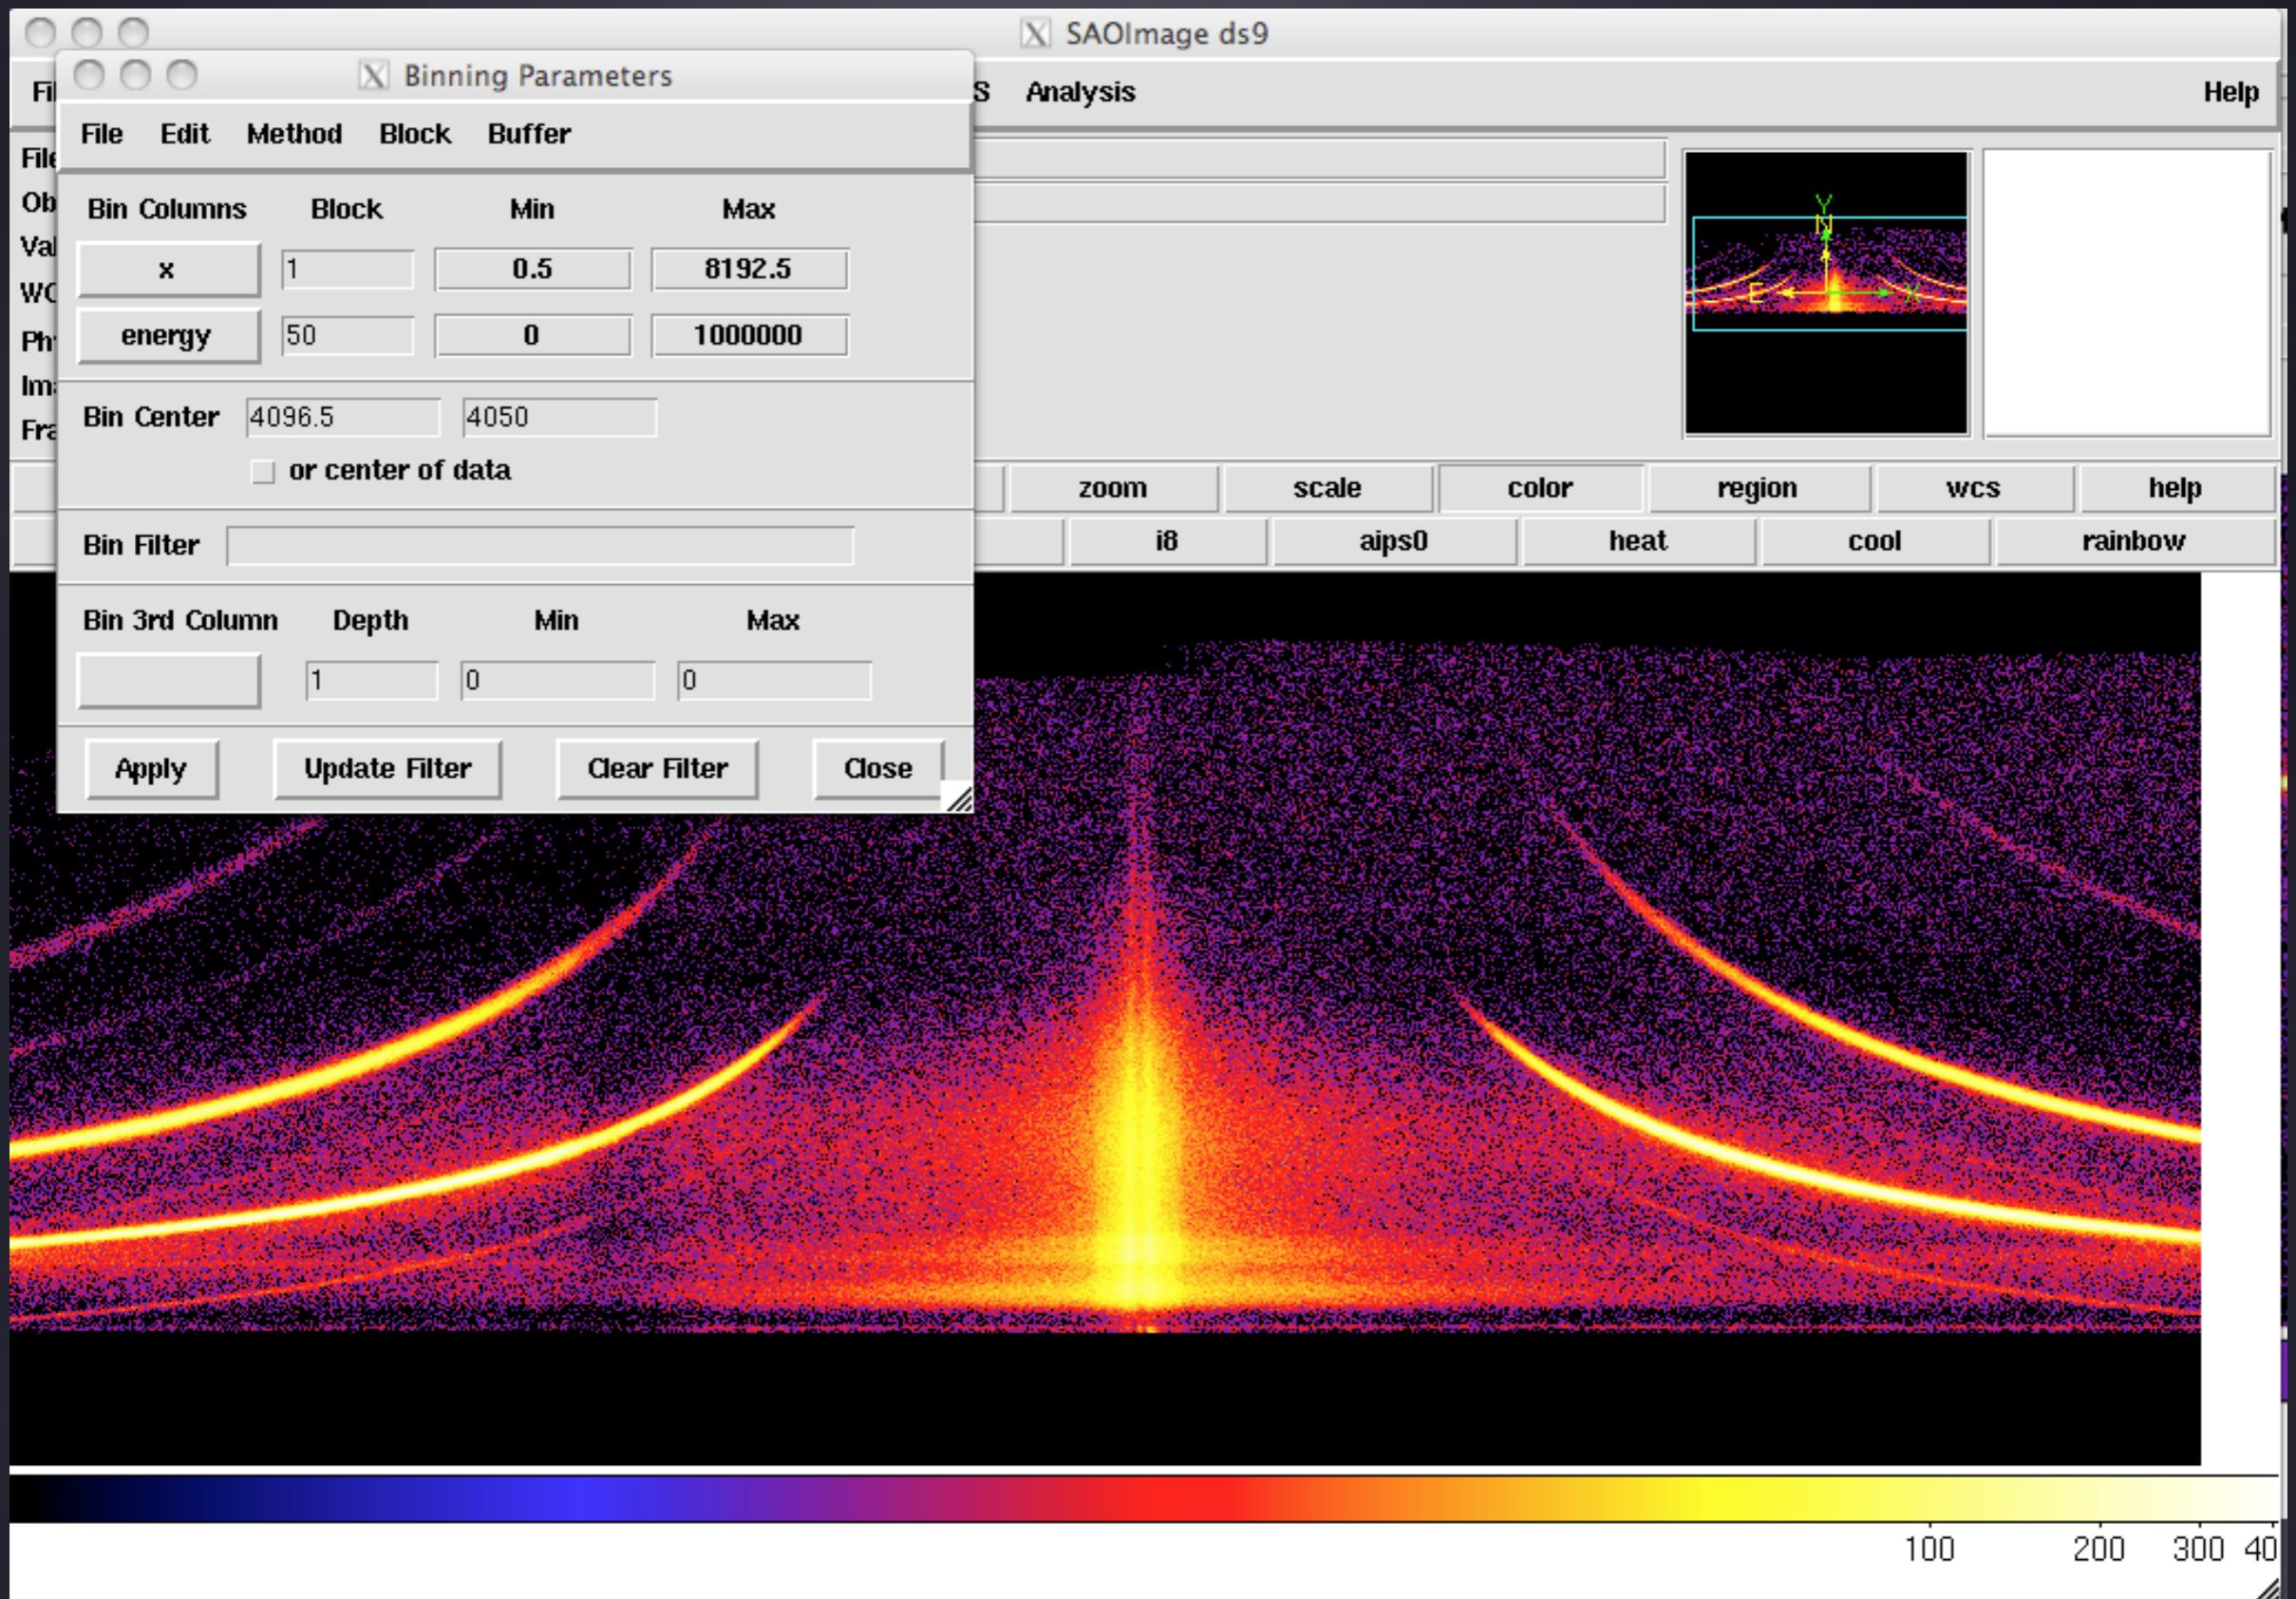

Order Sorting Plot

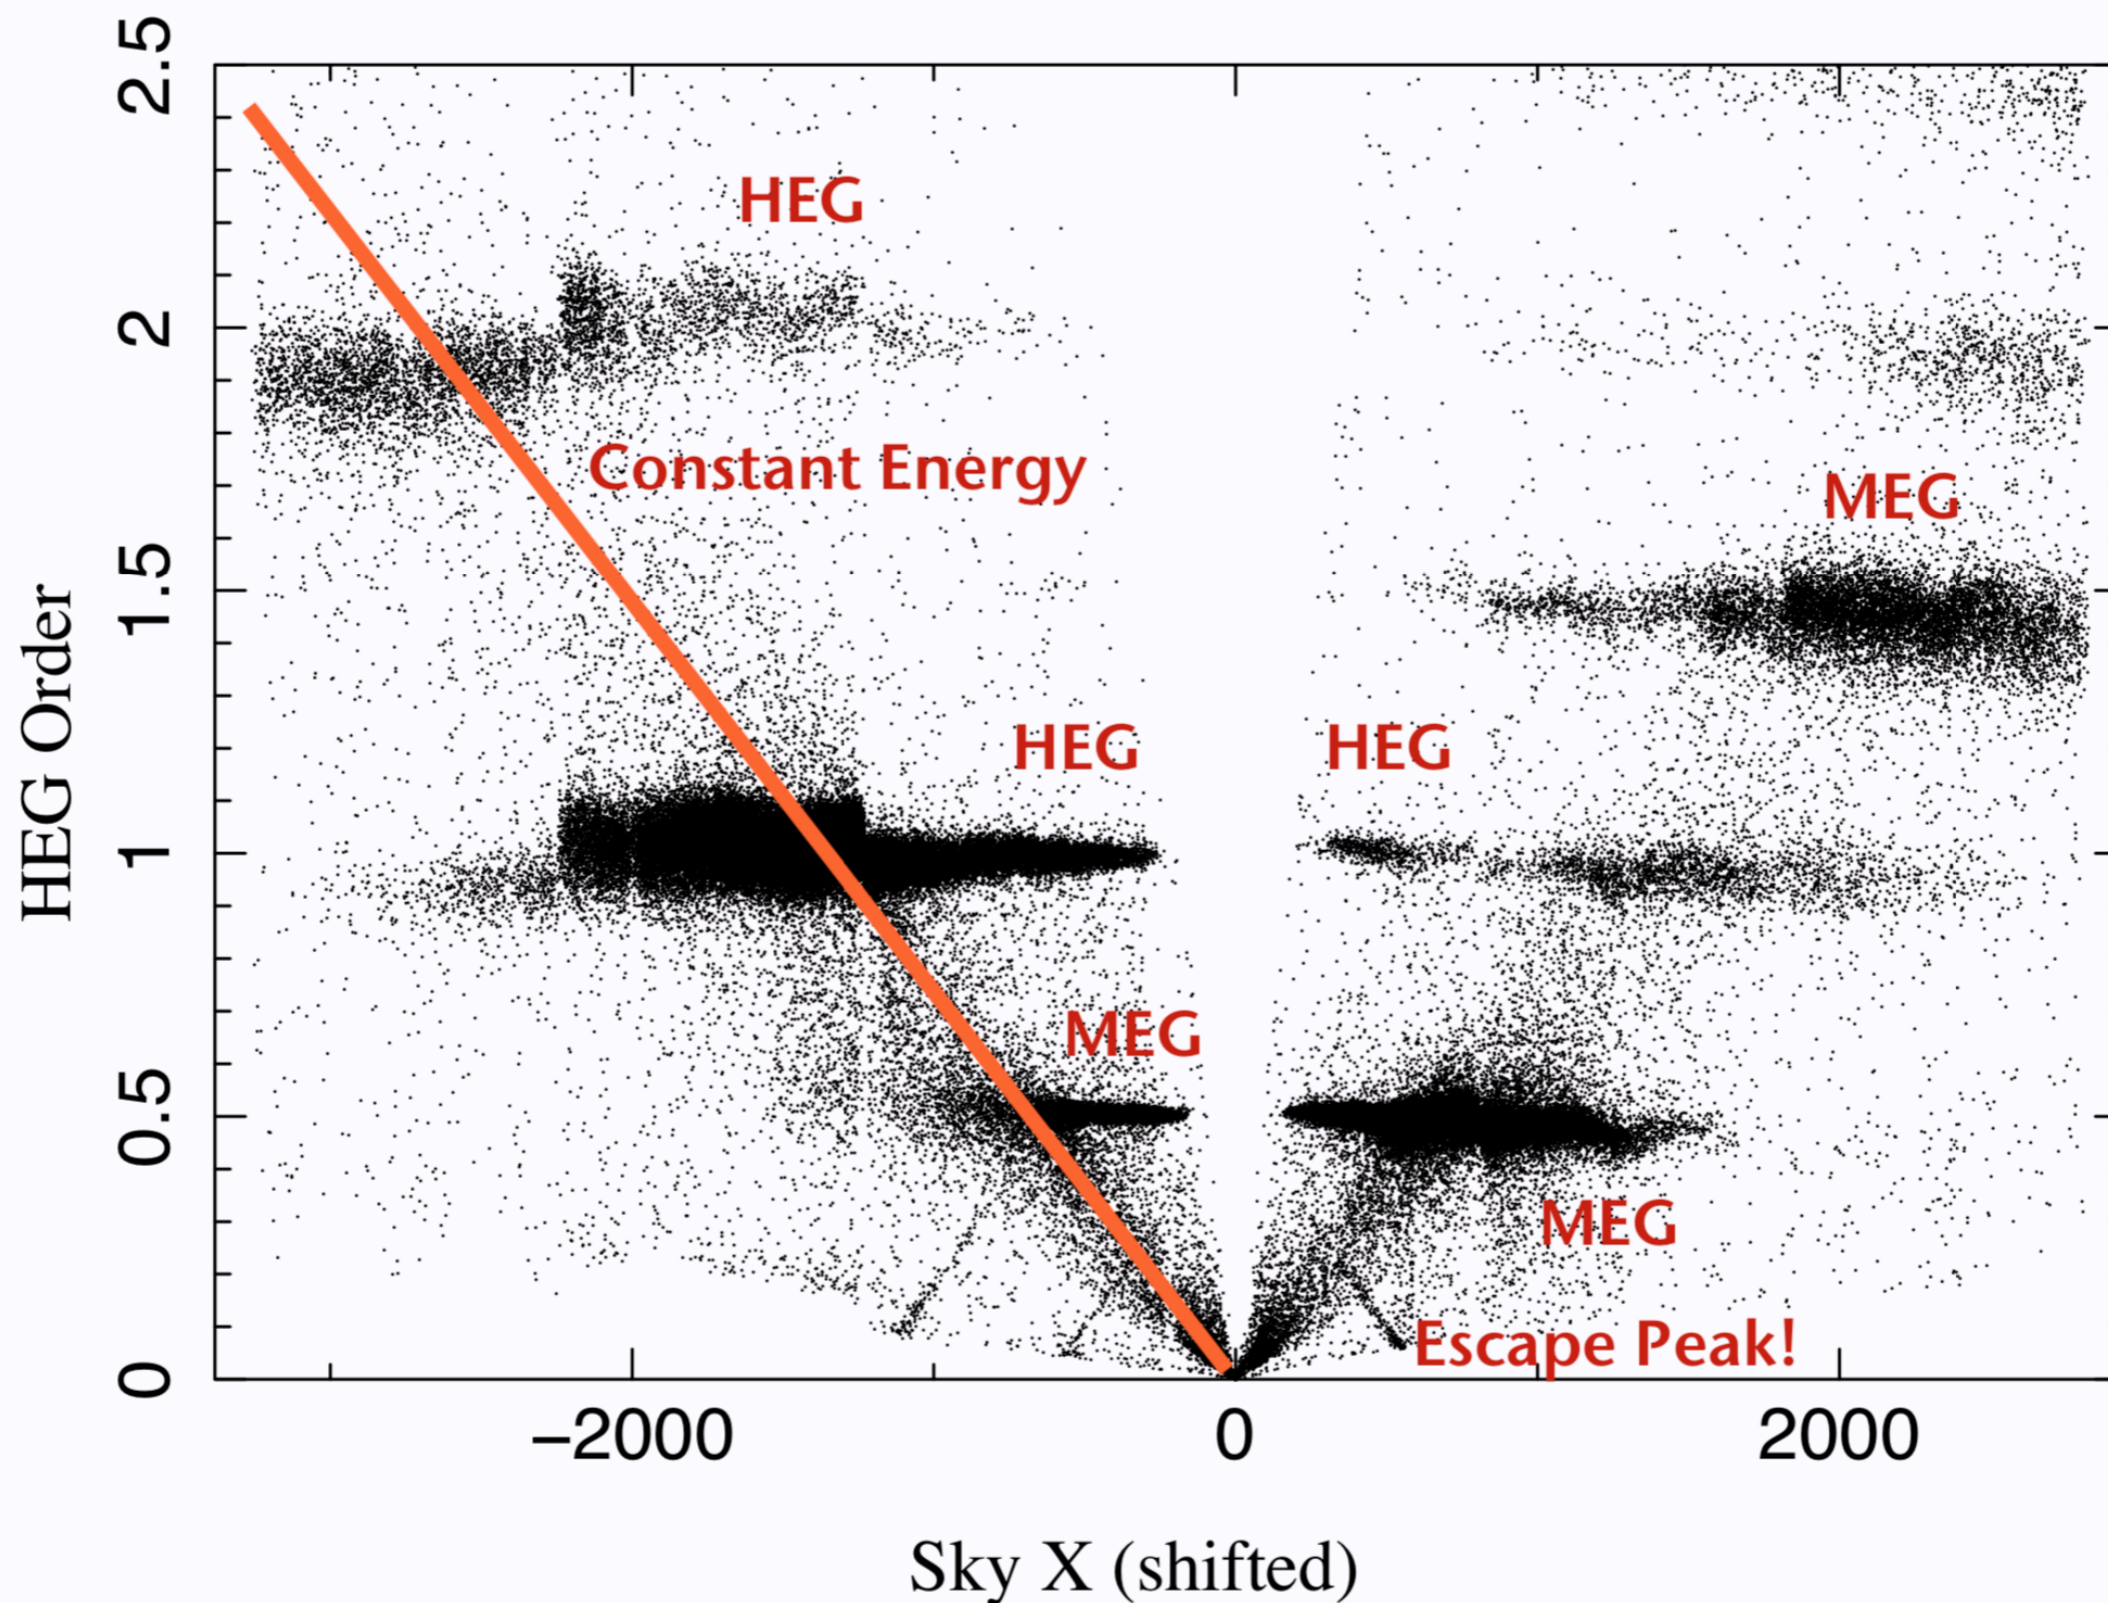

3. SOFTWARE

MAP TO WAVELENGTH

- OSIP (Order Sorting Integrated Probability) Tables for ACIS
- The ratio of CCD energy to inferred energy, $\mathcal{R}_0 = E_{\text{CCD}} / (mhc/\lambda)$ can be used to separate the orders
 - "Standard" — pre-calculated \mathcal{R}_0
 - "Flat" — set a fixed ratio for range of \mathcal{R}_0 , e.g., 0.8-1.3
- You can't do this on the HRC because there is very little intrinsic energy resolution
 - Must construct grating RMFs using `mkgrmf` for several orders, and use this Sherpa thread to use them during fitting

http://cxc.harvard.edu/sherpa/threads/grating_hrcsletg/

3. SOFTWARE


WATCH OUT: TIME FILTERING

- At this stage you have a Level 1.5 file, or the so-called evt1a file
- There is a bug in dmcoppy where if you apply additional time filtering to this file, the GTI block gets corrupted and the EXPOSURE value in the header becomes incorrect
- To work around, do something like this:
 - `cp -p evt1a old_evt1a`
 - `dmcoppy old_evt1a"[time=@filter_spec]" evt1a clobber=yes`
 - `dmappend old_evt1a"[region][subspace -time]" evt1a`
- NOT a problem if you run chandra_repro

3. SOFTWARE

WATCH OUT: HRC-S BACKGROUND REDUCTION


- HRC-S does not have the intrinsic spectral resolution to do order sorting. This means that the background tends to be higher.
- There is a wavelength and PI based filter that can be applied to remove a large fraction of the particle background at minimal cost to the source counts,
`$CALDB/data/chandra/hrc/tgpimask2/letgD1999-07-22pireg_tgmap_N0001.fits`
- **HOWEVER:** recently, because of the gain drop in the HRC, this filter is working less efficiently.
- If you are working with very soft sources $\lambda > 44\text{\AA}$, it is better to not apply this filter.

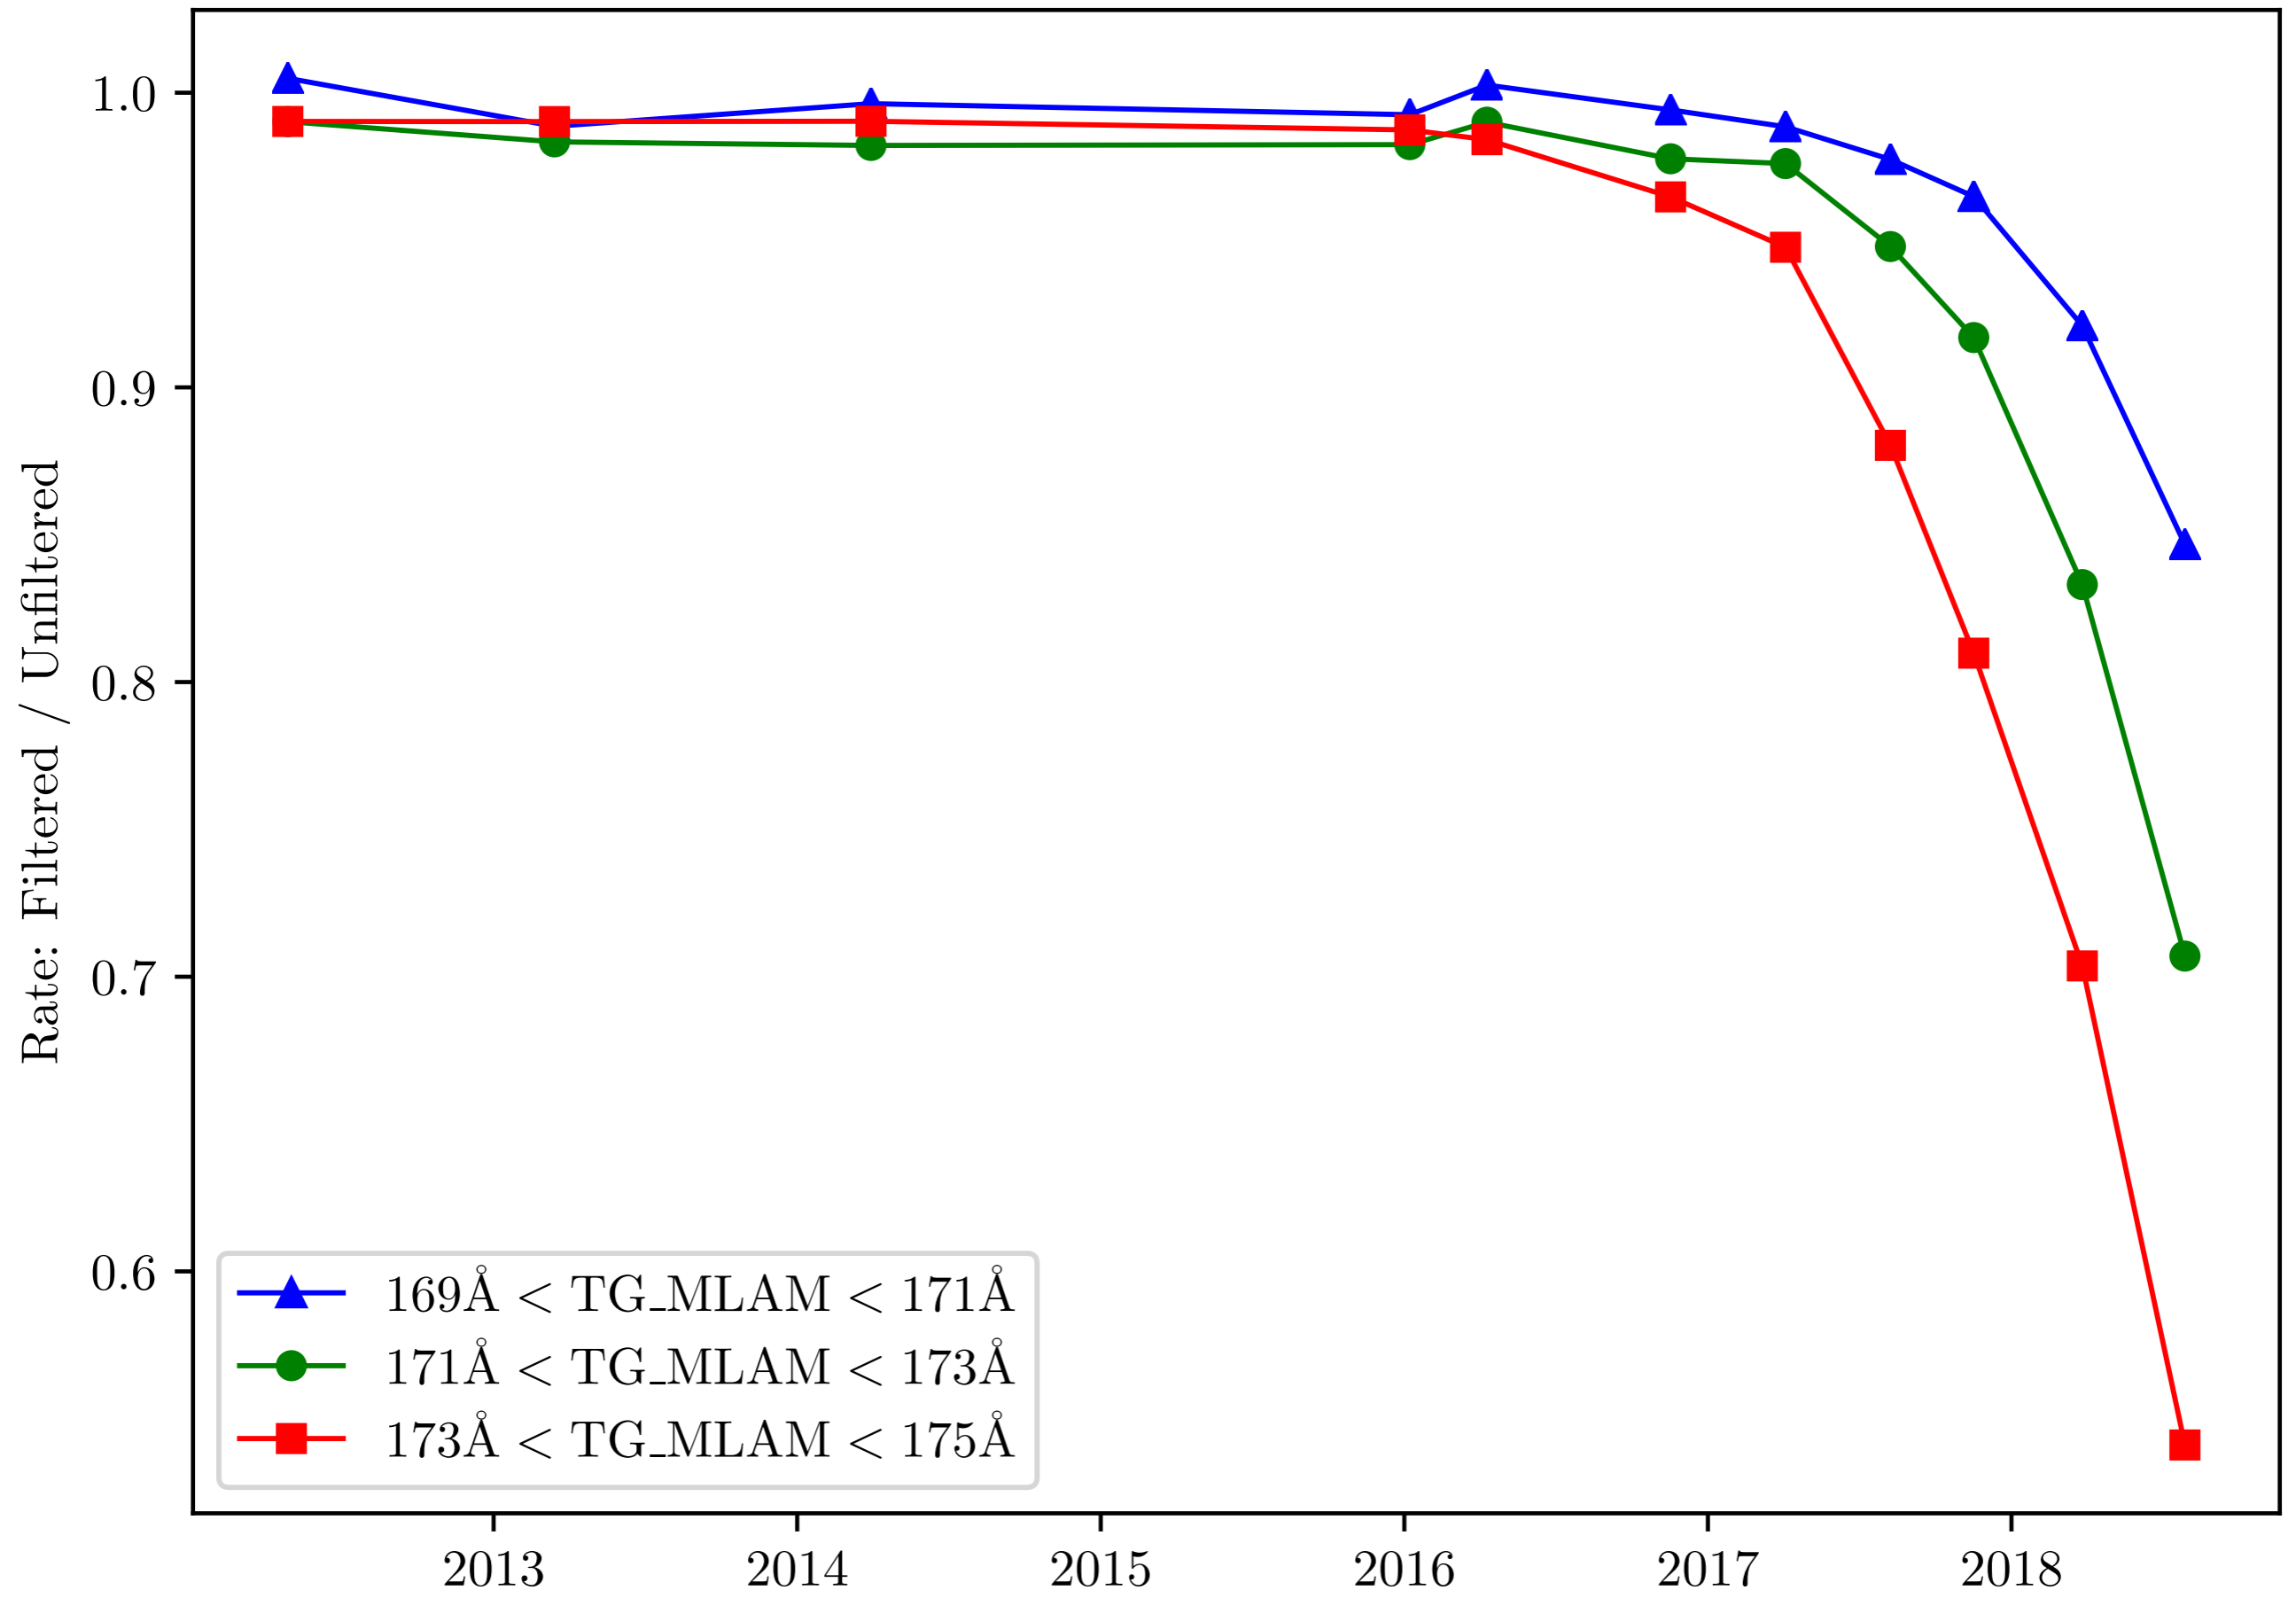

3. SOFTWARE

TG_CREATE_MASK

- Picks out sky spatial region into which the photons are dispersed
- fraction of enclosed energy is put into RMF

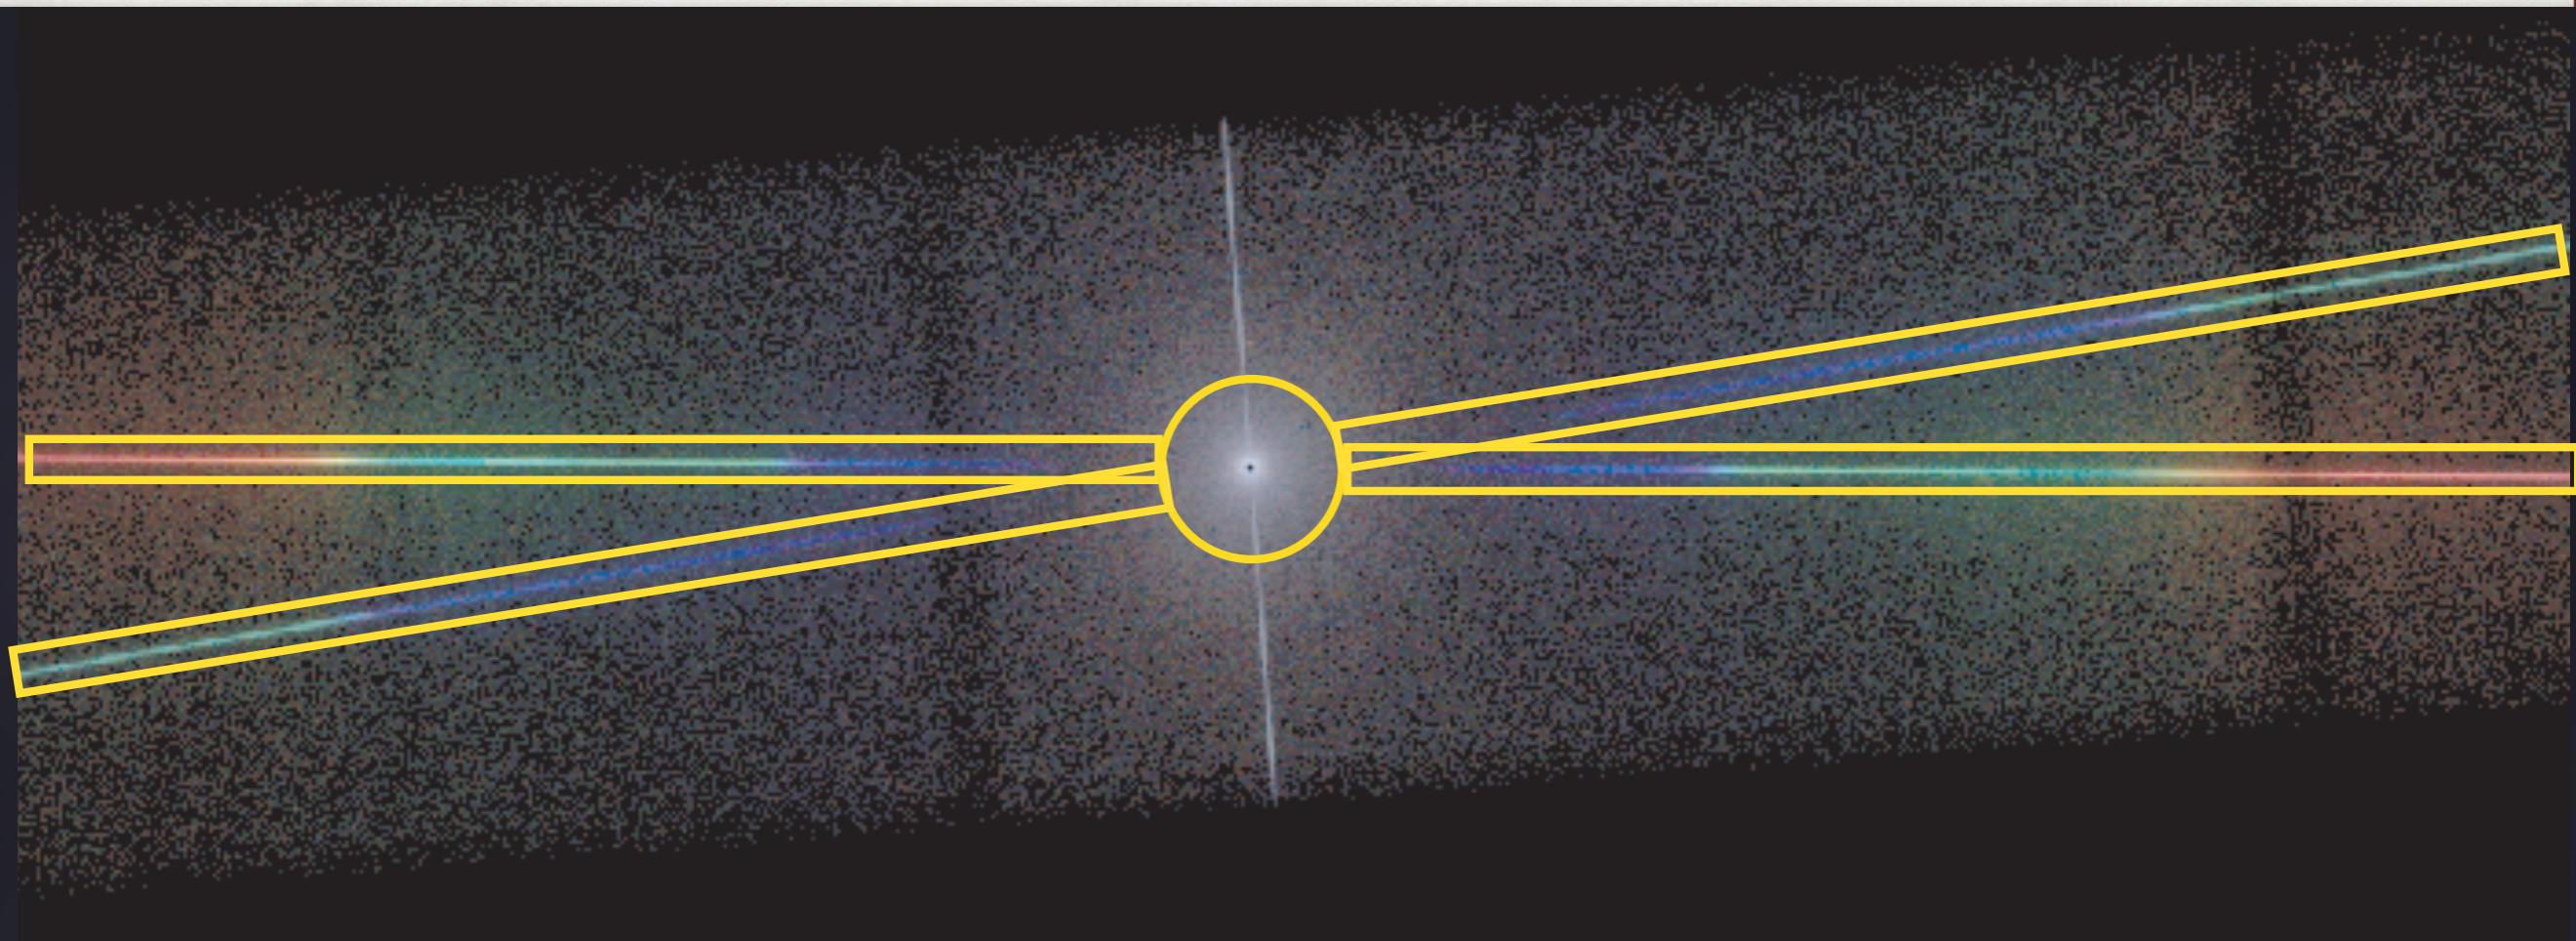

3. SOFTWARE


EXTRACT SPECTRA

- `tgextract` to make `pha2` files that can be read in and analyzed with Sherpa
 - Extraction efficiencies for adopted widths go into RMF, not ARF
- `mkgarf` to make effective area files, which includes detector spatial information (including QE uniformity, bad pixels, etc.), and the effect of dither
- `mkgrmf` to make RMFs
- XSPEC compatibility: `tgextract2` to make separate Type1 `pha` files, `tgsplit` to convert `pha2` into `pha`, `tg_bkg` to create separate background files

Bowtie extraction region in (tg_r,tg_d) for HRC-S/LETG

Cross-dispersion Axis [mm]


0.4
0.2
0
-0.2
-0.4

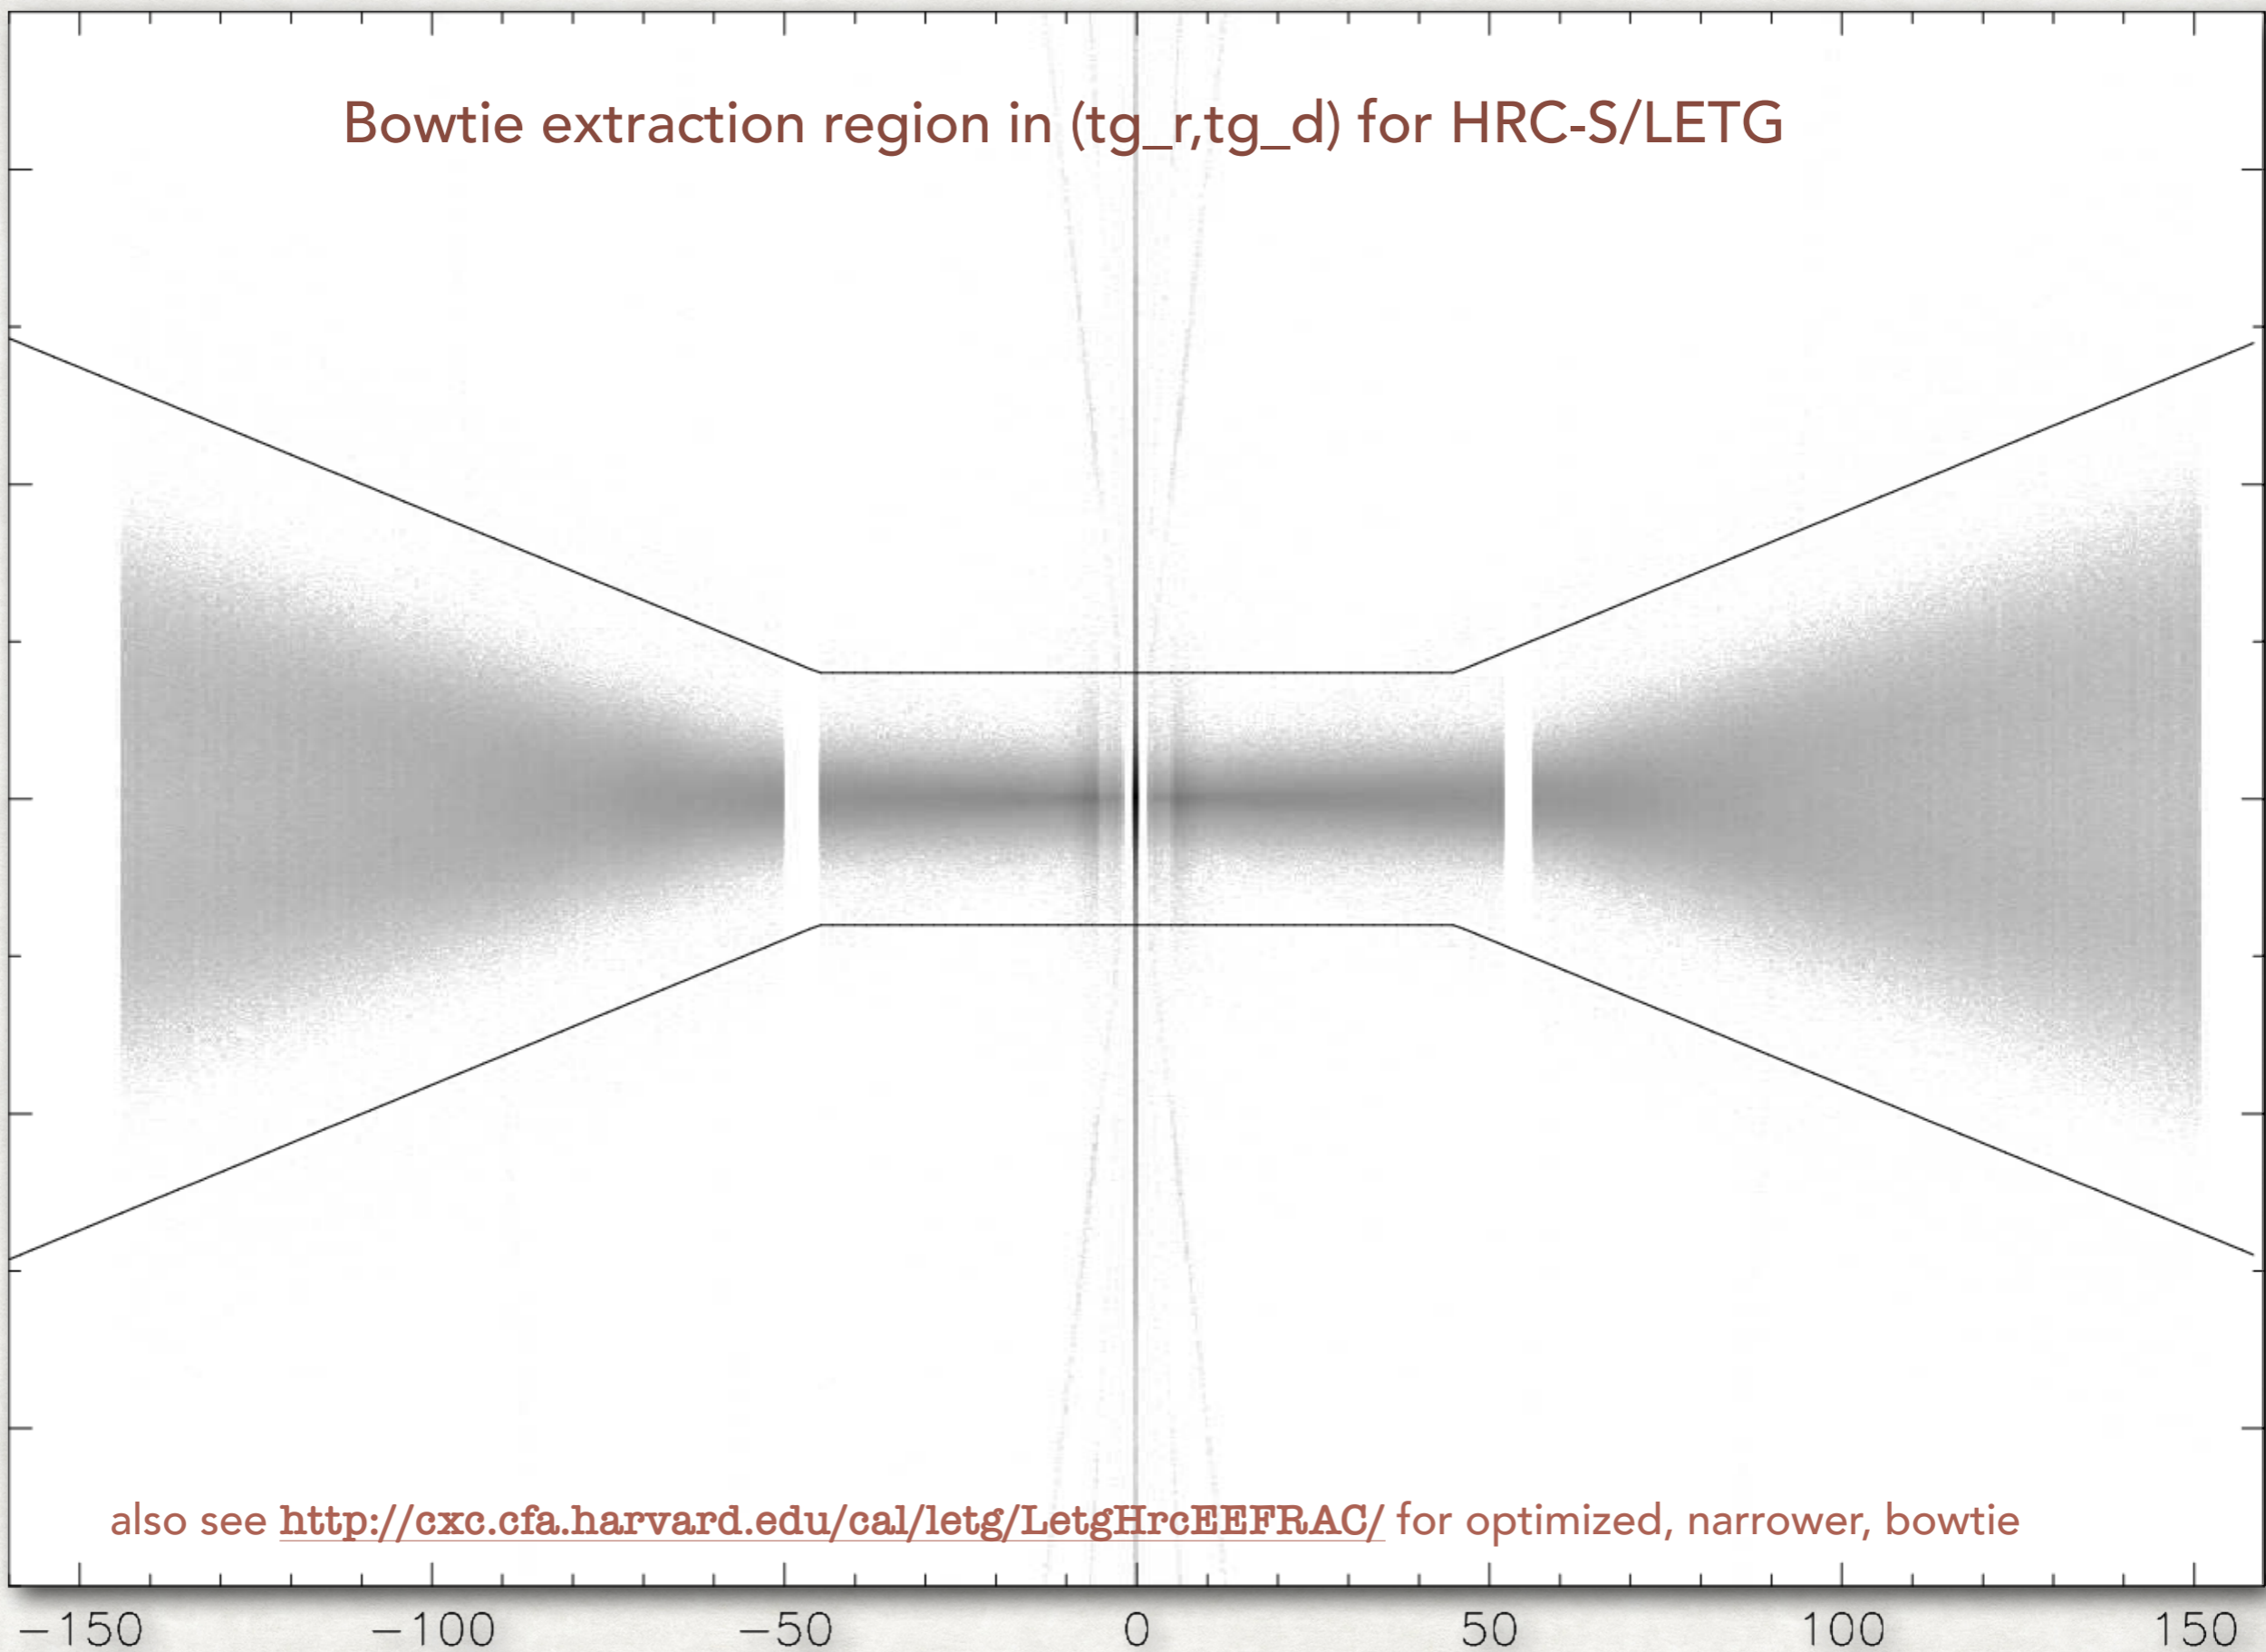


also see <http://cxc.cfa.harvard.edu/cal/letg/LetgHrcEEFRAC/> for optimized, narrower, bowtie

-150 -100 -50 0 50 100 150

Dispersion Axis [mm]

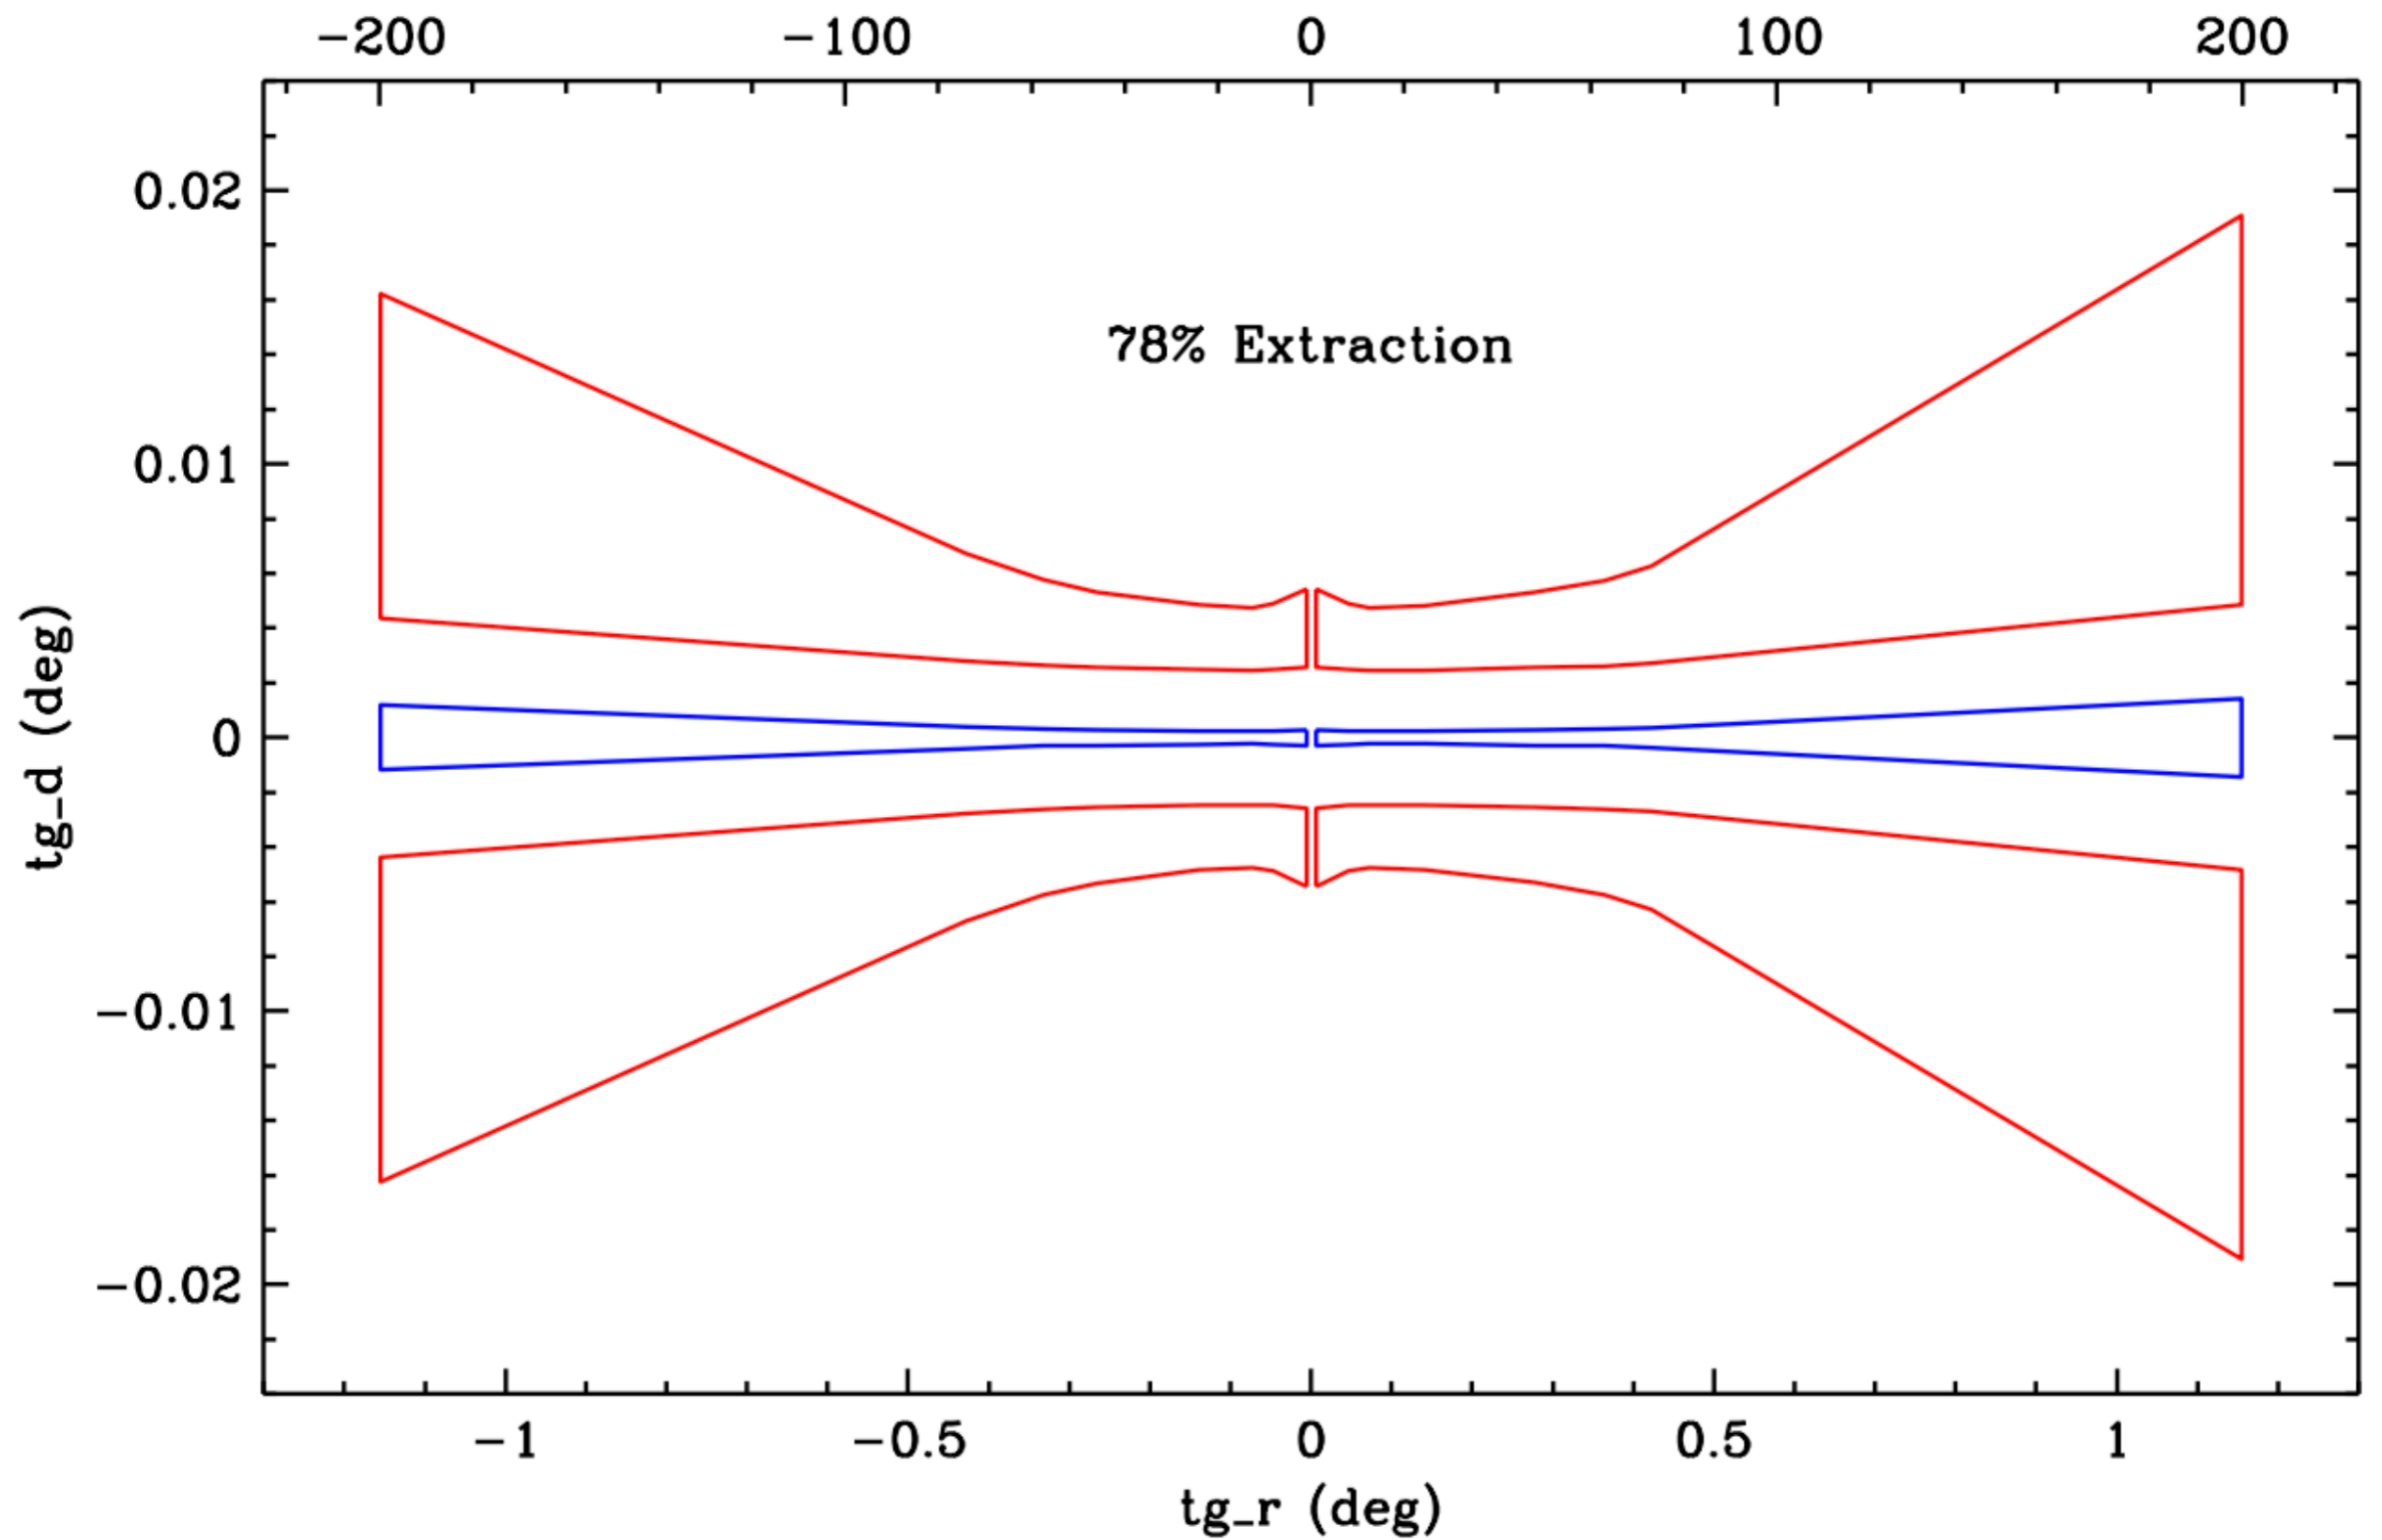

Extraction efficiencies for various half-widths [LETGS+ACIS-S]

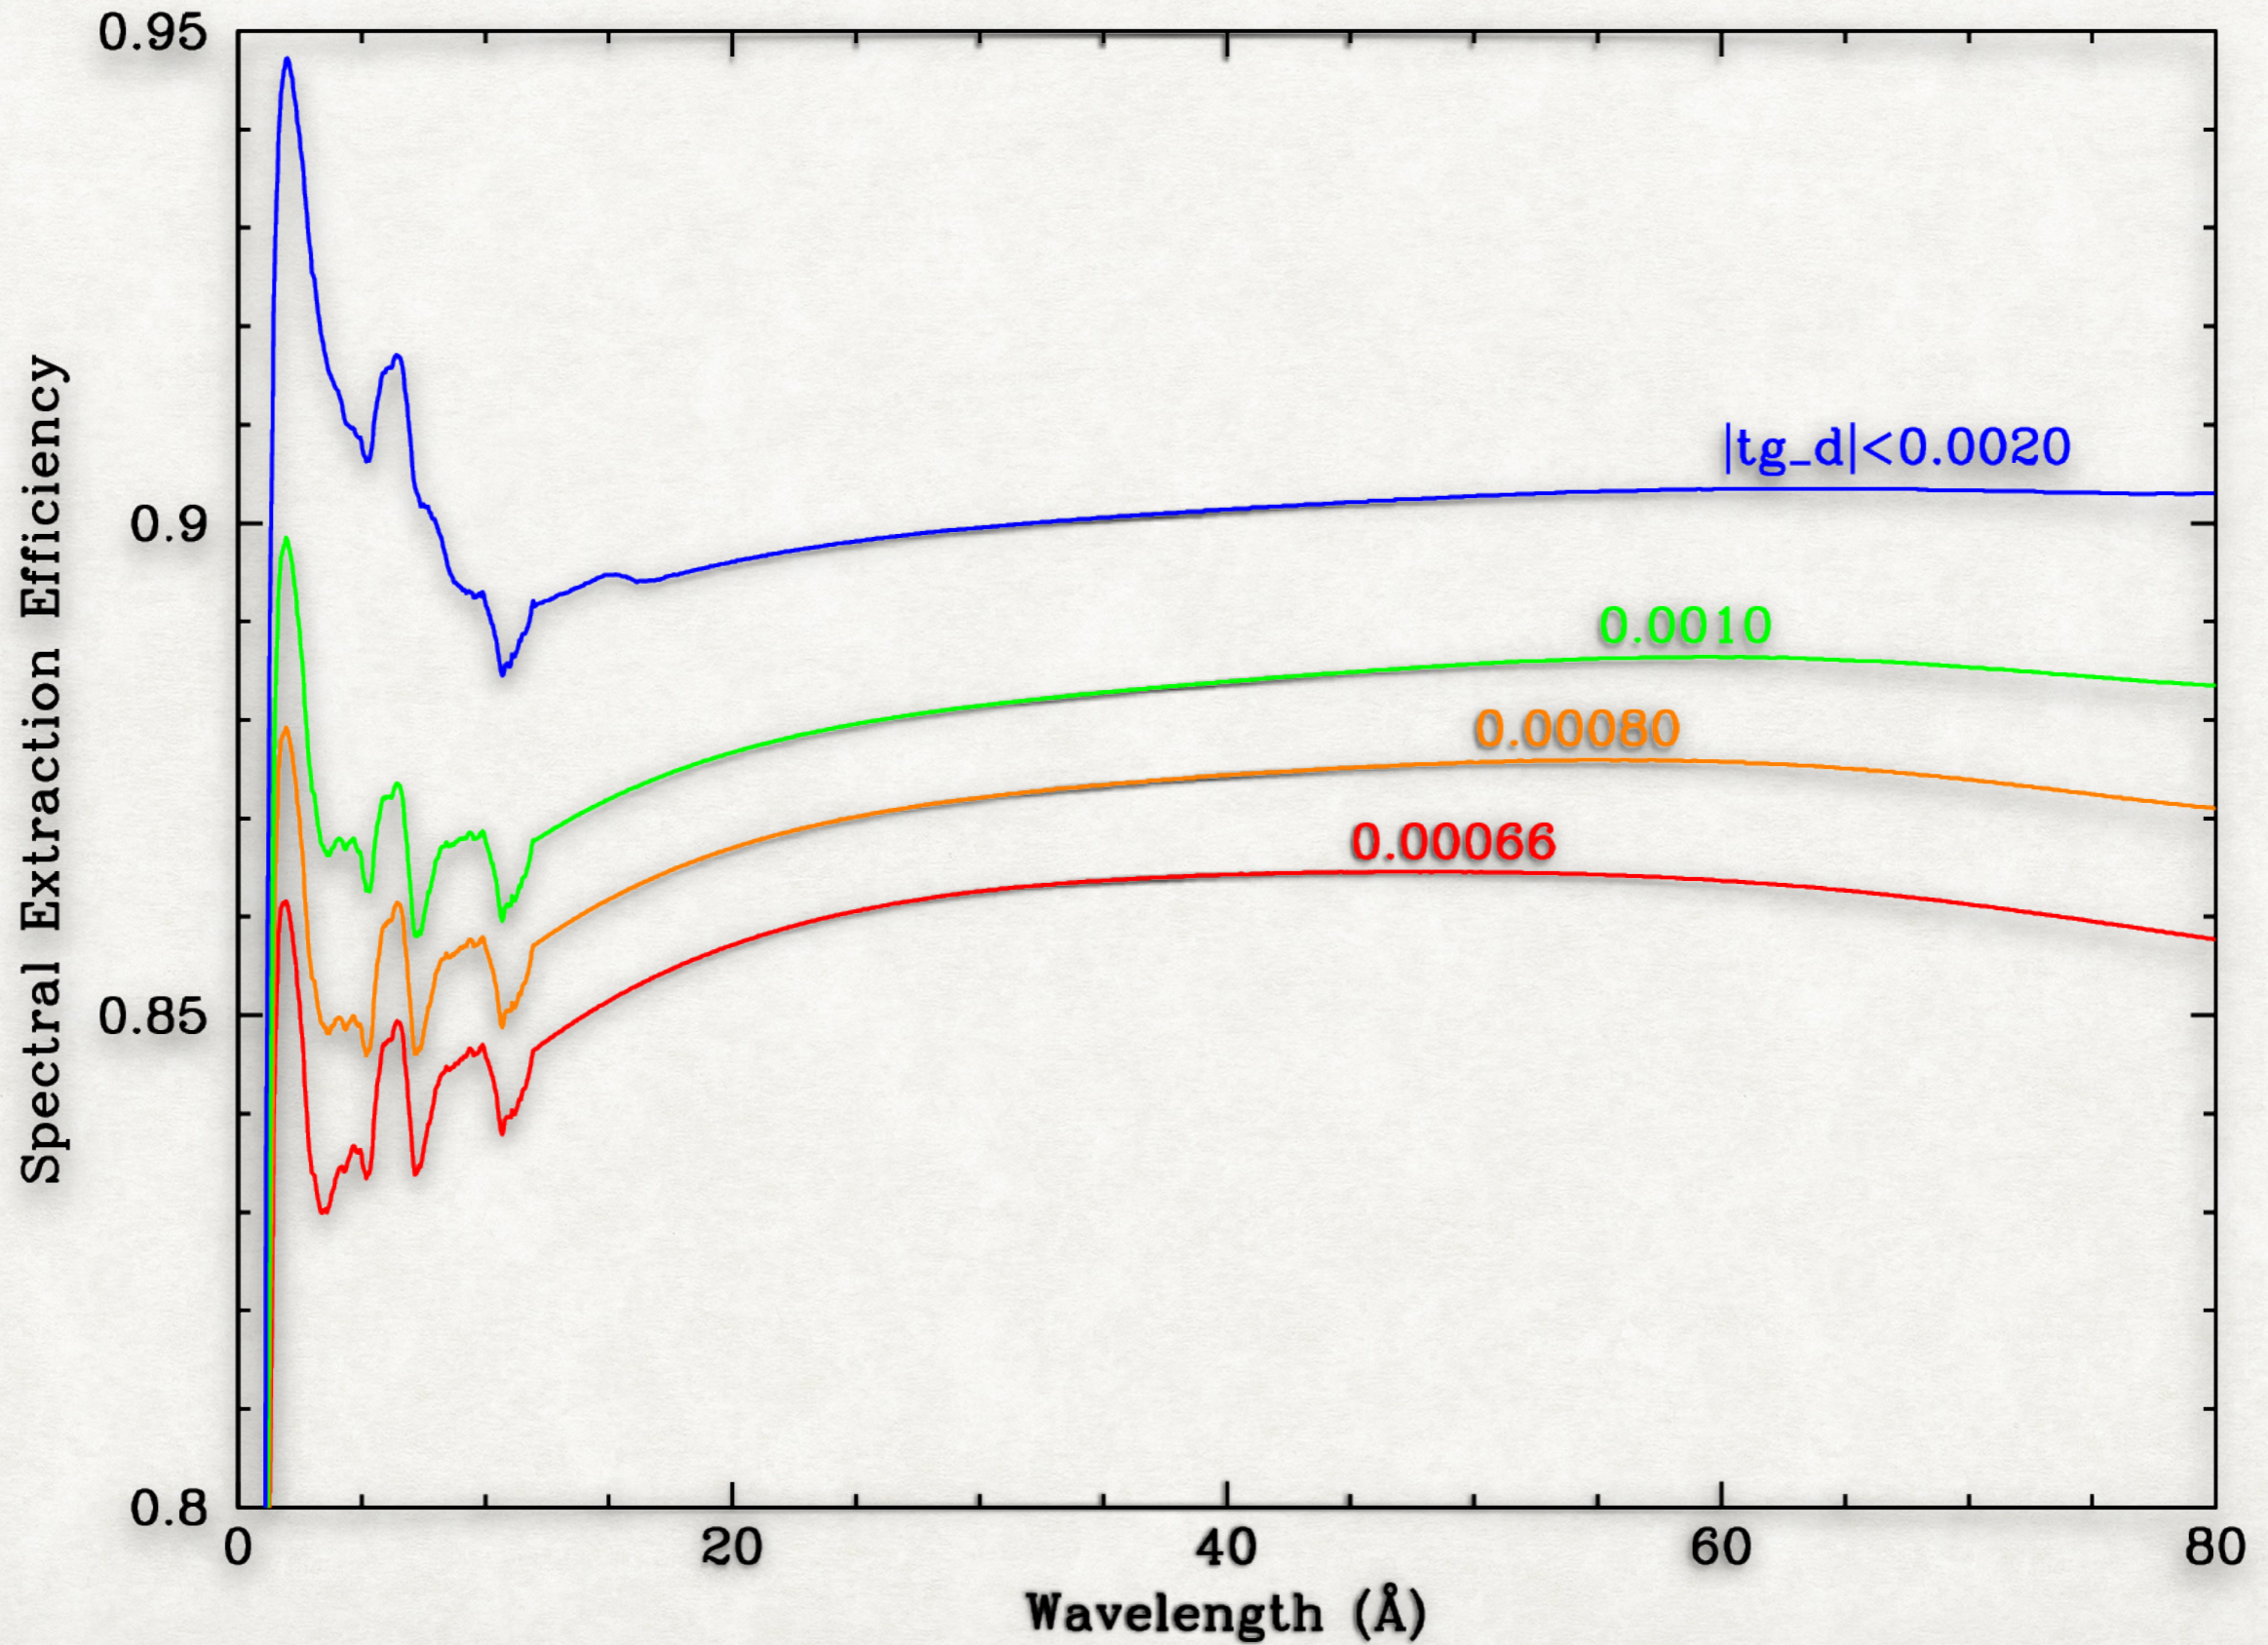

3. SOFTWARE

WATCH OUT: CONTINUOUS CLOCKING

- Image is collapsed into one dimension
- But MEG 2nd orders are suppressed, so HEG 1st order is always assumed
- Extraction width assumed to be 100%
- OSIP assumed flat ($\sim 0.8-1.3$)
- For best results, put MEG -1 and HEG $+1$ off the chip

3. SOFTWARE

WATCH OUT: EXPOSURES

- Different chips can have different exposures
- event files will have the mean exposure of all the chips
- Effective Area files will have the mean exposure of the chips associated with that detector
- Be careful when making light curves!

3. SOFTWARE VARIABLES

- Arrays of interest in evt1a/evt2
 - `tg_r`, `tg_mlam`, `tg_lam` — coordinates along dispersion axis
 - `tg_d` — coordinate along cross-dispersion axis
 - `tg_part`, `tg_m` — marker for grating type and order
- Arrays of interest in pha2
 - `tg_part`, `tg_m` — marker for grating type and order
 - `tg_srcid` — source identifier
 - `bin_lo`, `bin_hi` — wavelength grid
 - `counts` — counts from source area
 - `background_up`, `background_down` — counts from background areas (look for header keywords `BACKSCUP` and `BACKSCDN`)


3. SOFTWARE COMPLICATIONS

- No more global fits because most models are just not good enough
- pileup on ACIS, background in HRC can become important
- Chip and plate gaps, and mismatches between Rowland circle and detector plane require careful observation setups
- HETGS+HRC-I not yet supported in CIAO
- evolving calibration: contamination on ACIS, degap and gain drop on HRC


4. ANALYSIS

HIGH-RESOLUTION SPECTRA

Capella ACIS-S/LEG [119 ks]

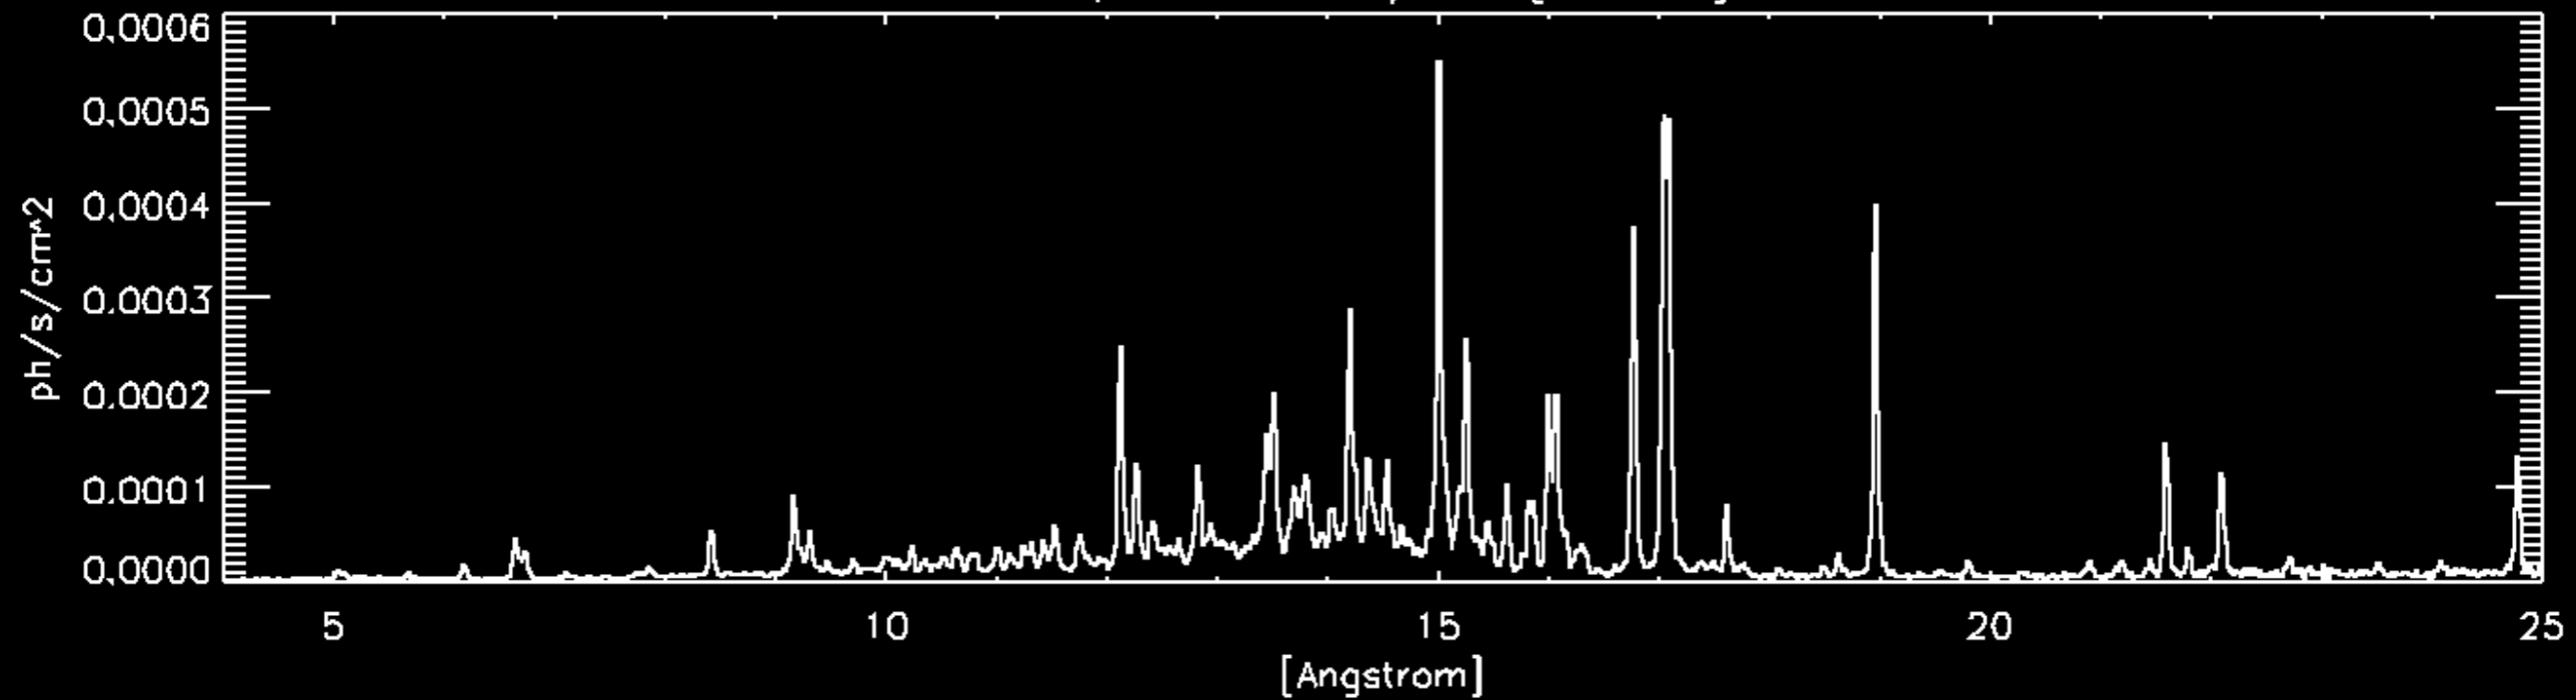


Capella HRC-S/LEG [607 ks]

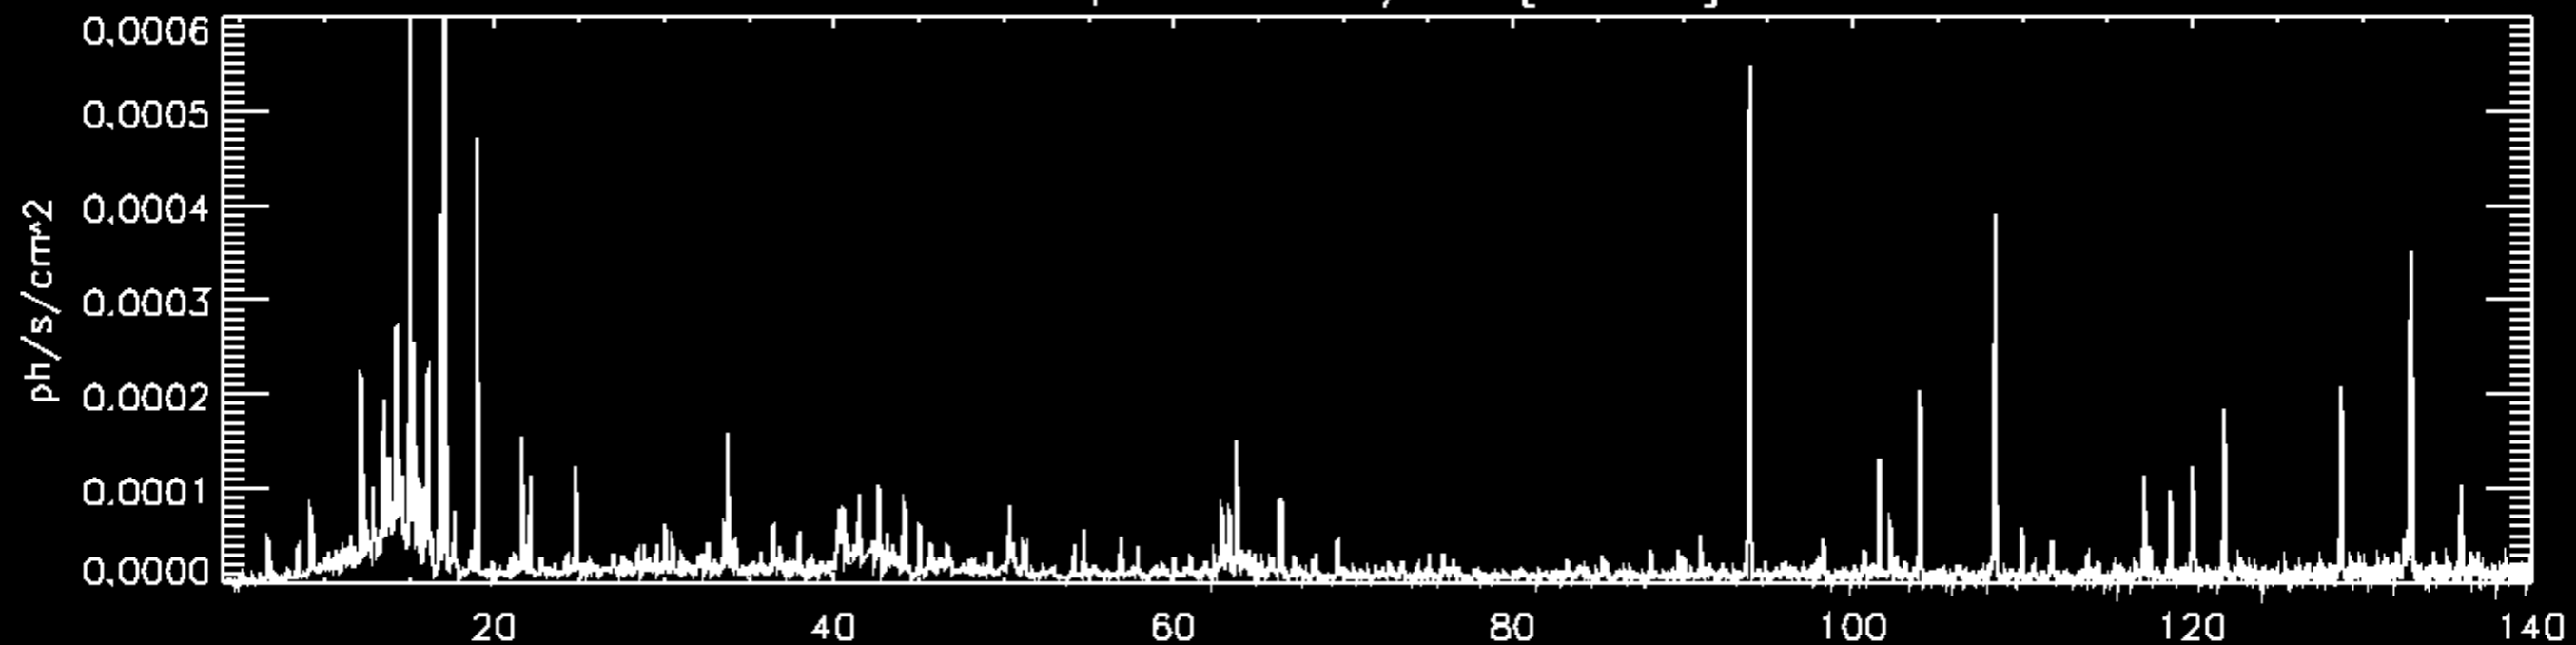


4. ANALYSIS

WHAT CAN YOU DO?

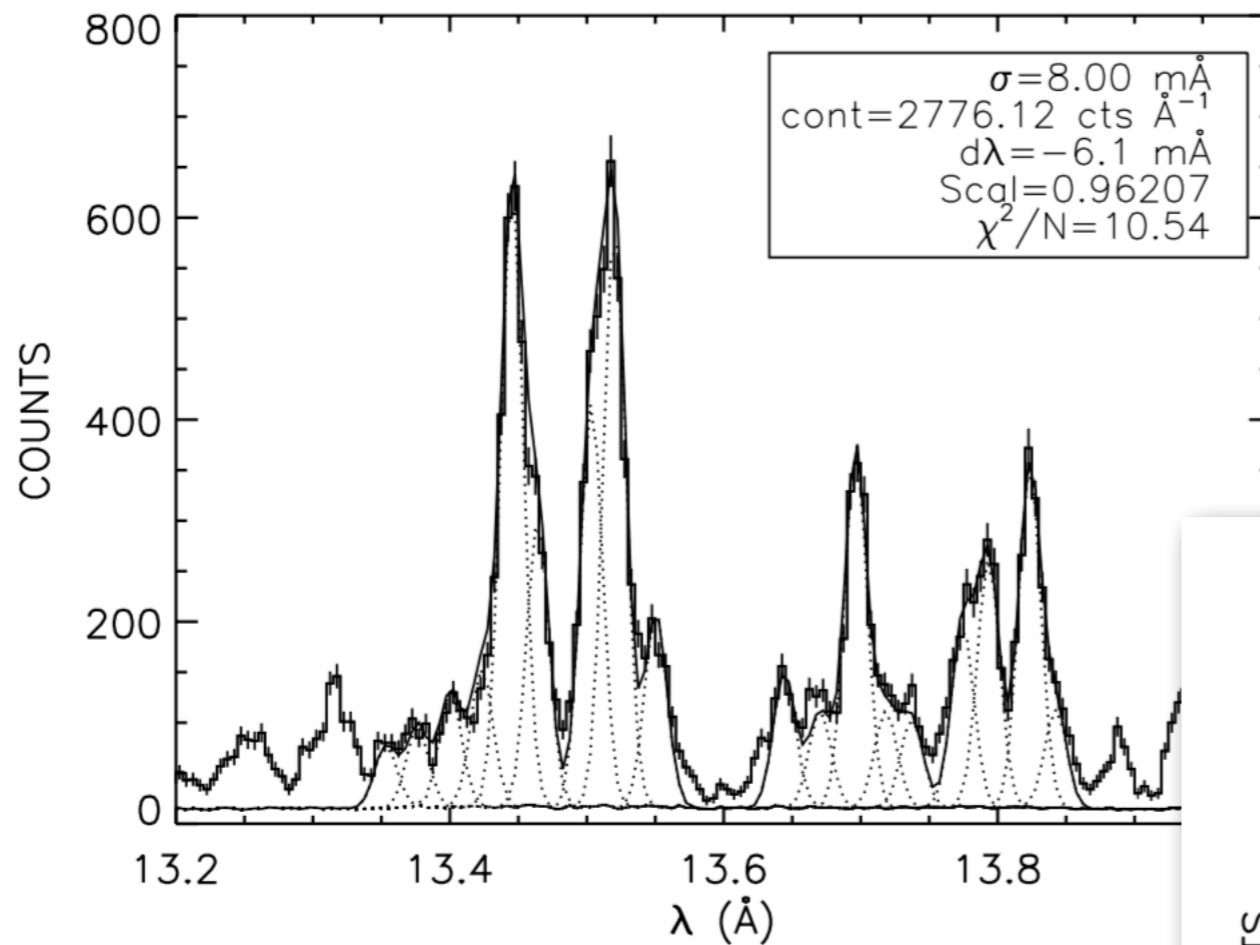

Ness et al. 2002, A&A, 394, 911

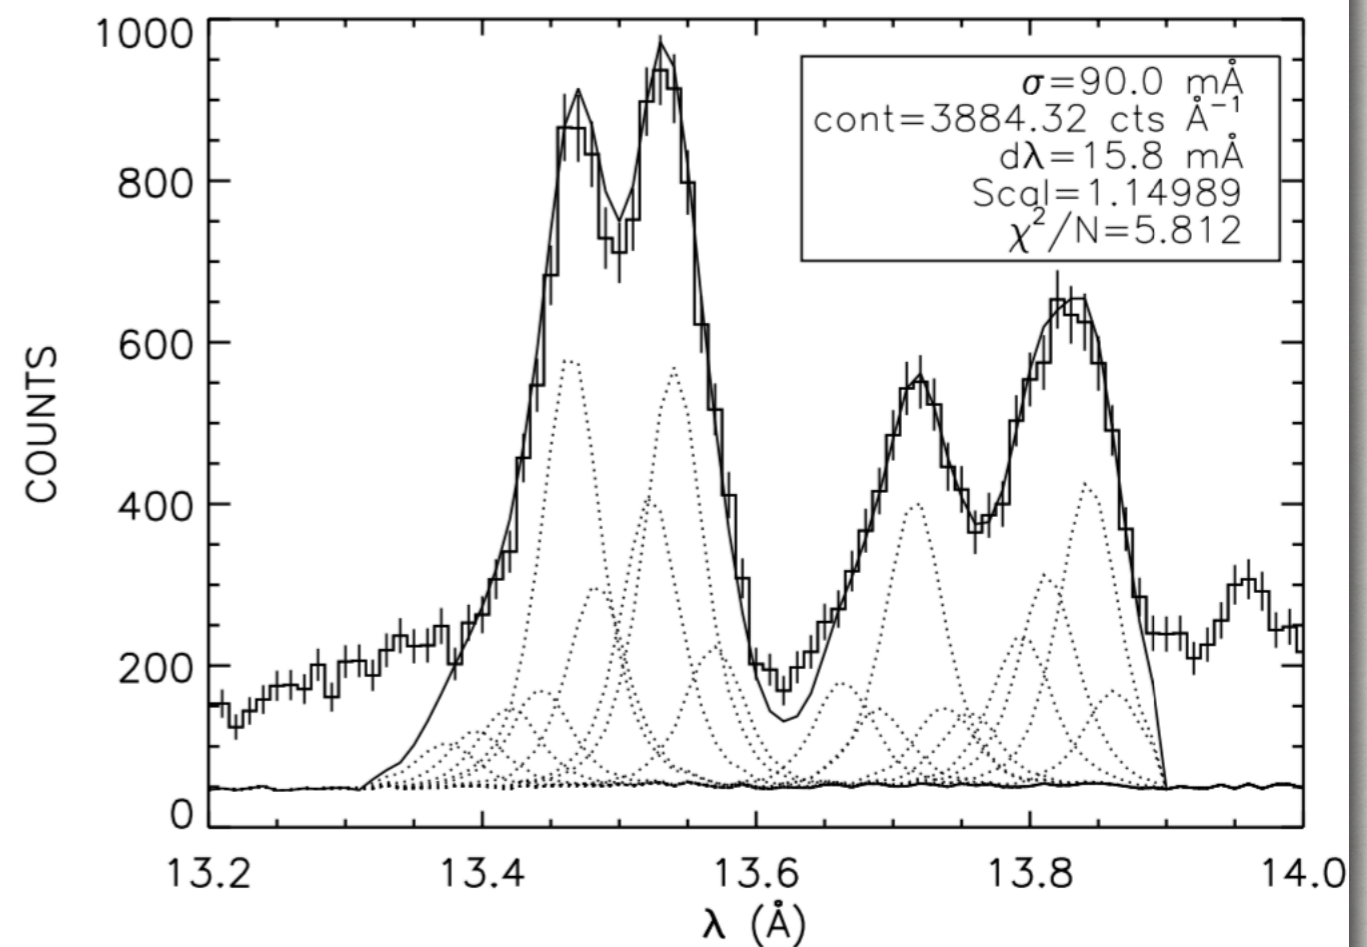

HEG model of density sensitive
Ne IX triplet (contaminated by Fe)
overlaid on
MEG (top) and LEG (right)

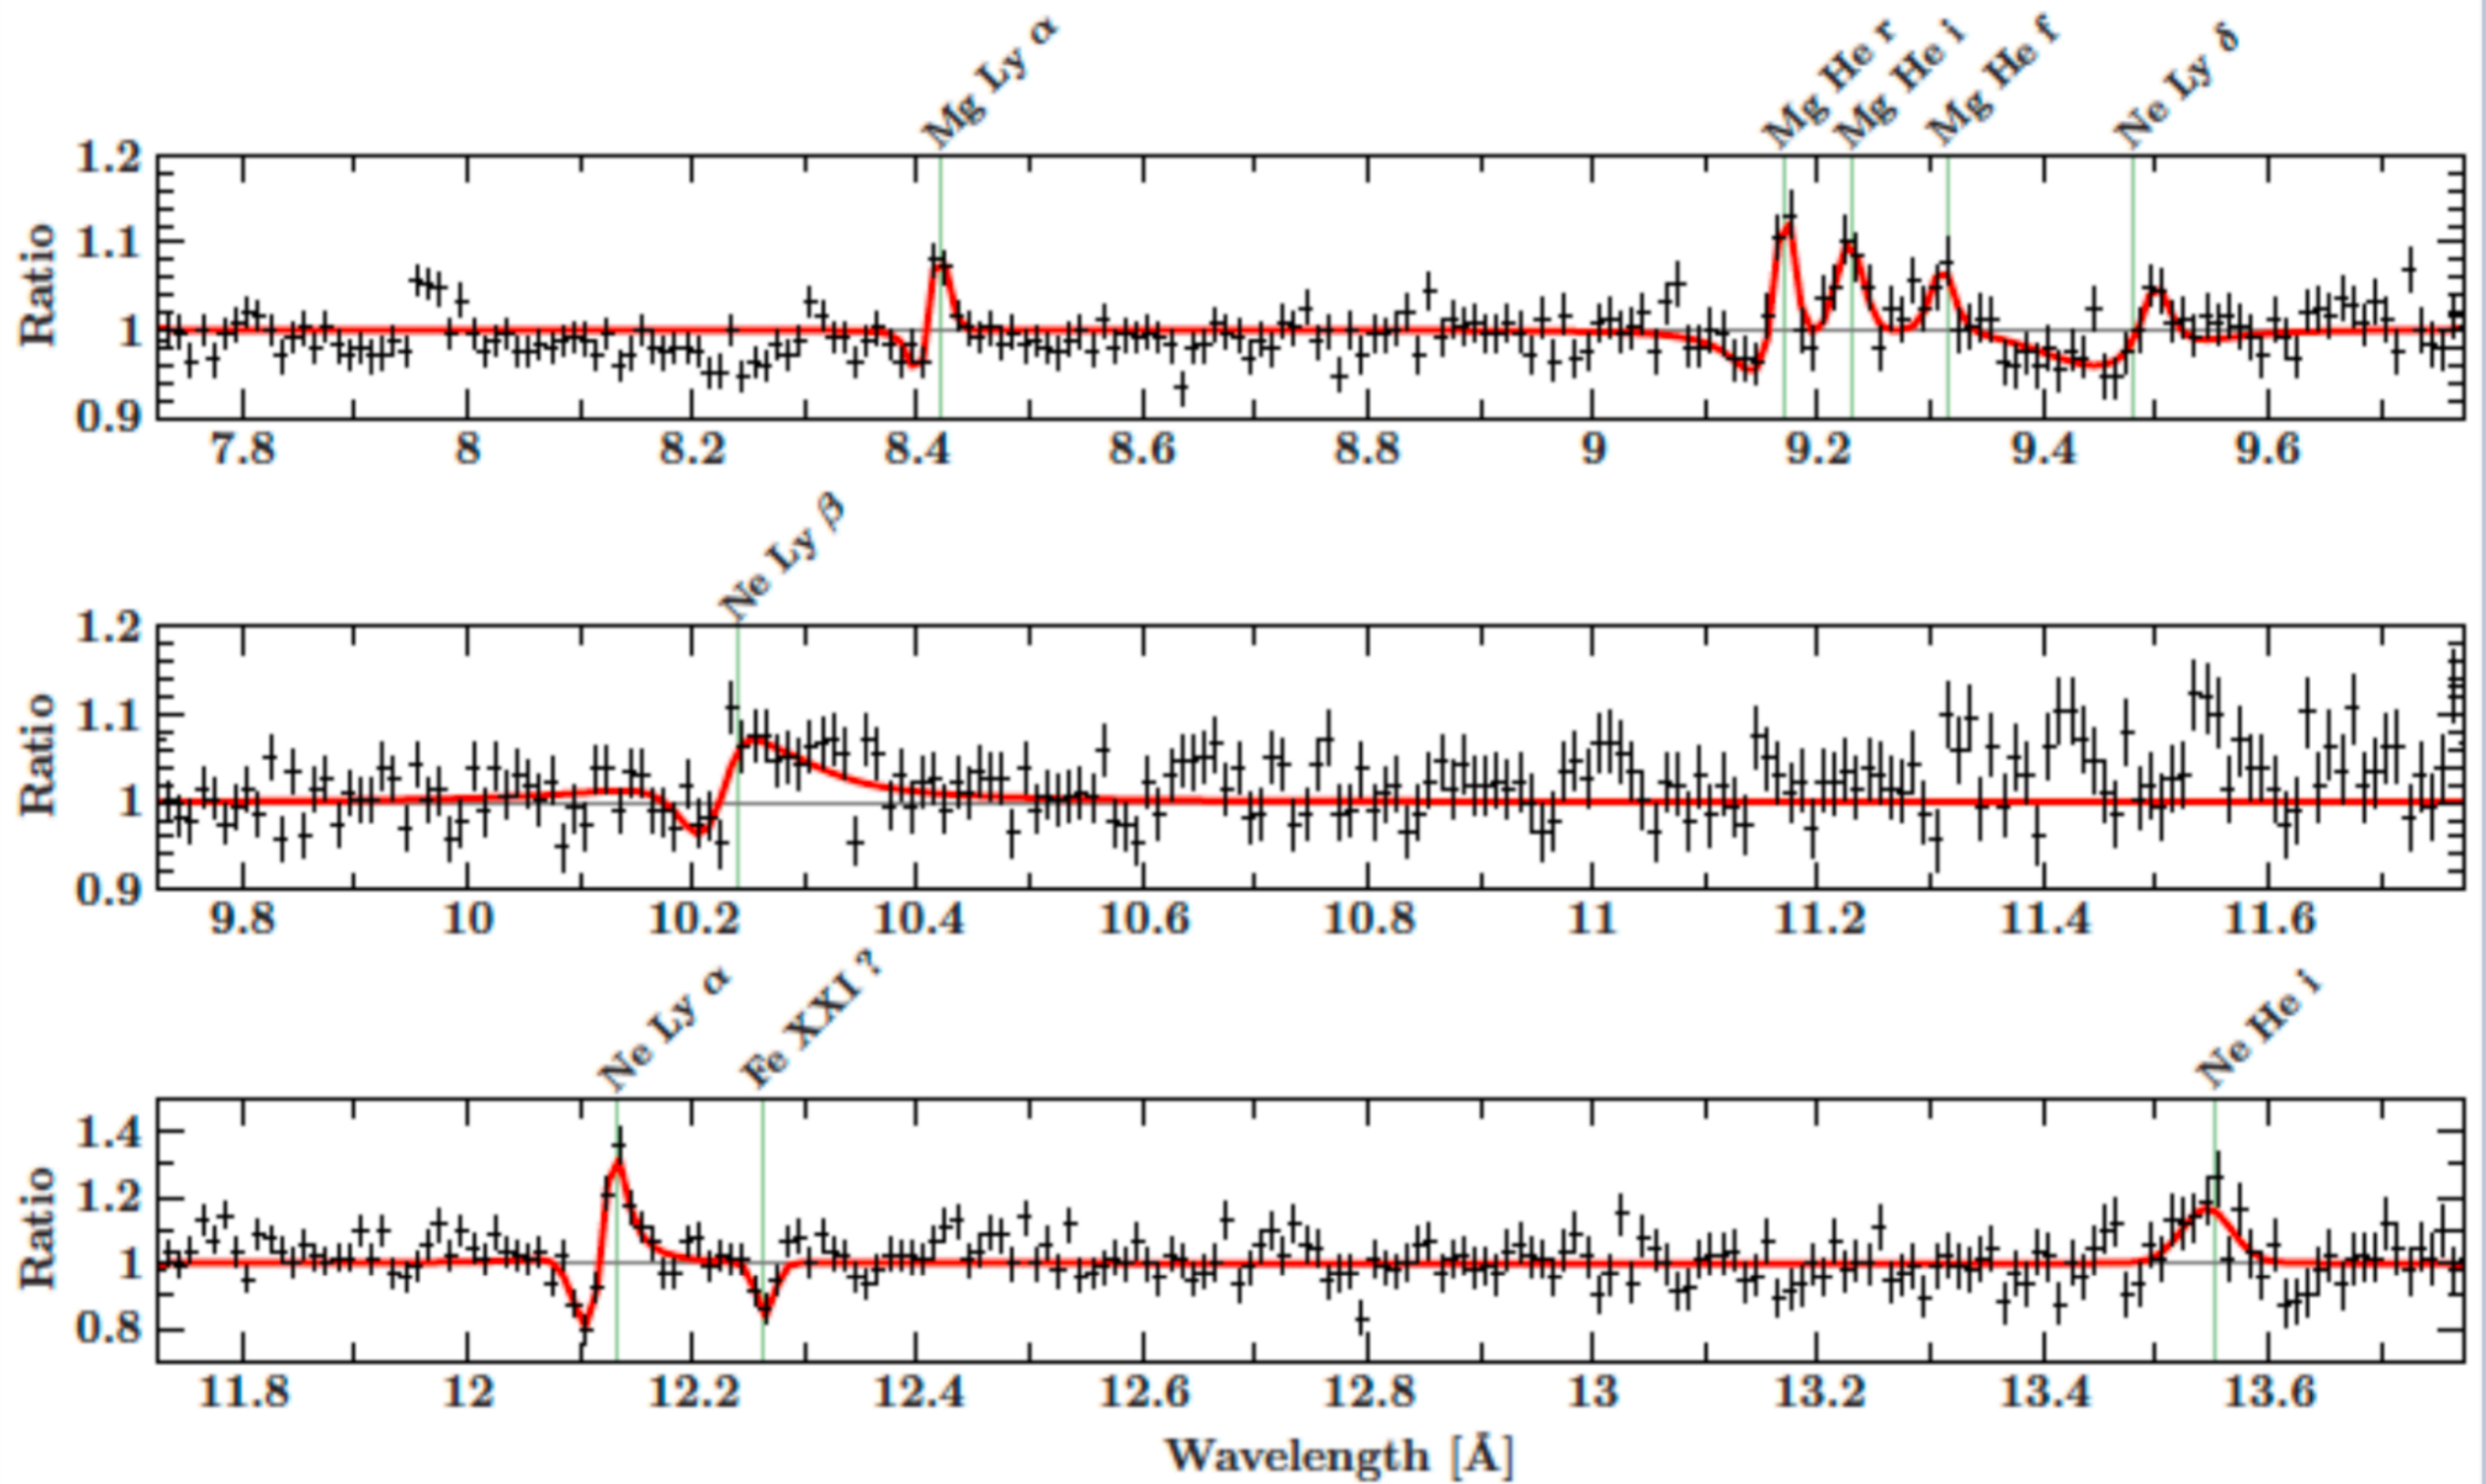


Figure 5: A portion of the HETGS spectrum of Cyg X-1 from ObsID 11044 (Miškovičová et al (2016, [11])). The data were divided by a model consisting of a power law absorbed by cold gas. Several lines show P Cygni profiles, such as Mg Ly α , Ne Ly α , and even Ne Ly β . The observation is from inferior conjunction, where the disk wind is observed most clearly. Components of He-like Mg XI are readily discerned, providing density diagnostics.

Supernova remnants observed with HETGS

MIT/CSR

N103B

Si XIII

O VIII

MEG

Si XIII

HEG

E0102

Ne X

O VIII

Ne X

N132D

Si XIII

O VIII

Si XIII

Cas A (Si energy range filtered)




MEG 1st

MEG 3rd

zeroth order

HEG 1st

HEG 2nd

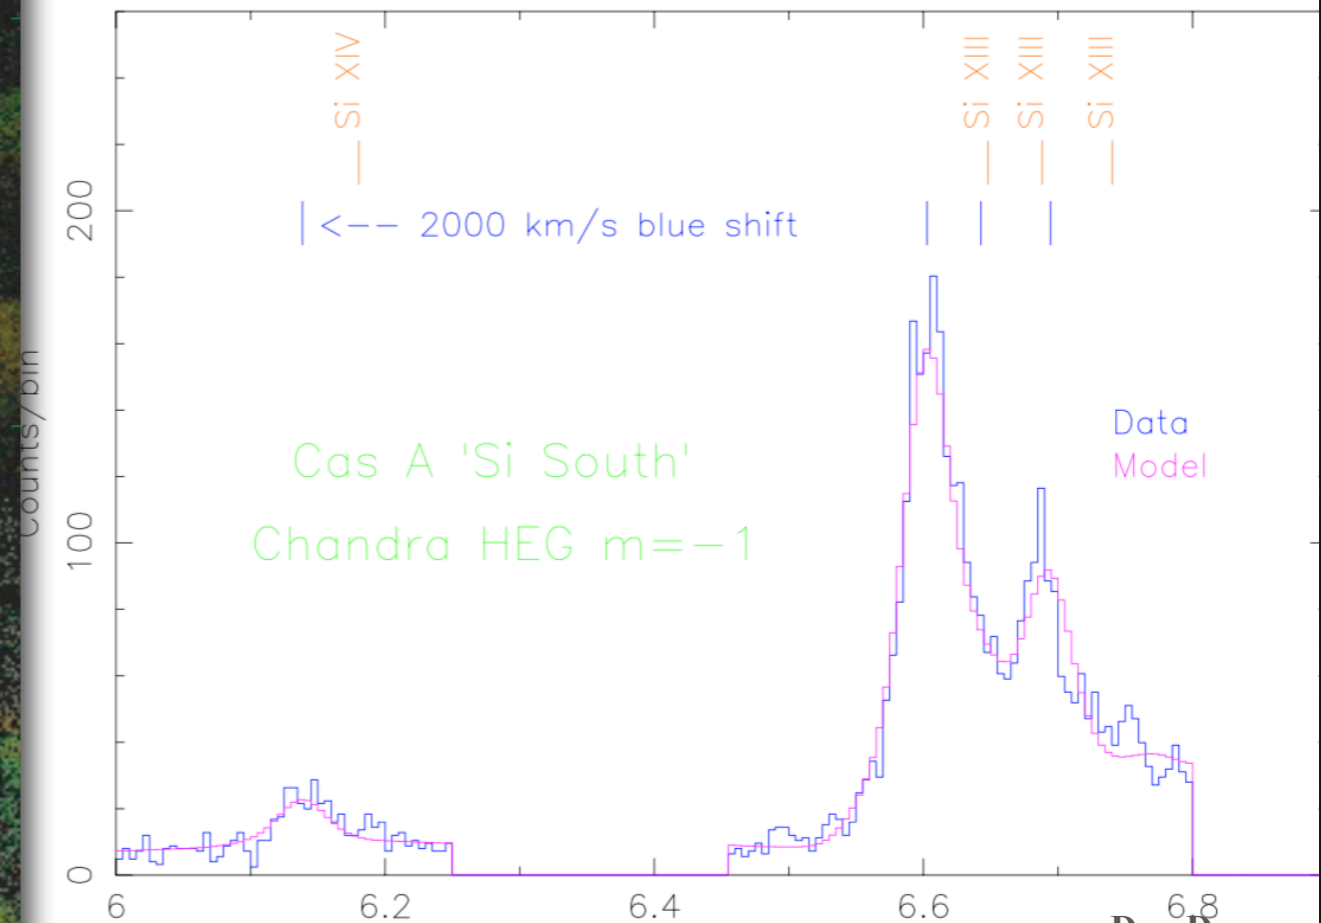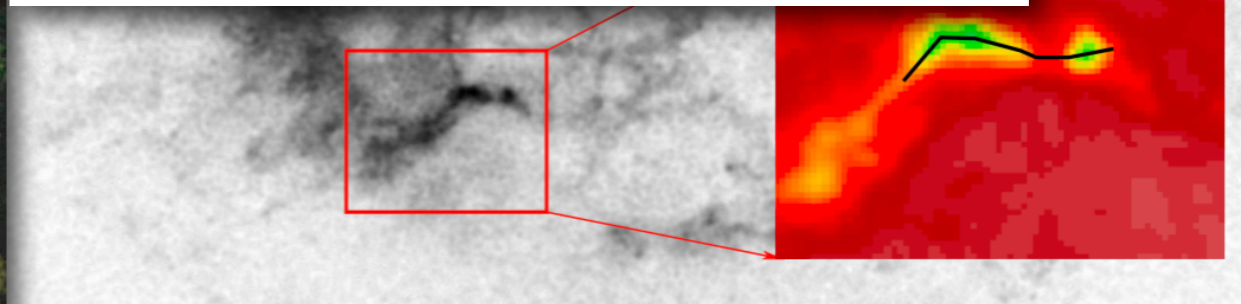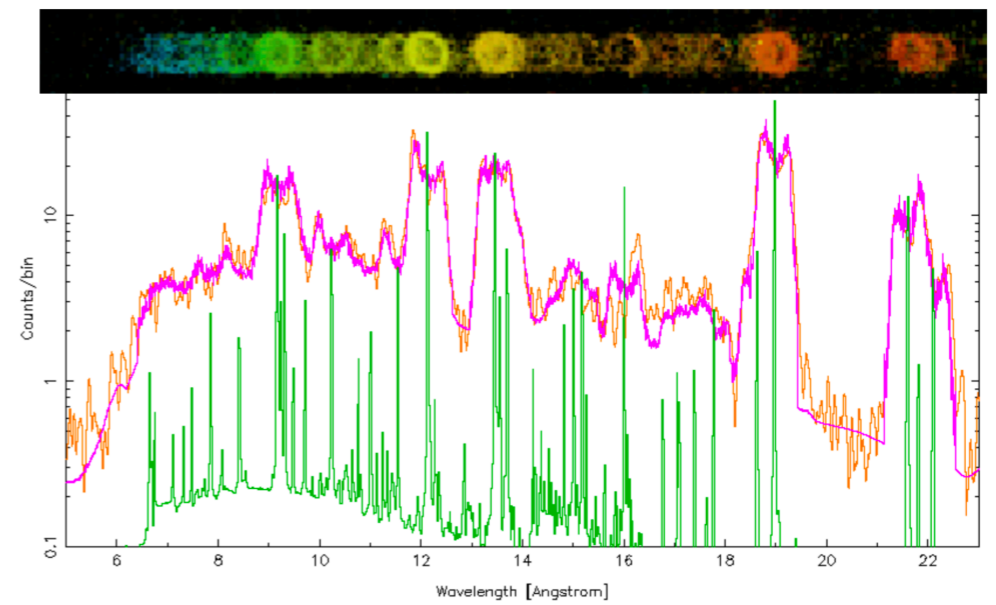

Dan Dewey

http://www.mssl.ucl.ac.uk/gbr/rgs_workshop/papers/dewey_d.ps

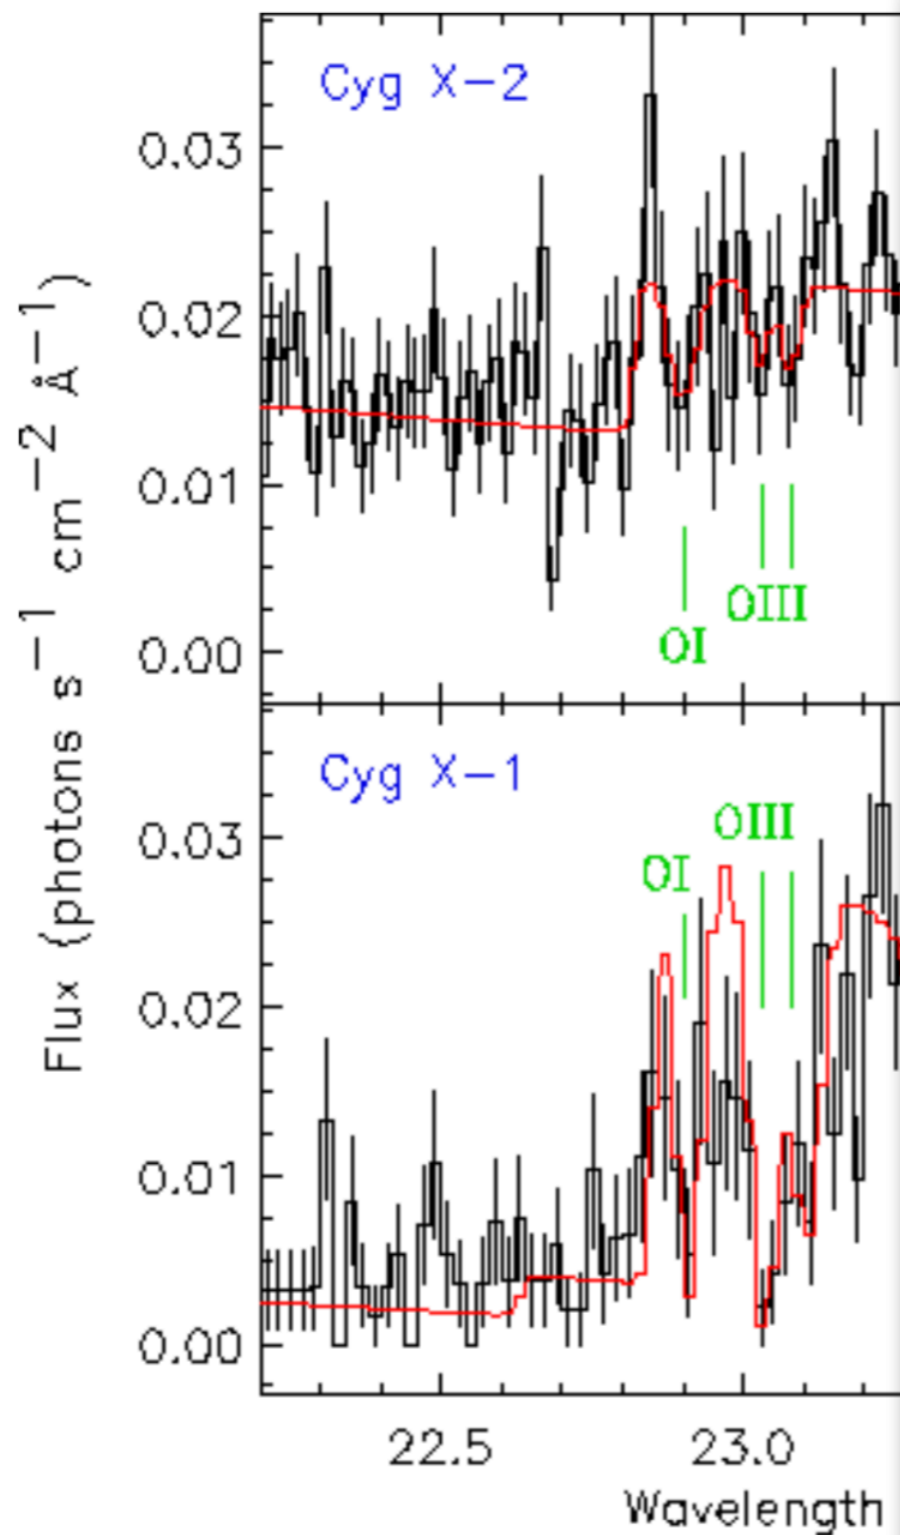


FIGURE 11: The bright continuum radii shows the imprint of the ISM along the line of sight. The absorption features seen in MEG spectra from neutral oxygen and doubly ionized oxygen, O II and O III in the range shown is roughly 0.558 keV to 0.57 keV. From Juett, Schulz, and Chakrabarty (2004).

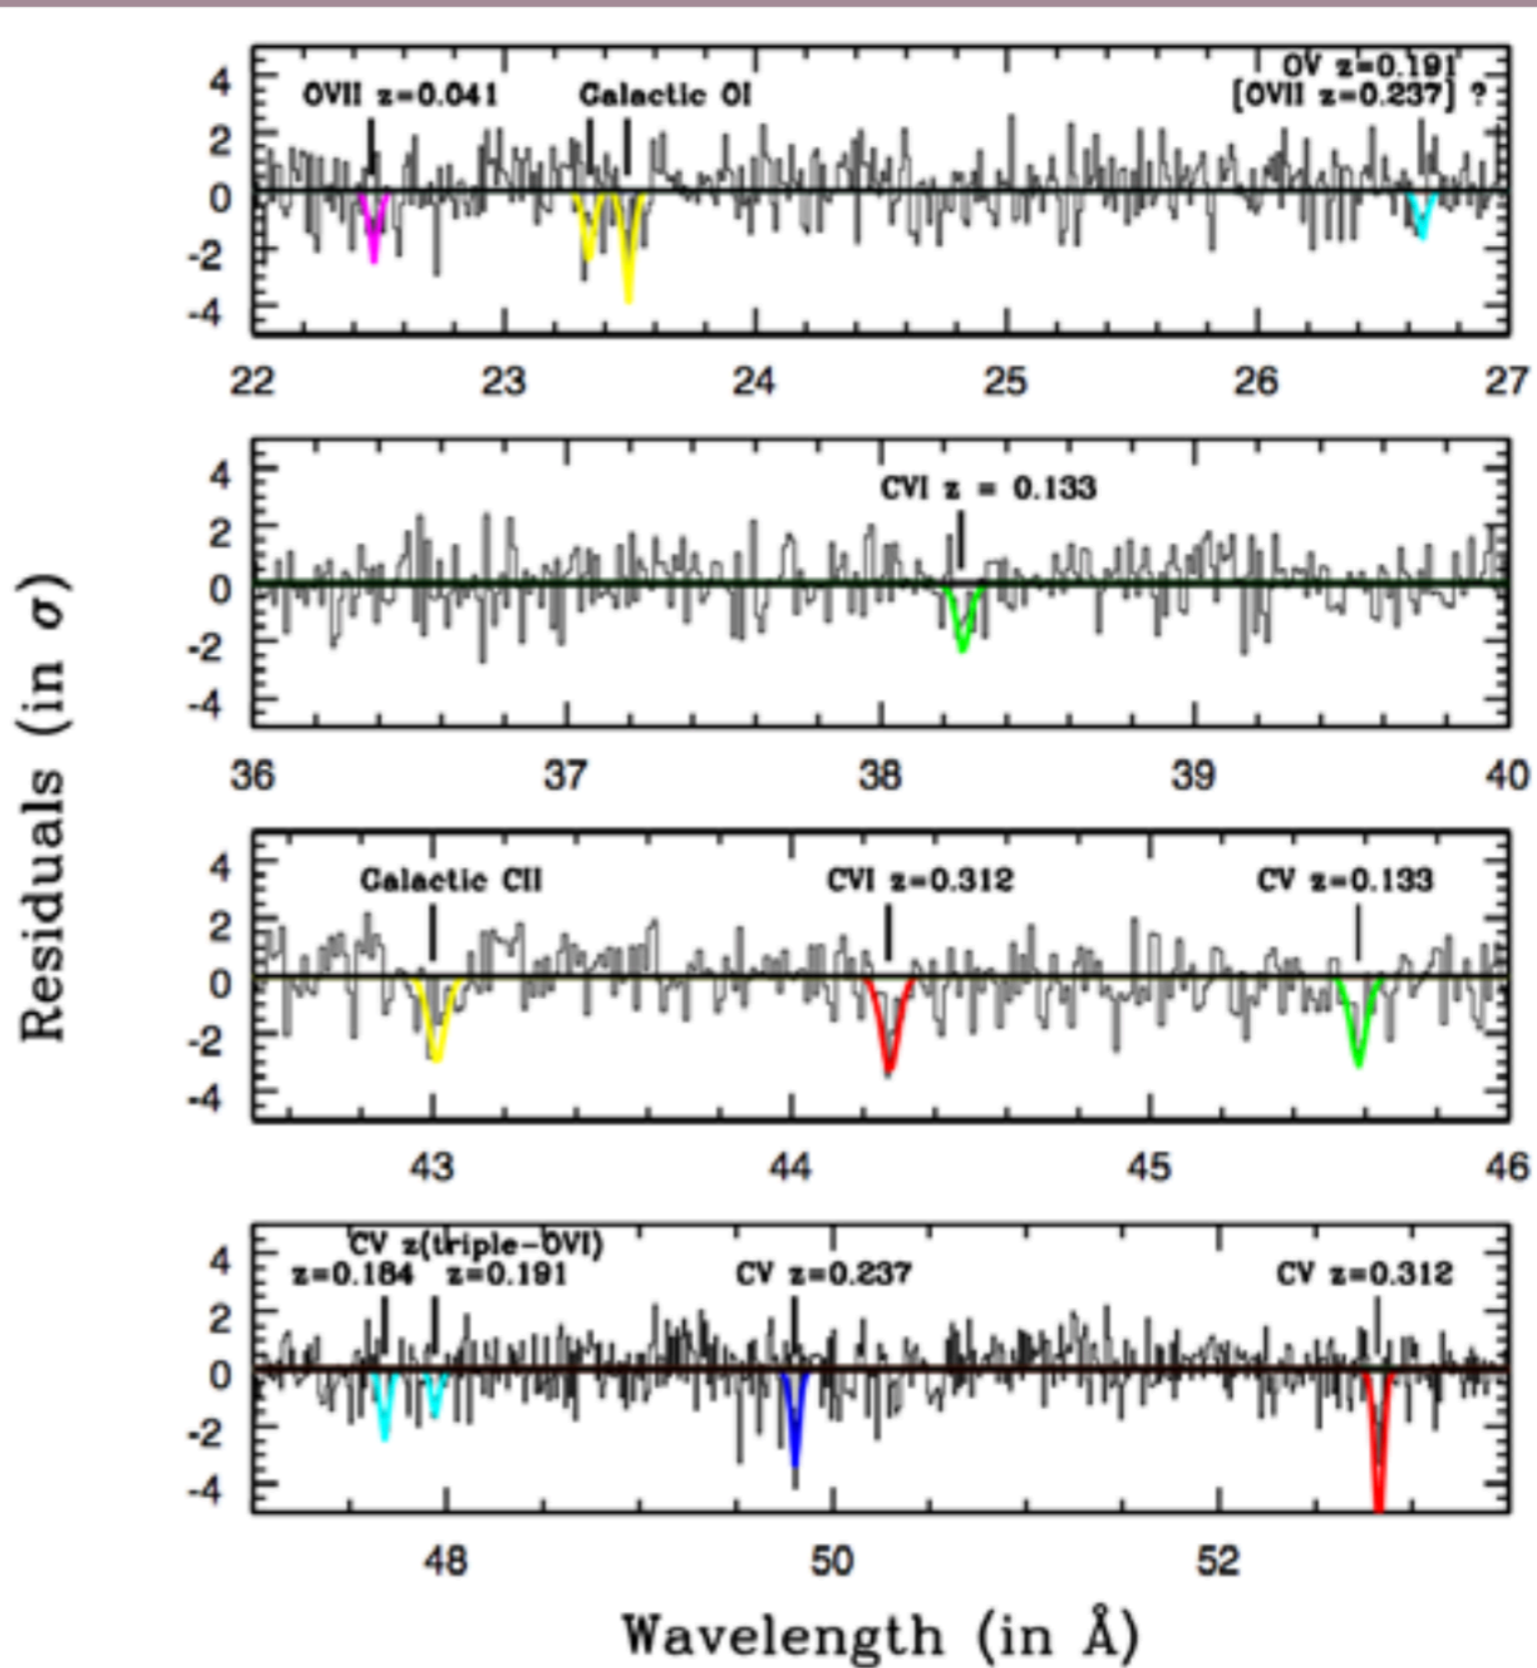


Fig. 2 — Residuals from a fit of the 500 ks LETG+HRC-S spectrum of the blazar 1ES 1553+113 to a continuum model. Galactic O I and C II are detected, as well as lines due to C V and C VI in different filaments of the WHIM. From Nicastro et al. (2013).

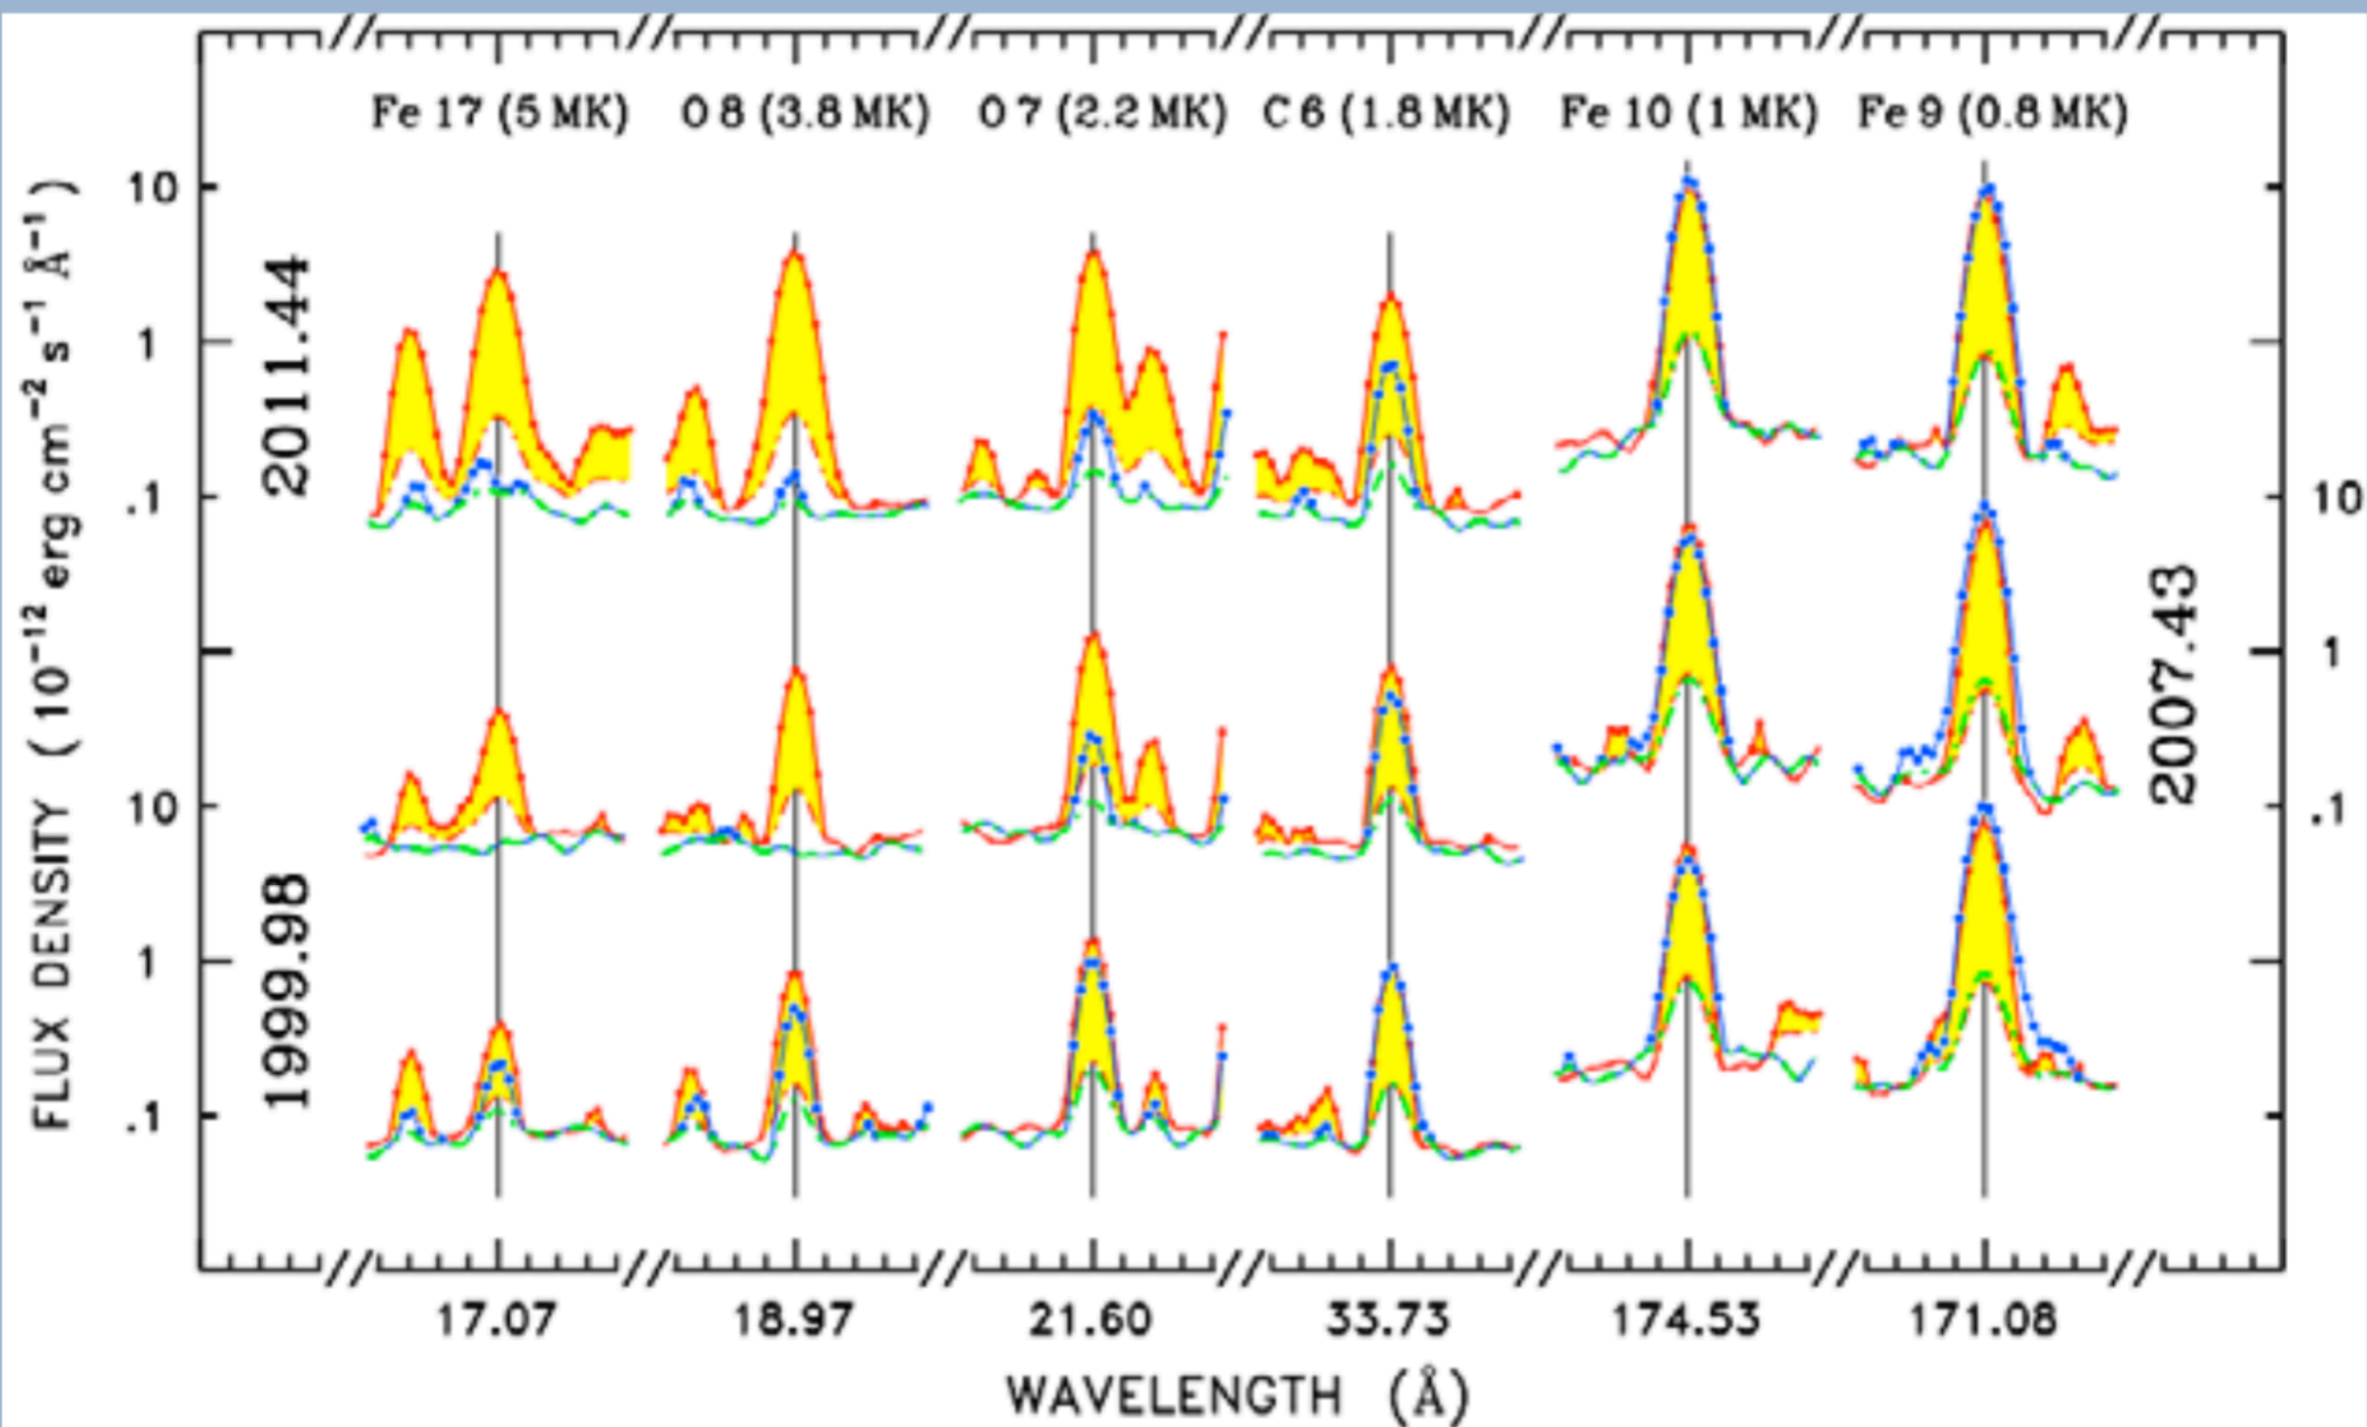


Fig. 3 — Spectra of selected lines from LETGS observations of α Cen A. The use of strong primary colors is designed to separate out behavior of the K star (shaded yellow and red dots) from that of the G star (blue dots). Delicate pastels indicate 1σ photometric errors for B in orange and A in green. Approximate line formation temperatures are listed. Note the dramatic differences between the two stars at the shortest wavelengths ($< 20 \text{ \AA}$) compared to the rather similar fluxes at the longest wavelengths ($> 170 \text{ \AA}$). From Ayres (2014).

4. ANALYSIS

RESOURCES

- Chandra Proposers' Observatory Guide
 - HETG (Chapter 8) <http://cxc.harvard.edu/proposer/POG/html/chap8.html>
 - LETG (Chapter 9) <http://cxc.harvard.edu/proposer/POG/html/chap9.html>
- Chandra Cal Pages
 - HETG — https://space.mit.edu/CXC/calib/hetg_user.html
 - LETG — http://cxc.harvard.edu/cal/letg/detailed_info.html
- CIAO Science Analysis Threads — <http://cxc.harvard.edu/ciao/threads/gspec.html>
- Sherpa Threads — <http://cxc.harvard.edu/sherpa/threads/fitting.html>
- D. Huenemoerder's Analysis Guide — <https://space.mit.edu/ASC/analysis/AGfCHRS/AGfCHRS.html>
- TGCAT — <http://tgcat.mit.edu>